

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ikea](#) /
- › [Ikea SONGESAND Wardrobe 120x60x191 cm User Manual](#)

## Ikea SONGESAND

# Ikea SONGESAND Wardrobe User Manual

Model: SONGESAND | Dimensions: 120x60x191 cm

## 1. INTRODUCTION

---

This manual provides essential information for the assembly, safe use, and maintenance of your Ikea SONGESAND Wardrobe. Please read these instructions carefully before beginning assembly or using the product.



Image 1.1: The Ikea SONGESAND Wardrobe with its doors closed, showcasing its white finish and classic design.

The SONGESAND Wardrobe is designed to provide versatile storage solutions for your home. It features a classic design with panelled doors, including one with an integrated mirror, and offers customizable interior organization with adjustable shelves and clothes rails.

## 2. IMPORTANT SAFETY INFORMATION

---

### **WARNING! TIPPING HAZARD**

- Unanchored furniture can tip over, causing serious or fatal crushing injuries.
- To prevent tipping, this furniture **must be permanently anchored to the wall** using the enclosed safety fitting.
- Different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home, sold separately. Consult a professional if you are unsure about the appropriate fixing devices for your wall type.
- Always follow the wall anchoring instructions provided.

Keep all small parts and packaging materials away from children and pets to prevent choking hazards.

### 3. PACKAGE CONTENTS

---

The Ikea SONGESAND Wardrobe is delivered in **four separate packages**. Ensure all packages are received before beginning assembly.

The complete product includes:

- Wardrobe panels (top, side, bottom, partition, back, plinth)
- Door frames and door panels (including one with mirror)
- 3 adjustable shelves
- 2 clothes rails (one small, one large)
- Handles for doors
- Safety fitting for wall anchoring
- All necessary hardware (screws, dowels, etc.) for assembly

*Note: Interior accessories for organizing inside your wardrobe (e.g., STUK, SKUBB, STORSTABBE storage series) are sold separately.*

### 4. ASSEMBLY INSTRUCTIONS

---

Assembly of the SONGESAND Wardrobe requires careful attention to detail. It is recommended that assembly be performed by a qualified carpenter or professional to ensure correct and safe installation.

1. **Unpack and Verify:** Carefully unpack all four packages. Lay out all components and hardware. Compare them against the included parts list to ensure everything is present and undamaged.
2. **Prepare the Area:** Choose a clear, flat, and spacious area for assembly. Protect your floor with a blanket or cardboard.
3. **Assemble the Frame:** Follow the step-by-step diagrams provided in the separate assembly guide (usually included in one of the packages) to construct the main frame of the wardrobe.
4. **Install Shelves and Rails:** Insert the adjustable shelves and clothes rails into their desired positions. The shelves can be moved to different heights to suit your storage needs.
5. **Attach Doors:** Mount the doors, including the mirrored door, to the frame using the provided hinges. Ensure they open and close smoothly.
6. **Install Handles:** Attach the handles to the doors.



Image 4.1: Close-up view of the black handles on the white wardrobe doors.

- 7. Wall Anchoring (Crucial Step):** This is a critical safety step. Using the provided safety fitting, securely anchor the wardrobe to a sturdy wall. As mentioned in the safety section, use appropriate fixing devices for your specific wall material.

*If you encounter any difficulties during assembly, refer to the detailed assembly diagrams or contact professional assembly services.*

## 5. USAGE AND ORGANIZATION

---

The SONGESAND Wardrobe is designed for flexible storage. Utilize the adjustable features to customize the interior space according to your requirements.

- **Adjustable Shelves:** The three adjustable shelves can be repositioned to accommodate items of various heights, such as folded clothes, bags, or storage boxes.
- **Clothes Rails:** The wardrobe includes two clothes rails. The small rail can hold approximately 10 shirts on hangers, while the large rail can hold about 25 shirts on hangers.
- **Integrated Mirror:** The full-length mirror door provides convenience for outfit checks without requiring additional wall space.



Image 5.1: Interior view of the SONGESAND Wardrobe showing clothes on hangers and storage boxes on shelves, demonstrating customizable organization.

For enhanced organization, consider using compatible interior accessories like storage boxes and dividers (e.g., STUK, SKUBB, STORSTABBE series) to keep smaller items tidy.

## 6. MAINTENANCE AND CARE

---

Proper care will help maintain the appearance and longevity of your wardrobe.

- **Cleaning:** Wipe clean the surfaces with a cloth dampened in a mild cleaner. Immediately wipe dry with a clean, dry cloth to prevent moisture damage.
- **Mirror Care:** Clean the mirror surface with a glass cleaner and a soft, lint-free cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, strong solvents, or harsh chemicals, as these can damage the finish and materials.
- **Regular Checks:** Periodically check all assembly fittings and wall anchors to ensure they remain tight and secure. Retighten if necessary.

## 7. SPECIFICATIONS

---

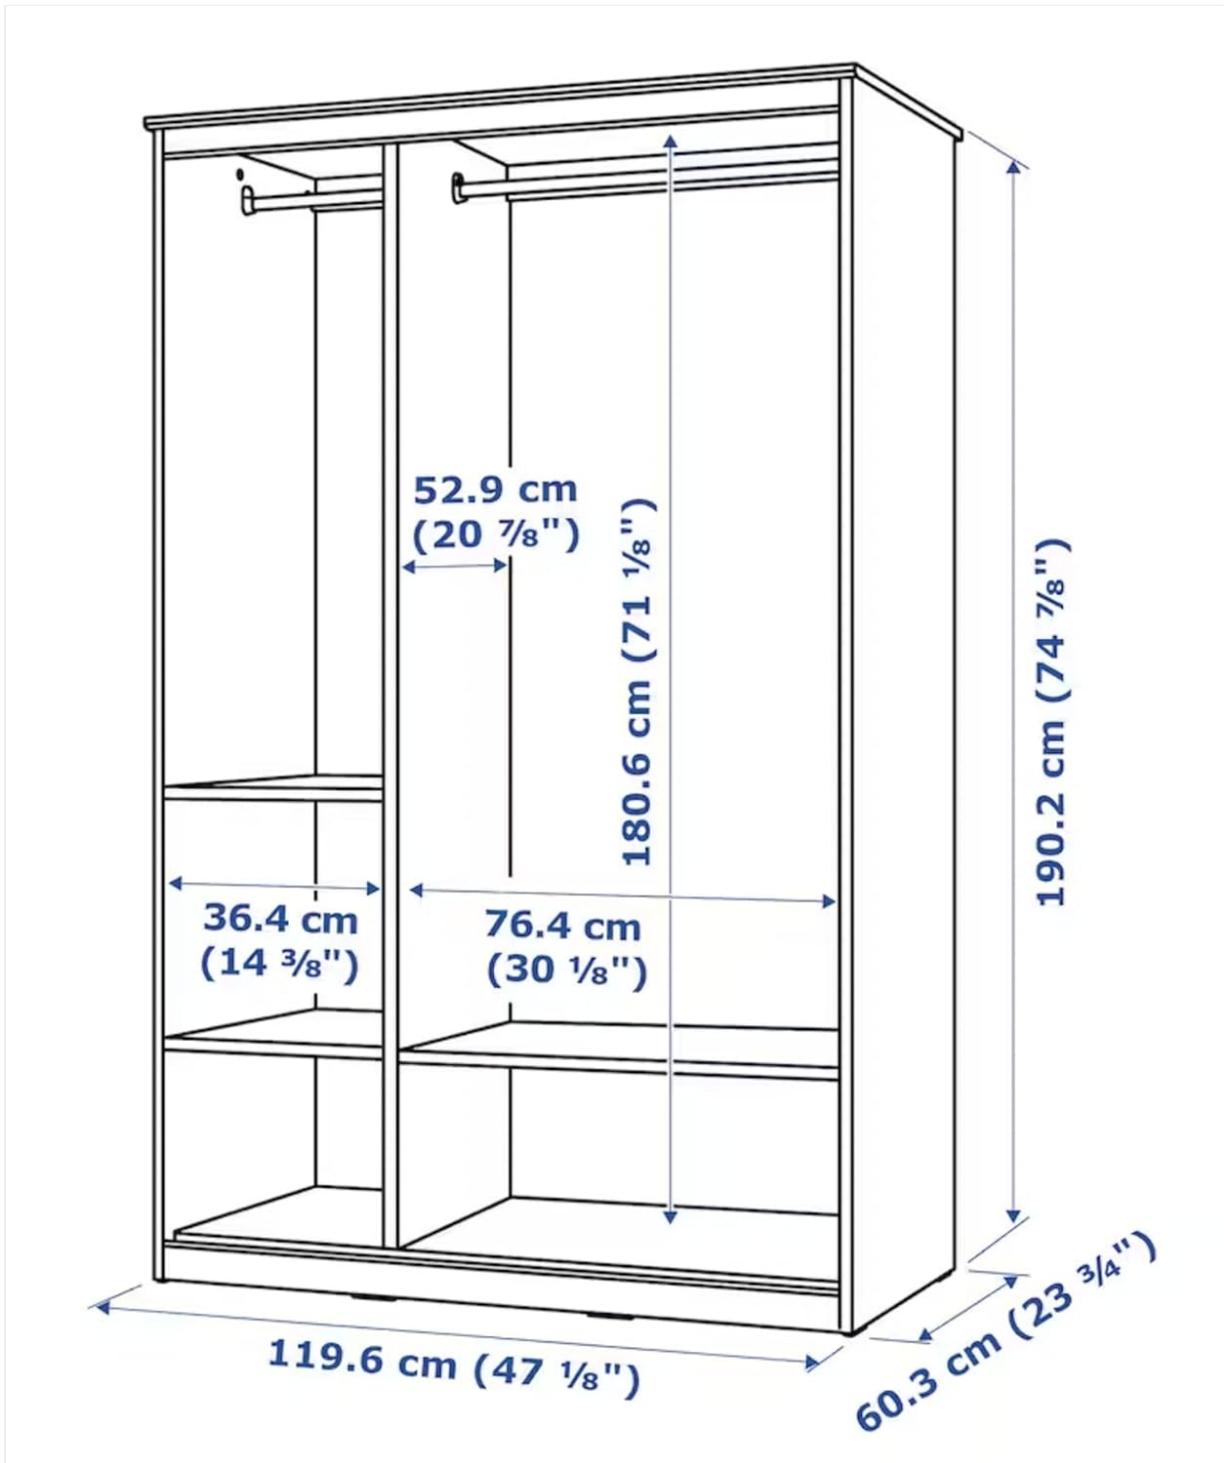


Image 7.1: Detailed dimensions of the SONGESAND Wardrobe.

<b>Model Name</b>	SONGESAND
<b>Brand</b>	Ikea
<b>Dimensions (W x D x H)</b>	120 cm x 60 cm x 191 cm (47 1/8" x 23 5/8" x 75 1/4")
<b>Weight</b>	96 kg
<b>Color</b>	White
<b>Material</b>	Particleboard, Paper foil, Plastic edging, Fibreboard, Glass (mirror)
<b>Number of Shelves</b>	3 (adjustable)
<b>Clothes Rails</b>	2 (one small, one large)

<b>Assembly Required</b>	Yes
<b>Mounting Type</b>	Wall Mount (safety anchoring required)

## 8. TROUBLESHOOTING

---

This section addresses common issues you might encounter.

- **Wobbly Wardrobe:** Ensure all screws and fittings are tightened. Verify that the wardrobe is placed on a level surface. Most importantly, ensure it is securely anchored to the wall as per safety instructions.
- **Doors Not Closing Properly:** Check hinge alignment and adjust if necessary. Ensure no items inside the wardrobe are obstructing the doors.
- **Missing Parts:** If you find any parts missing upon unpacking, contact Ikea customer service with your product details and parts list.

## 9. WARRANTY AND SUPPORT

---

For information regarding product warranty, please refer to the terms and conditions provided at the point of purchase or visit the official Ikea website.

An optional 1-year extended warranty by OneAssist may be available for purchase separately. Please check with your retailer for details.

For customer support, assembly assistance, or to report damaged/missing parts, please contact Ikea customer service through their official channels.