

[Manuals.plus](#) /

> [Naroote](#) /

> Naroote Digital Electronic Timer Instruction Manual (Model Shanrya5g7e8snr121935)

Naroote Shanrya5g7e8snr121935

Naroote Digital Electronic Timer

MODEL: SHANRYA5G7E8SNR121935

Instruction Manual

Introduction

This manual provides instructions for the Naroote Digital Electronic Timer, model Shanrya5g7e8snr121935. This compact, battery-powered timer is designed for various applications such as kitchen use, baking, and classroom activities. It features a large display for easy readability, a loud alarm, and multiple functions including timing, countdown, and memory.

Product Features

- **Large Screen Display:** Features bold numbers for clear and easy readability.
- **Loud Audible Alarm:** Provides a clear alarm, suitable for users with mild hearing impairment, without being excessively loud.
- **Switch Control:** Easy power on/off operation via a small side switch.
- **Multiple Functions:** Includes timing (stopwatch), countdown, and memory functions.
- **Battery Powered:** Operates on one 1.5V AAA dry battery (not included) for convenience and portability.

Package Contents

- 1 x Naroote Digital Electronic Timer

Product Overview

Familiarize yourself with the components of your Naroote Digital Electronic Timer:



Image: Front and back view of the timer with labeled parts. The front shows the large number display, MIN button, SEC button, START/STOP button, and a 'RESET' label below MIN and SEC. The back shows the hanging hook, retractable stand, battery compartment, magnet, and loud clear alarm speaker.

- **Large Number Display:** Shows minutes and seconds clearly.
- **MIN Button (M):** Used to set minutes.
- **SEC Button (S):** Used to set seconds.
- **START/STOP Button (ST/SP):** Initiates or pauses timing/countdown.
- **RESET Function:** (Indicated below MIN and SEC buttons) Typically achieved by pressing MIN and SEC simultaneously to clear the set time.
- **Turn On/Off Switch:** Located on the side for power control.
- **Hanging Hook:** For hanging the timer on a hook.
- **Retractable Stand:** Allows the timer to stand upright on a flat surface.
- **Battery Compartment:** Houses the AAA battery.
- **Magnet:** For attaching the timer to metallic surfaces.
- **Loud Clear Alarm:** Emits an audible alert when the time is up.

Setup

Battery Installation

1. Locate the battery compartment on the back of the timer.
2. Open the battery compartment cover.
3. Insert one 1.5V AAA dry battery, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.



Image: Rear view of the timer, highlighting the battery compartment and the integrated magnet.

Power On/Off

- Slide the small switch located on the side of the timer to the "ON" position to power it on.
- Slide the switch to the "OFF" position to power it off and conserve battery life.

Operating Instructions

Setting the Timer (Countdown)

1. Ensure the timer is powered on and the display shows "00:00". If not, press both **MIN** and **SEC** buttons simultaneously to reset.
2. Press the **MIN** button repeatedly to set the desired minutes (up to 99 minutes).
3. Press the **SEC** button repeatedly to set the desired seconds (up to 59 seconds).

Starting/Stopping the Countdown

1. After setting the desired time, press the **START/STOP** button to begin the countdown. The display will show the time decreasing.
2. To pause the countdown, press the **START/STOP** button again.
3. To resume, press **START/STOP** once more.
4. When the countdown reaches zero, the alarm will sound. Press **START/STOP** to silence the alarm.

Using as a Stopwatch (Timing Up)

1. Ensure the timer display is at "00:00". If not, press both **MIN** and **SEC** buttons simultaneously to reset.
2. Press the **START/STOP** button to begin counting up from "00:00".
3. To pause the stopwatch, press **START/STOP** again.
4. To resume, press **START/STOP** once more.
5. To reset the stopwatch to zero, press both **MIN** and **SEC** buttons simultaneously while the stopwatch is paused.

Memory Function

- The timer has a memory function that recalls the last set countdown time.
- After the alarm sounds or the timer is reset, pressing **START/STOP** will display the last set countdown time, allowing for quick reuse.

Maintenance

Cleaning

- Wipe the timer with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or immerse the timer in water.

Battery Replacement

- Replace the AAA battery when the display becomes dim or the timer stops functioning correctly.
- Follow the battery installation steps outlined in the "Setup" section.

Storage

- Store the timer in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, it is recommended to remove the battery to prevent leakage.

Troubleshooting

- **Timer does not turn on:**
 - Check if the side switch is in the "ON" position.
 - Ensure the AAA battery is inserted correctly with the proper polarity (+/-).
 - Replace the battery with a new one.
- **Display is dim or blank:**
 - Replace the AAA battery.
- **Alarm is not sounding:**
 - Ensure the speaker opening on the back is not obstructed.
 - Check battery level and replace if low.

- **Buttons are unresponsive:**

- Ensure the timer is powered on.
- Try resetting the timer by removing and reinserting the battery.

Specifications

Item Type	Electronic Timer
Timing Range	0-99 minutes 59 seconds
Timing Function	Yes
Countdown Function	Yes
Memory Function	Yes
Battery Information	1 x 1.5V 600mAh AAA dry battery (not included)
Brand	Naroote
Material	Plastic
Item Weight	0.5 Kilograms
Number of Settings	3
Unit Count	1.0 Count
Manufacturer Part Number	Shanrya5g7e8snr121935

Warranty and Support

Warranty information for this product is not provided in the product details. For support or warranty inquiries, please contact the manufacturer, Naroote, or your retailer directly.