

[Manuals.plus](#) /

› [Robo Alive](#) /

› Robo Alive Dino Action T-Rex by ZURU Instruction Manual

Robo Alive 7186

Robo Alive Dino Action T-Rex Instruction Manual

Model: 7186

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The Robo Alive Dino Action T-Rex is an interactive robotic toy designed to mimic the movements and sounds of a real dinosaur. This manual provides essential information for the safe and proper use, setup, and maintenance of your T-Rex toy.



Image: Robo Alive Dino Action T-Rex toy.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Always supervise children during play.
- Keep the toy away from water to prevent damage to electronic components.
- Do not attempt to disassemble or modify the toy, as this may cause damage or injury.
- Ensure batteries are inserted correctly and disposed of properly.

3. PACKAGE CONTENTS

The package includes:

- 1 x Robo Alive Dino Action T-Rex toy

4. SETUP

4.1 Battery Installation

The Robo Alive Dino Action T-Rex is powered by internal, non-replaceable batteries. No user battery installation is required. The toy is ready for use out of the box.

5. OPERATING INSTRUCTIONS

To activate the T-Rex's movements and sounds:

1. Place the T-Rex on a flat, stable surface.
2. Gently press down on the tail of the T-Rex.
3. The T-Rex will respond with dynamic movements, biting action, and lifelike roaring sounds.



Image: Activating the T-Rex's features by pressing its tail.

5.1 Product Demonstration Video

Watch this official video for a demonstration of the Robo Alive Dino Action series, including the T-Rex:

Video: Official ZURU LLC demonstration of Robo Alive Dino Action toys, showcasing movement and sound features.

6. MAINTENANCE

6.1 Cleaning

To clean the toy, wipe it with a damp cloth. Do not immerse the toy in water or use harsh chemicals, as this may damage the electronics or paint finish.

6.2 Storage

Store the toy in a cool, dry place away from direct sunlight when not in use.

7. TROUBLESHOOTING

7.1 No Sound or Movement

- Ensure the toy is not damaged.
- If the toy has been exposed to water, allow it to dry completely for several days before attempting to use it again.
- If the issue persists, contact customer support.

8. SPECIFICATIONS

Brand Name	Robo Alive
Model Name	T-Rex
Model Number	7186
Item Dimensions (L x W x H)	10.63 x 3.94 x 5.91 inches
Item Weight	0.9 Pounds
Material Type	Plastic
Power Source	Battery (Internal, non-replaceable)
Recommended Age	3 years and up

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official ZURU website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question