

[Manuals.plus](#) /

› [Smeg](#) /

› Smeg STU2FABWH2 Under Counter Built-In Dishwasher User Manual

Smeg STU2FABWH2

Smeg STU2FABWH2 Under Counter Built-In Dishwasher User Manual

Model: STU2FABWH2

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Smeg STU2FABWH2 Under Counter Built-In Dishwasher. Please read all instructions carefully before using the appliance and retain this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is designed for residential kitchen use only. Do not allow children to play with, on, or inside the dishwasher. Ensure proper grounding and installation by a qualified technician. Do not operate the dishwasher if it is damaged. Use only detergents and rinse aids recommended for automatic dishwashers. Keep all cleaning agents out of reach of children.

3. PRODUCT OVERVIEW

The Smeg STU2FABWH2 is an under-counter built-in dishwasher designed for seamless integration into your kitchen. It features a 13 place setting capacity, offering ample space for your dishes. The appliance incorporates an exclusive Orbital Wash System for optimal water distribution and includes Water Leak Protection technology to prevent flooding by detecting leaks and cutting off the water supply.



Image: The Smeg STU2FABWH2 Under Counter Built-In Dishwasher, shown installed under a kitchen counter. The appliance features a retro-style handle and the 'SMEG' logo at the bottom.

Key Features:

- **Capacity:** 13 Place Settings
- **Wash Cycles:** 10 (Soak, Express 27, Mix, Sterilize, Self Clean, Delicates, Normal, Crystal & China, Eco express, Express 60, Pots & Pans)
- **Temperatures:** 7 adjustable temperature settings
- **Washing System:** Orbital Wash System for thorough cleaning
- **Water Leak Protection:** Complete system to detect and prevent leaks
- **Half-Load Wash:** Option to save water and electricity for smaller loads
- **Delay Timer:** Up to 9 hours delay start option
- **Design:** Retro-style with a self-balancing door and touch controls with LED display

4. SETUP AND INSTALLATION

This dishwasher is designed for built-in installation under a counter. It is not intended for standalone use. Professional installation is highly recommended to ensure proper function and safety.

Installation Requirements:

- **Dimensions:** The appliance requires a space of approximately 32 inches (H) x 24 inches (W) x 24 inches (D).
- **Electrical:** Requires a 120 Volt, 60 Hz electrical supply.
- **Water Supply:** Ensure access to hot water supply. The included hose length is 55 inches.
- **Drainage:** Proper drainage connection is essential.
- **Included Components:** The product package includes the dishwasher unit.

Refer to the detailed installation guide provided with your appliance for specific instructions on plumbing, electrical connections, and securing the unit.

5. OPERATING INSTRUCTIONS

Your Smeg dishwasher features intuitive touch controls and an LED display for easy program selection and monitoring.

Loading the Dishwasher:

- Scrape off large food particles from dishes before loading.
- Place dishes securely in the racks, ensuring water can reach all surfaces.
- Avoid overcrowding to allow for proper water circulation.

Adding Detergent and Rinse Aid:

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the rinse aid dispenser regularly and refill as needed to ensure spot-free drying.

Selecting a Wash Cycle:

Use the touch controls to select one of the 10 available wash cycles:

- **Soak:** For pre-washing dishes with dried-on food.
- **Express 27:** A quick wash cycle for lightly soiled items.
- **Mix:** General cycle for mixed loads.
- **Sterilize:** High-temperature wash for sanitization.
- **Self Clean:** For cleaning the dishwasher interior.
- **Delicates:** Gentle wash for fragile items.
- **Normal:** Standard cycle for everyday loads.
- **Crystal & China:** Specialized cycle for delicate glassware and porcelain.
- **Eco express:** Energy-efficient cycle.
- **Express 60:** A 60-minute wash cycle.
- **Pots & Pans:** Intensive wash for heavily soiled cookware.

Additional options include the **Half-Load Wash** for smaller loads to conserve water and energy, and the **Delay Timer** to postpone the start of a cycle.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your dishwasher.

Cleaning the Filters:

- Periodically remove and clean the filters located at the bottom of the dishwasher tub.
- Rinse them under running water to remove food debris.
- Reinstall filters correctly to prevent damage and ensure effective cleaning.

Cleaning the Interior:

- Run the **Self Clean** cycle regularly to maintain a clean and odor-free interior.
- Wipe down the interior walls and door gasket with a damp cloth to remove any residue.

Cleaning the Exterior:

- Wipe the exterior surfaces with a soft, damp cloth.
- For stainless steel finishes, use a specialized stainless steel cleaner to prevent fingerprints and maintain shine.

7. TROUBLESHOOTING

Before contacting customer service, review the following common issues and solutions:

- **Dishwasher not starting:** Check if the door is fully closed and latched. Ensure the power supply is connected and the circuit breaker has not tripped.
- **Dishes not clean:** Verify that dishes are loaded correctly and not blocking spray arms. Check detergent levels and ensure filters are clean.
- **Water not draining:** Inspect the drain hose for kinks or blockages. Clean the filters.
- **Leaks:** The Water Leak Protection system should activate if a leak is detected. Check door gasket for damage or debris. Ensure proper hose connections.
- **Unusual noises:** Ensure dishes are not rattling against each other or the spray arms. Check for foreign objects in the pump area.

If the problem persists after attempting these solutions, contact Smeg customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Smeg
Model Number	STU2FABWH2
Installation Type	Built-In
Product Dimensions (D x W x H)	24"D x 24"W x 32"H
Capacity	13 Place Settings
Color	White
Controls Type	Touch
Material (Inner)	Stainless Steel
Finish Type	Fingerprint-proof stainless steel, White
Voltage	120 Volts

Operating Frequency	60 Hz
Number of Wash Cycles	10
Number of Temperatures	7
Item Weight	43 Kilograms (106 lbs)
Hose Length	55 Inches
Special Features	Delay Start, Water Leak Protection

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your appliance or visit the official Smeg website. If you require technical assistance, spare parts, or have any questions not covered in this manual, please contact Smeg customer support. Have your model number (STU2FABWH2) and serial number ready when contacting support.