

[manuals.plus](#) /

- › [Back Bay Audio](#) /
- › [Back Bay Audio Tempo 30 Wireless Earbuds User Manual](#)

Back Bay Audio Back Bay Tempo 30

Back Bay Audio Tempo 30 Wireless Earbuds User Manual

Model: Back Bay Tempo 30 | Brand: Back Bay Audio

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Back Bay Audio Tempo 30 Wireless Earbuds. Designed for comfort and high-quality audio, these earbuds are ideal for users with small ear canals and active lifestyles.



Image: Back Bay Audio Tempo 30 wireless earbuds in lavender, showcasing their water-resistant design.

WHAT'S IN THE BOX

Upon opening your Back Bay Audio Tempo 30 package, you will find the following components:

- Eartip (Multiple sizes for optimal fit)
- User Manual (This document)
- Cable (USB-C charging cable)
- Charging Station (Portable charging case)

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the provided USB-C cable to the charging case and a compatible power source. The charging case has a 400 mAh battery capacity and takes approximately 2

hours to fully charge. The earbuds provide 8 hours of playtime per charge, with the case offering an additional 24 hours, totaling 32 hours of battery life.

2. Selecting the Right Ear Tips

The Tempo 30 earbuds come with 6 different ear-tip sizes to ensure a comfortable and secure fit, especially for small ear canals. Experiment with different sizes to find the best seal for optimal sound quality and comfort.



Image: The Tempo 30 earbuds in their charging case, demonstrating their suitability for small ears with multiple ear tip options.

3. Pairing with Your Device

The Tempo 30 earbuds feature simple, one-step auto-pairing. Remove the earbuds from the charging case, and they will automatically enter pairing mode. On your Bluetooth-enabled device (phone, computer, tablet), navigate to the Bluetooth settings and select "Back Bay Tempo 30" from the list of available devices to connect. The earbuds are compatible with any Bluetooth-enabled device, including Apple iPhone, iPad, Macbooks, Samsung Galaxy, Google Pixel, LG, and OnePlus devices.

OPERATING INSTRUCTIONS

Basic Controls

The Tempo 30 earbuds utilize touch controls for various functions:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold on either earbud.
- **Activate Voice Assistant:** Triple tap on either earbud.

Sound Modes

The Tempo 30 offers two distinct sound modes to enhance your listening experience:

- **Signature Mode:** Provides a balanced audio profile for general listening.
- **Boosted Bass Mode:** Enhances low frequencies for a more powerful bass response, ideal for workouts or gaming.

To switch between sound modes, refer to the specific touch control gestures detailed in the quick start guide included with your product. The earbuds have a frequency response of 20000 Hz and a sensitivity of 110 dB.

EXPERIENCE IMMERSIVE SOUND



**SIGNATURE
MODE**



**BOOSTED BASS
MODE**

2 SOUND MODES

Image: Visual representation of the two sound modes available on the Tempo 30 earbuds: Signature Mode and Boosted Bass Mode.

MAINTENANCE

Cleaning Your Earbuds

Regular cleaning helps maintain sound quality and hygiene. Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth. For ear tips, remove them from the earbuds and clean with a mild soap solution, then rinse thoroughly and dry completely before reattaching.

Water Resistance

The Tempo 30 earbuds are IPX7-rated waterproof, making them resistant to sweat and rain. This means they can withstand immersion in up to 1 meter of water for 30 minutes. However, they are not designed for swimming. Ensure the charging port is dry before charging to prevent damage.

BACK BAY TEMPO 30



Designed in
the USA



32-hour
battery life



Water-resistant
IPX-7 Rating



Image: Key features of the Tempo 30, including its IPX7 water resistance rating.

Storage

When not in use, store your earbuds in their charging case to protect them and ensure they are charged for your next use. Store in a cool, dry place away from extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earbuds not pairing/connecting.	Bluetooth is off on device, earbuds not in pairing mode, interference.	Ensure Bluetooth is enabled. Place earbuds back in case, then remove to re-enter pairing mode. Move closer to your device. Forget device in Bluetooth settings and re-pair.

Problem	Possible Cause	Solution
No sound from one earbud.	Earbud not charged, connection issue, debris blocking sound.	Ensure both earbuds are charged. Place both earbuds in the case, close, then open again. Clean earbud mesh with a dry cotton swab.
Charging case not charging.	Cable issue, power source issue.	Try a different USB-C cable and power adapter. Ensure the cable is fully inserted.
Poor sound quality.	Improper ear tip fit, low battery, distance from device.	Try different ear tip sizes for a better seal. Charge earbuds. Reduce distance between earbuds and device.

SPECIFICATIONS

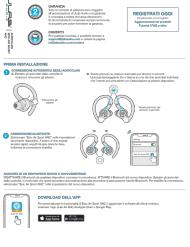
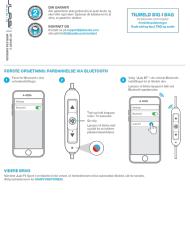
Model Name	Back Bay Tempo 30
Brand	Back Bay Audio
Connectivity Technology	Bluetooth 5.0
Wireless Communication Technology	Bluetooth
Battery Life	32 Hours (8 hours earbuds + 24 hours case)
Charging Time	1.5 Hours (earbuds), 2 Hours (case)
Water Resistance Level	Waterproof (IPX7)
Noise Control	Sound Isolation
Frequency Response	20000 Hz
Sensitivity	110 dB
Control Type	Button Control / Touch
Item Weight	45 Grams (earbuds), 36 Grams (case)
Material	Premium ABS Plastic, Metal (Aluminum case)
Product Dimensions	2.9 x 1.8 x 1.1 inches
Bluetooth Range	30 Feet
Audio Latency	40 Milliseconds

WARRANTY AND SUPPORT

Back Bay Audio products are designed for durability and performance. While specific warranty details are provided with your purchase, Back Bay Audio is known for responsive customer support and offers replacements for manufacturing defects. Please retain your proof of purchase for warranty claims.

For further assistance or to inquire about warranty service, please visit the official Back Bay Audio website or contact their customer support directly. You can also refer to the [Back Bay Audio Store on Amazon](#) for additional

Related Documents - Back Bay Tempo 30

	<p><u>Back Bay Tempo 30 Truly Wireless Earbuds User Manual</u></p> <p>User manual for the Back Bay Tempo 30 truly wireless earbuds, covering setup, pairing, controls, charging, and specifications.</p>
	<p><u>Back Bay Tempo 30 Wireless Earbuds User Manual</u></p> <p>User manual for the Back Bay Tempo 30 wireless earbuds, covering setup, pairing, troubleshooting, controls, charging, and features like No-Lag Mode.</p>
	<p><u>Back Bay Tempo 30 Wireless Earbuds User Manual - Setup, Controls, and Charging</u></p> <p>Comprehensive user manual for Back Bay Tempo 30 wireless earbuds. Learn how to pair, use controls, charge, and troubleshoot connection issues. Includes specifications and safety information.</p>
	<p><u>Back Bay Runner 40 Wireless Earbuds User Manual</u></p> <p>User manual for the Back Bay Runner 40 wireless earbuds, covering setup, pairing, controls, charging, and specifications.</p>
	<p><u>JLab Epic Air Sport ANC True Wireless Earbuds User Guide</u></p> <p>Comprehensive guide to setting up, using, and troubleshooting your JLab Epic Air Sport ANC true wireless earbuds. Learn about features, controls, charging, fit, and maintenance.</p>
	<p><u>JLab Fit Sport 3 Wireless Earbuds: User Manual & Setup Guide</u></p> <p>Comprehensive guide to setting up, using, and troubleshooting your JLab Fit Sport 3 wireless earbuds. Learn about button functions, charging, fitment, and common connection issues.</p>