

[Manuals.plus](#) /

> [Accutime](#) /

> Accutime POK4322 LED Digital Watch User Manual

Accutime POK4322

Accutime POK4322 LED Digital Watch User Manual

Model: POK4322 | Brand: Accutime

INTRODUCTION

This manual provides detailed instructions for the Accutime POK4322 LED Digital Watch. This watch is designed for children, featuring a vibrant LED digital display and a comfortable acrylic strap. It provides essential timekeeping functions including hours, minutes, seconds, month, and day, with support for both 12-hour and 24-hour formats. Please read this manual thoroughly to ensure proper use and care of your watch.





Figure 1: Front view of the Accutime POK4322 LED Digital Watch.

PRODUCT OVERVIEW

The Accutime POK4322 is a user-friendly digital watch with a bright LED display. Its design incorporates popular characters, making it appealing for children. The watch features two control buttons for easy adjustment of time and date settings.

- **LED Digital Display:** Shows time (hours, minutes), seconds, month, and day.
- **Time Formats:** Supports both 12-hour and 24-hour display modes.
- **Control Buttons:** Two buttons located on the right side of the watch case for settings.
- **Adjustable Strap:** Flexible acrylic strap with multiple adjustment holes for a comfortable fit.
- **Integrated Battery:** Powered by a non-rechargeable, non-replaceable CR2032 button cell battery.







Figure 2: Full view of the watch with the strap extended.

SETUP

Initial Activation

The watch comes with an integrated battery. To activate the display, simply press the right-side button. The LED display will illuminate for a few seconds and then turn off automatically to conserve battery life.

Adjusting the Strap

The acrylic strap is approximately 22 cm long and features 7 adjustment holes. To adjust the strap, locate the buckle and select the appropriate hole that provides a comfortable and secure fit around the wrist.

OPERATING INSTRUCTIONS

Displaying Time and Date

1. Press the **top right button** once to display the time (hours and minutes).
2. Press the **top right button** a second time to display the date (month and day).
3. Press the **top right button** a third time to display the seconds.
4. The display will automatically turn off after a few seconds to save power.

Setting Time and Date

The watch has two buttons on the right side of the case. Let's refer to them as Button A (top) and Button B (bottom).

1. Press **Button A** to activate the display.
2. While the time is displayed, press and hold **Button A** for approximately 3 seconds until the hour digits begin to flash.
3. Press **Button A** repeatedly to advance the hour.
4. Once the correct hour is set, press **Button B** to move to the minute setting. The minute digits will flash.
5. Press **Button A** repeatedly to advance the minutes.
6. Press **Button B** to move to the month setting. The month digits will flash.
7. Press **Button A** repeatedly to advance the month.
8. Press **Button B** to move to the day setting. The day digits will flash.
9. Press **Button A** repeatedly to advance the day.
10. Press **Button B** to toggle between 12-hour and 24-hour format. "AM" or "PM" will appear for 12-hour format.
11. Press **Button B** again to exit the setting mode. The display will return to normal time display.





Figure 3: Close-up view of the watch face and control buttons.

MAINTENANCE

- **Cleaning:** Wipe the watch case and strap with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** This watch is not specified as water-resistant. Avoid exposing it to water, moisture, or extreme humidity.
- **Battery:** The watch uses an integrated CR2032 button cell battery which is not designed to be recharged or replaced by the user. When the battery life ends, the watch will cease to function.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display does not light up.	Battery is depleted.	The integrated battery is not replaceable. The watch has reached the end of its functional life.
Time/Date cannot be set.	Incorrect button sequence or timing.	Ensure you press and hold Button A until digits flash, then use Button A to adjust and Button B to confirm/move to next setting. Refer to "Setting Time and Date" section.
Display is dim or flickering.	Low battery.	The integrated battery is nearing the end of its life.

SPECIFICATIONS

Feature	Detail
Model Number	POK4322
Display Type	LED Digital
Strap Material	Acrylic
Strap Length	Approx. 21.7 cm (8.5 inches)
Case Dimensions (L x H x W)	3.8 x 3.7 x 0.9 cm (1.5 x 1.46 x 0.35 inches)
Weight	24 g (0.85 oz)
Battery Type	Integrated CR2032 Button Cell (non-replaceable)
Time Formats	12-hour / 24-hour

WARRANTY AND SUPPORT

Information regarding specific warranty terms for the Accutime POK4322 LED Digital Watch is not provided in this manual. For warranty claims or technical support, please contact the retailer where the product was purchased or refer to the packaging for manufacturer contact details.

As stated in the product description, the integrated CR2032 button cell battery is not rechargeable or replaceable. The lifespan of the watch is limited by the battery's duration.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09NZ7QWDX>

More documents and user manuals: <https://manuals.plus/>