

Karlxtom TDQR03A

Karlxtom Countertop Dishwasher User Manual

Model: TDQR03A

INTRODUCTION

Thank you for choosing the Karlxtom Countertop Dishwasher. This appliance is designed to simplify your daily dishwashing tasks, offering a 3-in-1 solution that combines dishwashing, dish drying, and storage. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new dishwasher. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, observe the following basic precautions:

- Read all instructions before using the dishwasher.
- Ensure the dishwasher is properly grounded. Connect only to a properly grounded outlet.
- Do not operate the dishwasher if it has a damaged cord or plug, or if it is not working properly.
- Keep children away from detergent and rinse aid. Supervise children when they are near the dishwasher.
- Use only detergents and rinse aids recommended for dishwashers.
- Do not store or use flammable materials near this appliance.
- Do not tamper with controls.
- Always turn off the appliance and disconnect it from the power supply before cleaning or performing maintenance.
- If you find a small amount of water stains in the dishwasher after receiving the package, please do not worry; this is normal. It is a result of factory testing to ensure proper function before delivery.

WHAT'S IN THE BOX

Carefully unpack your dishwasher and check that all items are present:

- 1 × Karlxtom Countertop Dishwasher
- 1 × Tableware Basket

- 1 × Storage Rack
- 1 × Cutlery Basket
- 1 × Inlet Hose (61 inches)
- 1 × Drain Hose (61 inches)
- 1 × Fruit Basket
- 1 × Pitcher
- 1 × Hose Collar
- 1 × User Guide

PRODUCT OVERVIEW



Front view of the Karlxtom Countertop Dishwasher, showcasing its compact design and transparent door.

The Karlxtom Countertop Dishwasher is designed for efficiency and convenience in smaller living spaces. Its compact form factor allows it to fit easily on most countertops.



Dimensions of the Karlxtom Countertop Dishwasher: 18.05 inches (H) x 16.86 inches (W) x 16.75 inches (D).

Despite its compact size, the dishwasher offers a generous capacity, accommodating up to 4 full place settings and dishes up to 12 inches when loaded at an angle. The double-layer design provides ample space for various tableware, including dinner plates, small plates, serving bowls, cups, and cutlery.



Interior view of the dishwasher showing a typical load of dishes, including plates, cups, and cutlery.

SETUP GUIDE

Placement

- Place the dishwasher on a stable, level surface capable of supporting its weight when full.
- Ensure there is adequate ventilation around the unit.
- Avoid placing the dishwasher near heat sources or in direct sunlight.

Water Supply Connection

The Karluxtom dishwasher offers dual water supply options: Water Tank Mode and Tap Mode.

WASSERTANK-MODUS, MESSBECHER
(IM LIEFERUMFANG ENTHALTEN)



2 WASSERVERSORGUNGSARTEN



WASSERHAHN-MODUS

Schließen Sie den Wassereinlassschlauch
(im Lieferumfang enthalten) an
einen Wasserhahn an

Illustration of the two water supply methods: manual filling into the top water tank and direct connection to a tap.

Water Tank Mode

- This mode allows you to operate the dishwasher without a direct tap connection.
- Manually add water to the built-in 5-liter water tank using the provided pitcher.
- The automatic water level indicator will signal when the correct water level has been reached.

Tap Mode

- Connect the provided 61-inch inlet hose to a standard water tap.
- Ensure all connections are secure to prevent leaks.

Drainage Connection

- Connect the provided 61-inch drain hose to the dishwasher's drain outlet.
- Route the drain hose to a sink or suitable drain point, ensuring it is securely positioned to prevent dislodgement during operation.

Power Connection

- Plug the dishwasher's power cord into a grounded electrical outlet.
- Ensure the voltage matches the specifications of the appliance (220 Volts AC).

OPERATING INSTRUCTIONS

Loading Dishes

- Scrape off large food particles from dishes before loading.
- Place dishes securely in the baskets, ensuring they do not block the spray arms.
- Load larger items, such as dinner plates (up to 12 inches when angled), in the lower rack.
- Use the cutlery basket for forks, spoons, and knives.

Adding Detergent

- Only use detergent specifically designed for dishwashers.
- Pods, liquid, or powder detergents are all acceptable.
- It is recommended to use detergent tablets only when running longer cycles to ensure they fully dissolve.

Selecting a Wash Program

The dishwasher offers 6 programs to suit various cleaning needs:

5 WASCHZYKLEN & EXTRA-TROCKENFUNKTION

Erfüllen Sie Ihre Unterschiedlichen Spülbedürfnisse



NORMAL
69 min



SPEED
29 min




ECO
59 min



BABY CARE
89 min



FRUIT
19 min

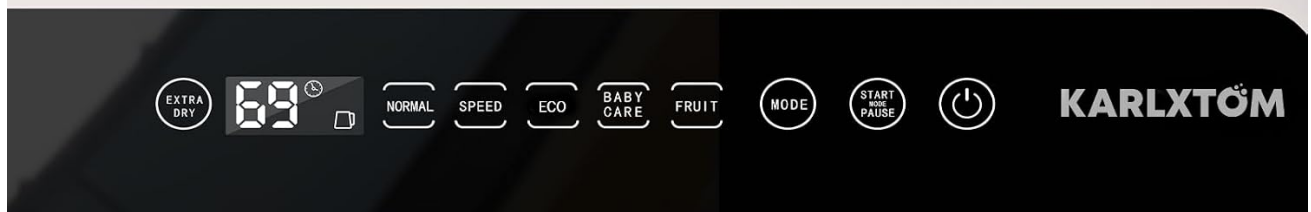

Control panel displaying the 5 wash cycles and Extra Dry function.

Program	Duration	Description
Normal	69 minutes	Standard wash for daily soiled dishes.
Speed	29 minutes	Quick wash for lightly soiled dishes.
Glass	59 minutes	Gentle wash for delicate glassware.
Baby Care	89 minutes	Intensive wash with 167°F steam for baby bottles and accessories.
Fruit & Vegetable	19 minutes	Dedicated cycle for washing fruits and vegetables.
Extra Dry	60 minutes	Additional hot air drying cycle.



Close-up showing the fruit basket for Fruit & Vegetable wash and baby bottles in the Baby Care mode.

Drying Function

The dishwasher includes an efficient drying system:

PTC HEIßLUFTTROCKNUNG UND LAGERUNG

Halten Sie Ihr Geschirr sauber, beugen Gerüchen vor und trocknen Sie es lange



60 MINUTEN

Heißlufttrocknung

72 STUNDEN

Belüftete Lagerung



Illustration of the PTC hot air drying system in operation, showing air circulation.

- **Hot Air Drying:** An additional 60-minute hot air drying mode ensures dishes are thoroughly dry. This cycle starts automatically once the wash cycle is complete (except for Fruit & Vegetable mode).
- **Automatic Ventilation:** After drying, the dishwasher provides 72 hours of automatic ventilation to keep dishes clean, odor-free, and dry for extended periods.

Starting a Cycle

- Ensure the door is securely closed.
- Press the Power button to turn on the dishwasher.
- Select your desired wash program using the Mode button.
- Press the Start/Pause button to begin the cycle.

CARE AND MAINTENANCE

Cleaning Filters

- Regularly check and clean the filter system to ensure optimal cleaning performance.
- Refer to the user guide for detailed instructions on how to remove and clean the filters.

Cleaning Interior and Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the interior of the dishwasher periodically to prevent odor buildup and maintain hygiene.

Long-Term Storage

- If the dishwasher will not be used for an extended period, ensure it is completely drained and dry.
- Disconnect the power supply.

TROUBLESHOOTING GUIDE

Before contacting customer support, please refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check circuit breaker/fuse.
Dishes are not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filters.	Reload dishes correctly; Clean spray arm nozzles; Add appropriate amount of detergent; Clean filters.
Water not draining	Drain hose kinked or clogged; Drain pump clogged; Clogged filters.	Check and clear drain hose; Inspect and clear drain pump; Clean filters.
Dishwasher leaks	Hose connections loose; Door seal damaged; Too much detergent causing excessive suds.	Tighten hose connections; Inspect and clean door seal; Reduce detergent amount.
Unusual noise	Dishes rattling; Foreign object in pump; Motor issue.	Rearrange dishes; Check and remove any foreign objects; Contact customer support if noise persists.

TECHNICAL SPECIFICATIONS

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2017 with regard to energy labelling of household dishwashers

Supplier's name or trade mark: KARLXTOM

Supplier's address: Apex CE Specialists GmbH, Ravolzhauser str. 3la63543Neuberg, DE

Model identifier: TDQR03A

General product parameters:

Parameter	Value	Parameter	Value
Rated capacity ^(a) (ps)	2	Dimensions in cm	Height 46
			Width 43
			Depth 43
EEL ^(a)	61,0	Energy efficiency class ^(a)	F
Cleaning performance index ^(a)	1,210	Drying performance index ^(a)	1,100
Energy consumption in kWh [per cycle], based on the eco programme using cold water fill. Actual energy consumption will depend on how the appliance is used.	0,384	Water consumption in litres [per cycle], based on the eco programme. Actual water consumption will depend on how the appliance is used and on the hardness of the water.	4,5
Programme duration ^(a) (h:min)	2:02	Type	Free-standing
Airborne acoustical noise emissions ^(a) (dB(A) re 1 pW)	60	Airborne acoustical noise emission class ^(a)	D
Off-mode (W) (if applicable)	0,49	Standby mode (W) (if applicable)	0,49
Delay start (W) (if applicable)	0,00	Networked standby (W) (if applicable)	0,00

Minimum duration of the guarantee offered by the supplier: 12 months

Additional information:

Weblink to the supplier's website, where the information in point 6 of Annex II to Commission Regulation (EU) 2019/2022 is found: <https://www.karlxtom.com>

^(a) for the eco programme.

Parameter	Value
Brand	Karlxtom
Model Info	TDQR03A
Form Factor	Countertop
Installation Type	Countertop
Product Dimensions (D x W x H)	16.75" x 16.86" x 18.05" (42.5 cm x 42.8 cm x 45.8 cm)
Item Weight	12 Kilograms / 26.4 pounds
Voltage	220 Volts (AC)
Wattage	950 watts
Water Tank Capacity	5 Liters
Water Consumption (Eco Program)	4.5 Liters
Number of Programs	6 (Normal, Speed, Glass, Baby Care, Fruit & Vegetable, Extra Dry)
Noise Level	50 dB
Display Type	LED
Controls Type	Touch
Material	Polypropylene (PP)
Special Feature	Portable
UPC	191892946023
Energy Efficiency Class	F
Program Duration (Eco)	2:02 (h:min)
Minimum Duration of Guarantee	12 months
Additional Information Web Link	www.karlxtom.com

WARRANTY AND CUSTOMER SUPPORT

Your Karlxtom Countertop Dishwasher comes with a minimum guarantee period of 12 months from the date of purchase.

For any reason, if our products do not meet your expectations, or if you encounter any issues not covered in this manual, please do not hesitate to contact us. Our customer service team is dedicated to providing you with a satisfactory solution.

Please refer to your purchase documentation or the official Karlxtom website for specific contact details and warranty claim procedures.