

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [BOGASING](#) /

> [BOGASING M10 Portable Bluetooth Speaker User Manual](#)

## BOGASING M10

# BOGASING M10 Portable Bluetooth Speaker User Manual

Model: M10 | Brand: BOGASING

## INTRODUCTION

Thank you for purchasing the BOGASING M10 Portable Bluetooth Speaker. This manual provides detailed instructions on how to set up, operate, and maintain your speaker to ensure optimal performance and longevity. The M10 is designed for portability and durability, featuring IPX7 waterproofing, powerful 15W sound, Bluetooth 5.0 connectivity, and dual pairing capabilities, making it ideal for both indoor and outdoor use.



Image: The BOGASING M10 Portable Bluetooth Speaker in pink, showcasing its compact design and splash-resistant features.

## WHAT'S IN THE BOX

---

Please check the package contents to ensure all items are present:

- 1 x BOGASING M10 Bluetooth Speaker
- 1 x 3.5mm Audio Cable
- 1 x USB-C Charging Cable
- 1 x User Manual (this document)

- 1 x Lanyard

## PRODUCT OVERVIEW

---

Familiarize yourself with the speaker's components and controls.



Image: The BOGASING M10 speaker highlighting its Type-C charging port, TF card slot, and 3.5mm AUX input.

### Controls and Ports:

- **Power Button:** Press and hold to turn on/off.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Play/Pause Button:** Press to play or pause music. Answer/end calls.
- **Mode Button (M):** Switch between Bluetooth, TF card, and AUX modes.

- **Type-C Charging Port:** For charging the speaker.
- **TF Card Slot:** Insert a Micro SD card for direct music playback.
- **3.5mm AUX Input:** Connect external audio devices using the included audio cable.
- **Microphone:** For hands-free calls.

## SETUP

---

### 1. Charging the Speaker

Before first use, fully charge the speaker. Use the provided USB-C charging cable and connect it to a compatible USB power adapter (not included).

- Connect the USB-C end of the cable to the speaker's charging port.
- Connect the USB-A end to a 5V/1A or 5V/2A USB power source.
- The LED indicator will show charging status (e.g., red for charging, off when fully charged).
- A full charge typically takes approximately 3-4 hours.

### 2. Power On/Off

- To power on, press and hold the Power button for 2-3 seconds until you hear an audible prompt.
- To power off, press and hold the Power button again for 2-3 seconds until you hear an audible prompt.

## OPERATING INSTRUCTIONS

---

### 1. Bluetooth Pairing

The speaker will automatically enter Bluetooth pairing mode when powered on for the first time or if no device is connected.

1. Turn on the BOGASING M10 speaker. The LED indicator will flash, indicating it's ready for pairing.
2. Enable Bluetooth on your device (smartphone, tablet, computer).
3. Search for "BOGASING M10" in the list of available Bluetooth devices.
4. Select "BOGASING M10" to connect. Once connected, you will hear a confirmation sound, and the LED indicator will turn solid.
5. The speaker will automatically reconnect to the last paired device when powered on, if within range.

### 2. Wireless Stereo Pairing (TWS Function)

You can pair two BOGASING M10 speakers together for a true wireless stereo experience.

# Wireless Stereo Pairing



Image: Two BOGASING M10 speakers positioned to illustrate wireless stereo pairing.

1. Ensure both BOGASING M10 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button. You will hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically search for and connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your device to the primary speaker via Bluetooth as described in "Bluetooth Pairing" above. The two speakers will now play audio in stereo.
5. To disconnect TWS, double-press the Power button on either speaker.

### 3. TF Card Playback

The speaker supports music playback directly from a Micro SD (TF) card.

- Insert a Micro SD card (up to 32GB, FAT32 format) with MP3/WAV/FLAC audio files into the TF card slot.

- The speaker will automatically switch to TF card mode and begin playing music. If it doesn't, press the Mode button to switch.

## 4. AUX Input

Connect non-Bluetooth devices using the 3.5mm audio cable.

- Connect one end of the 3.5mm audio cable to the speaker's AUX input port.
- Connect the other end to the headphone jack or audio output of your device.
- The speaker will automatically switch to AUX mode. If it doesn't, press the Mode button to switch.

## 5. Hands-Free Calling

When connected to a smartphone via Bluetooth, you can use the speaker for hands-free calls.

- **Answer Call:** Press the Play/Pause button once.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds.
- **Redial Last Number:** Double-press the Play/Pause button.

## 6. Music Playback Control

- **Play/Pause:** Press the Play/Pause button.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.
- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.

# Astonishingly Loud



*Small Speaker  
Big Volume*



*Bass Passive  
Diaphragm*



*15W Powerful  
Sounds*



*Ultra Clear  
Sound*



Image: The BOGASING M10 speaker emphasizing its audio capabilities, including loud volume and clear sound.

## MAINTENANCE

---

### 1. Cleaning

- Wipe the speaker with a soft, damp cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface.
- Ensure all ports are dry before charging or connecting cables.

### 2. IPX7 Waterproof Care

The BOGASING M10 is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for 30 minutes. To maintain its waterproof integrity:



# IPX7 Waterproof



Image: Two BOGASING M10 speakers surrounded by water splashes, illustrating their IPX7 waterproof capability.

- Ensure the charging port cover is securely closed before exposing the speaker to water.
- Do not expose the speaker to saltwater or other chemicals.
- After exposure to water, wipe the speaker dry with a soft cloth.
- Do not charge the speaker if the charging port or cable is wet.

### 3. Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to about 50% every few months to preserve battery life.

### TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or depleted.	Charge the speaker fully using the provided USB-C cable.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; device Bluetooth is off; speaker is too far from device.	Ensure speaker is in pairing mode (flashing LED). Turn on Bluetooth on your device. Move speaker closer to device (within 100 ft). Forget "BOGASING M10" on your device and try pairing again.
No sound.	Volume is too low; incorrect mode selected; device not playing audio.	Increase volume on both speaker and connected device. Press the Mode button to switch to the correct input (Bluetooth, TF, AUX). Ensure audio is playing on your device.
Sound distortion.	Volume too high; low battery; interference.	Reduce volume. Charge the speaker. Move speaker away from other electronic devices.
TWS pairing fails.	Speakers are already connected to a device; speakers are too far apart.	Ensure both speakers are disconnected from any Bluetooth device. Place speakers close to each other. Try double-pressing the Power button on both speakers simultaneously to initiate TWS pairing.

## SPECIFICATIONS

Feature	Detail
Model Name	M10
Brand	BOGASING
Speaker Type	Portable Bluetooth Speaker
Connectivity Technology	Bluetooth 5.0, AUX, TF Card
Wireless Range	Up to 100 feet (30 meters)
Output Power	15 Watts
Waterproof Rating	IPX7
Battery Life	Up to 24 hours (at 1/2 volume)
Charging Port	USB-C
Dimensions (L x W x H)	3.94 x 3.94 x 2.24 inches (10 x 10 x 5.7 cm)
Item Weight	1.12 pounds (0.51 kg)
Material	Plastic, Silicone
Special Features	TWS Pairing, Handsfree Calling, Lightweight, Ultra-portable

# WARRANTY AND SUPPORT

BOGASING provides a worry-free 12-month warranty for the M10 Portable Bluetooth Speaker. This warranty covers manufacturing defects and ensures the quality of your product.

If you encounter any issues or have questions regarding your BOGASING M10 speaker, please do not hesitate to contact our customer support team. We are committed to providing outstanding service.

For support, please email us. (Specific email address not provided in source data, so I will state "email us" as per the description.)

You can also visit the official BOGASING store on Amazon for more information and product updates [BOGASING Amazon Store](#)

© 2024 BOGASING. All rights reserved.  
This manual is subject to change without notice.

## Related Documents - M10

	<p><a href="#">BOGASING M4 Wireless Speaker User Manual</a></p> <p>User manual for the BOGASING M4 Wireless Speaker, detailing specifications, button functions, LED indicators, TF/Cable playback, TWS pairing, and warranty information.</p>
	<p><a href="#">BOGASING Space M200 Wireless Bluetooth Speaker User Manual</a></p> <p>Comprehensive user manual for the BOGASING Space M200 wireless Bluetooth speaker, covering specifications, features, setup, TWS pairing, and troubleshooting.</p>
	<p><a href="#">BOGASING M5 Wireless Speaker User Manual</a></p> <p>Comprehensive user manual for the BOGASING M5 wireless Bluetooth speaker, detailing specifications, button functions, connectivity, TWS pairing, and troubleshooting for optimal use.</p>
	<p><a href="#">BOGASING S8Pro Max Wireless Bluetooth Speaker User Manual</a></p> <p>User manual for the BOGASING S8Pro Max wireless Bluetooth speaker, covering specifications, features, operation, TWS pairing, and troubleshooting.</p>
	<p><a href="#">BOGASING G6 Wireless Bluetooth Speaker User Manual</a></p> <p>User manual for the BOGASING G6 wireless Bluetooth speaker, detailing specifications, button functions, connectivity, TWS pairing, and troubleshooting.</p>
	<p><a href="#">BOGASING G4 Wireless Bluetooth Speaker User Manual</a></p> <p>Comprehensive user manual for the BOGASING G4 wireless Bluetooth speaker, covering specifications, button functions, LED indicators, connectivity options, TWS pairing, and troubleshooting.</p>