

iBaseToy Play Kitchen101

iBaseToy Play Kitchen101 Kids Toy Kitchen Playset Instruction Manual

Brand: iBaseToy | Model: Play Kitchen101

1. INTRODUCTION

Thank you for choosing the iBaseToy Play Kitchen101 Kids Toy Kitchen Playset. This manual provides essential information for safe assembly, operation, and maintenance of your new toy kitchen. Please read these instructions carefully before use and retain them for future reference.

Safety Warnings:

- **Adult supervision is required** during assembly and play.
- This product contains small parts and is not suitable for children under 3 years of age due to choking hazards.
- Ensure all parts are securely assembled before allowing children to play.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Batteries should be inserted with the correct polarity. Exhausted batteries should be removed from the toy.
- Only use clean water in the sink and stovetop water reservoir.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Main Kitchen Unit Components (base, side panels, countertop, range hood)
- 52 Pieces of Kitchen Food Accessories (various play food items, utensils, pots, pans)
- Assembly Hardware (screws, screwdriver)
- Water Bottle for stovetop

SUITABLE SIZE FOR TODDLERS



Figure 2.1: Included Kitchen Accessories. This image displays the full set of 52 kitchen food accessories, including various play food items, cooking utensils, pots, and pans.

3. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your iBaseToy Play Kitchen Playset. A screwdriver is required for battery installation.

- 1. Assemble the Base Unit:** Attach the red oven and microwave sections to the black bottom panel. Ensure they click securely into place.
- 2. Install Kitchen Shelves:** Insert the white support pole and the red circular shelf into the designated slots on the side of the oven unit. Place the black wire rack inside the oven compartment.
- 3. Assemble the Sink:** Secure the gray faucet into the sink basin on the main countertop piece.
- 4. Install Batteries:** Locate the battery compartment on the underside of the main countertop. Using a screwdriver, open the compartment and insert 3 x AA batteries (not included) with correct polarity. Close the compartment securely.
- 5. Attach Countertops:** Carefully align and attach the main white countertop piece to the top of the red base unit. Ensure all connection points are firm.
- 6. Mount Range Hood:** Place the black range hood onto the designated area on the back wall panel.

7. **Connect Back Wall:** Attach the white back wall panel, with the range hood, to the main countertop, ensuring it slots into the correct positions.
8. **Attach Washing Basket:** Clip the gray washing basket onto the side of the sink area.



Figure 3.1: Assembly Steps. This image provides a visual, numbered guide for assembling the kitchen playset, illustrating each component's placement.

4. OPERATING INSTRUCTIONS

4.1 Stovetop with Light, Sound, and Steam Effects

The stovetop features realistic cooking sounds, lights, and a cool steam effect.

1. **Add Water:** Use the provided water bottle to add approximately 40ml of clean water into the small hole on the stovetop burner.
2. **Activate:** Place a pot or pan on the burner and turn the knob. The burner will light up, emit cooking sounds, and produce a safe, cool steam effect.

SIMULATION STOVETOP

Realistic Light, Sound and Steam Effect

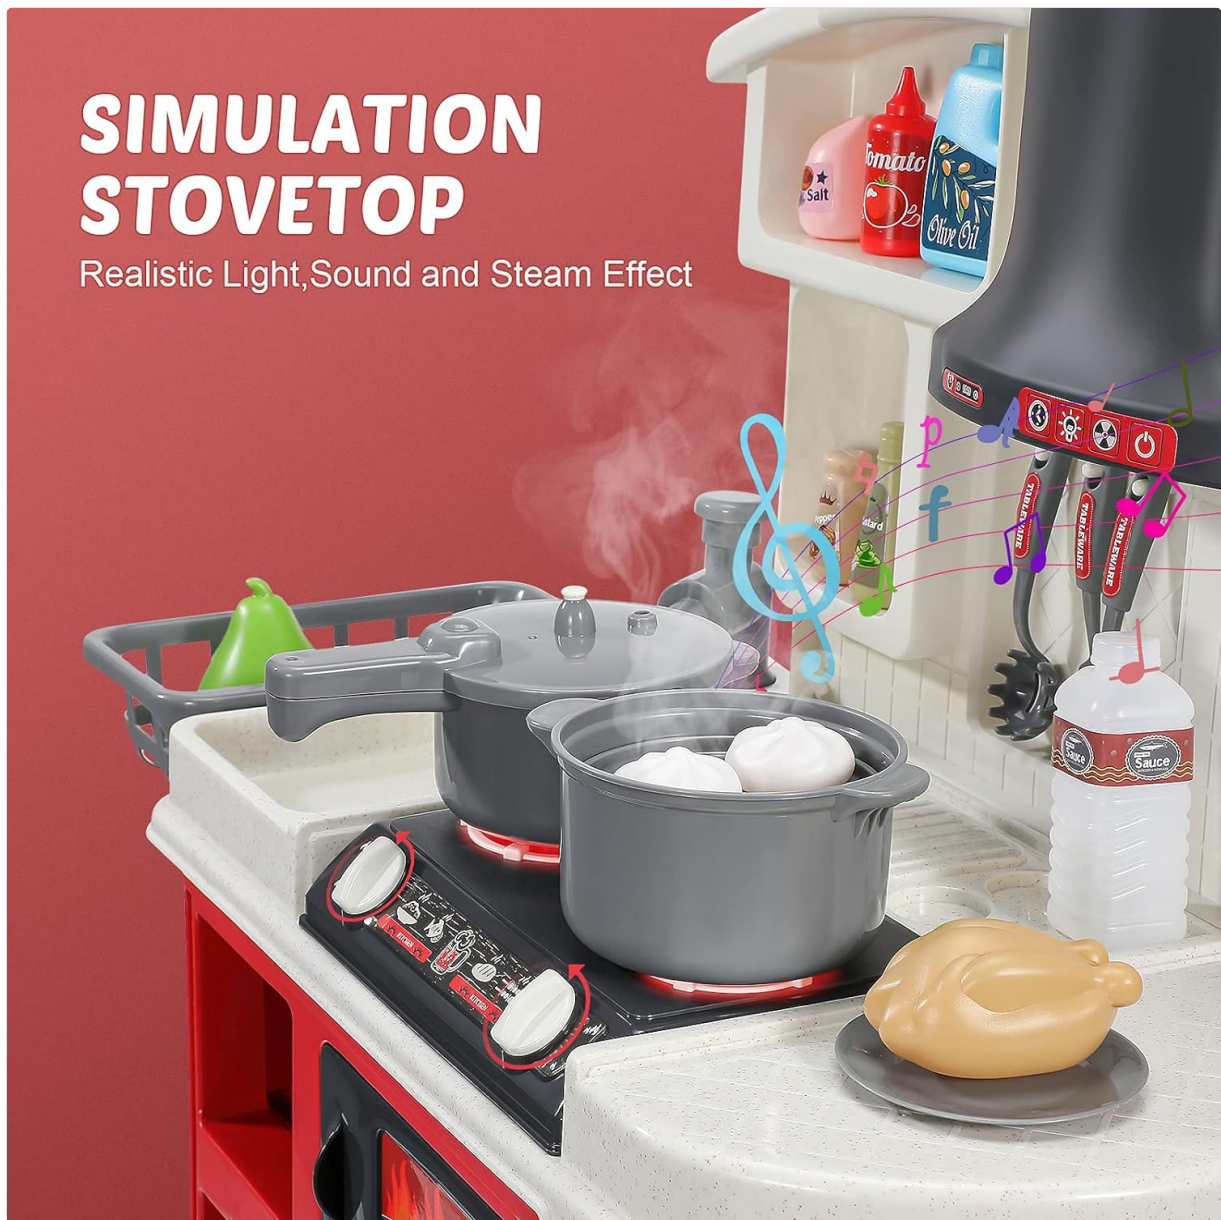


Figure 4.1: Stovetop Simulation. This image highlights the stovetop's realistic light, sound, and steam effects during operation.

4.2 Circulating Water Sink

The sink provides a realistic water experience with a circulating pump system.

1. **Fill Sink:** Pour a small amount of clean water into the sink basin.
2. **Pump Water:** Press the faucet handle to activate the water pump. Water will flow from the faucet, simulating a real sink. The water recirculates from the basin.



Figure 4.2: Kitchen Faucet Function. This image demonstrates the circulating water system of the sink, with water flowing from the faucet.

4.3 Oven and Microwave

The playset includes an oven and microwave for imaginative play.

1. **Open Doors:** The oven and microwave doors can be opened to place play food items inside.
2. **Pretend Cooking:** Children can simulate cooking and baking with the included accessories.

KITCHEN ACCESSORIES



Figure 4.3: Oven and Microwave. This image shows the functional oven and microwave doors, allowing for interactive play.

5. MAINTENANCE

5.1 Cleaning

- Wipe the kitchen playset surfaces with a soft, damp cloth.
- Do not immerse electrical components (stovetop, battery compartment) in water.
- Ensure all parts are dry before storing.

5.2 Battery Replacement

- When lights or sounds become faint, replace the batteries.
- Refer to Section 3, Step 4 for battery compartment location and replacement procedure.
- Dispose of used batteries responsibly.

6. TROUBLESHOOTING

- **No sound/light/steam from stovetop:**

Solution: Check if batteries are correctly installed and not depleted. Ensure enough water is added to

the stovetop reservoir.

- **Sink not pumping water:**

Solution: Ensure there is sufficient water in the sink basin for the pump to draw from. Check if batteries are installed and functional. Ensure the faucet handle is pressed completely.

- **Parts not fitting during assembly:**

Solution: Double-check the orientation of the parts against the assembly diagrams. Do not force parts together; if a part does not fit, re-examine the instructions.

7. SPECIFICATIONS

| | |
|---------------------------|----------------------|
| Product Dimensions | 22 x 9.5 x 26 inches |
| Item Weight | 6.39 pounds |
| ASIN | B09P19MP75 |
| Item Model Number | Play Kitchen101 |
| Manufacturer | iBaseToy |
| Recommended Age | 3 years and up |

