

[Manuals.plus](#) /

> [WTTHAI](#) /

> WTTHAI AH59-02434A Remote Control User Manual for Samsung SoundBar Systems

WTTHAI AH59-02434A

WTTHAI AH59-02434A Remote Control User Manual

For Samsung SoundBar Speaker Systems

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your WTTHAI AH59-02434A replacement remote control. This remote is designed to be compatible with various Samsung SoundBar Speaker Systems, offering a straightforward user experience without complex programming.

PRODUCT OVERVIEW



Image 1: Angled view of the WTTHAI AH59-02434A remote control, showing its ergonomic design and button layout.



Image 2: Front view of the WTTTHAI AH59-02434A remote control, highlighting all buttons and their labels.

The AH59-02434A remote control is a direct replacement designed for seamless operation with compatible Samsung SoundBar models. It features a standard button layout for easy navigation and control of your audio system.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: No programming or pairing is required. Once batteries are installed, the remote is ready for use with compatible Samsung SoundBar models.

OPERATING INSTRUCTIONS

Button Functions

The remote control provides direct access to various functions of your Samsung SoundBar. Refer to the image below for a visual guide to the buttons.

- **Power:** Turns the SoundBar on or off.
- **TV Power:** Controls the power of a connected TV (if compatible).
- **SAT SOURCE:** Selects satellite input source.
- **SOUND:** Cycles through sound modes.
- **EFFECT:** Activates sound effects.

- **SMART VOLUME:** Adjusts volume levels automatically.
- **3D SOUND:** Engages 3D sound mode.
- **VOLUME (+/-):** Increases or decreases the main volume.
- **S/W LEVEL (+/-):** Adjusts subwoofer level.
- **AUDIO SYNC:** Synchronizes audio with video.
- **MUTE:** Mutes or unmutes the sound.
- **REPEAT:** Repeats playback (if applicable).
- **DRC (Dynamic Range Control):** Adjusts dynamic range.
- **DIMMER:** Adjusts display brightness.
- **AUTO POWER:** Toggles auto power function.
- **Playback Controls (Play, Pause, Stop, Skip):** For media playback.
- **TV SOURCE:** Selects TV input source.
- **TV CH (+/-):** Changes TV channels.
- **TV INFO:** Displays TV information.
- **Navigation Pad (Up, Down, Left, Right, Enter):** For menu navigation.
- **TV VOL (+/-):** Increases or decreases TV volume.
- **TV MUTE:** Mutes or unmutes TV sound.
- **TV PRE-CH:** Returns to the previous TV channel.
- **TV EXIT:** Exits TV menu or function.

Compatible Samsung SoundBar Models

This remote control is compatible with the following Samsung SoundBar Speaker System models:

- HW-E550
- HW-E551
- HW-E450
- HW-E450C
- HW-E550/ZA
- HW-E551/ZA
- HW-E450/ZA
- HWE550
- HWE551
- HWE450
- HWE450C
- HWE550ZA
- HWE551ZA
- HWE450ZA

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with the proper polarity.
 - Replace old batteries with new 1.5V AAA alkaline batteries.
 - Check for any obstructions between the remote and the SoundBar's infrared receiver.
 - Ensure you are within the effective range of the SoundBar.
- **Specific buttons not working:**
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.
 - If only certain functions are affected, verify that your SoundBar model supports those specific functions.

SPECIFICATIONS

Model Number	AH59-02434A
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Compatible Devices	Samsung SoundBar Speaker Systems (HW-E550, HW-E551, HW-E450, HW-E450C, etc.)
Dimensions	Approximately 5.24 x 1.93 x 0.91 inches
Item Weight	Approximately 1.76 ounces (without batteries)
Manufacturer	WTTHAI

WARRANTY AND SUPPORT

For any issues or questions regarding your WTTHAI AH59-02434A remote control, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific warranty details and customer support information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question