

Revolution R270

Revolution R270 High-Speed Touchscreen Toaster Instruction Manual

Model: R270

INTRODUCTION

Welcome to your new Revolution R270 High-Speed Touchscreen Toaster. This smart appliance is designed to provide a customized toasting experience with its patented InstaGLO Technology and intuitive touchscreen interface. Please read this manual thoroughly before use to ensure safe and optimal operation.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies,

walls, and the like, when in operation.

- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- This appliance is for household use only.

PACKAGE CONTENTS

- Revolution R270 Toaster
- Quick Start Guide

PRODUCT OVERVIEW

The Revolution R270 Toaster combines advanced technology with a sleek design to deliver perfectly toasted items every time.

Key Features:

- **Touchscreen Interface:** Full-color display with customizable home menu.
- **InstaGLO Technology:** Ultra-fast heating system for consistent toasting.
- **34 Preset Bread Type Algorithms:** Optimized settings for various foods, including gluten-free.
- **3 Toasting Modes:** Fresh, Frozen, Reheat.
- **7 Toasting Shades:** From light to dark.
- **Automatic Lower-and-Lift Mechanism:** Gently lowers and raises food.
- **Crumb Tray with Reminder:** Easy cleaning and maintenance.
- **Accessory Modes:** Supports Panini Press and Warming Rack (sold separately).

Components:

The R270 is Retiring!

Check out the **NEW** upgrade,
R180 Connect Plus for upgraded features
and the ultimate toasting experience.



Front view of the Revolution R270 Toaster, showcasing the touchscreen interface with an English Muffin selection. The toaster has a brushed platinum finish.



Our CEO, Tom Klaff

Tom was introduced to the "dry toast problem" by his business partner Bruce. Realizing slow cooking and long preheat times were to blame, they set out to create revolutionary electric cooking system — now called InstaGLO®.

Revolution Cooking is on a mission to bring joy and ingenuity to cooking by re-inventing outdated appliances.

Side view of the Revolution R270 Toaster, highlighting its dimensions (8.4" H x 11.6" W x 6.4" D), premium brushed platinum finish, high-end stainless steel construction, analog or digital clock display, and crumb tray with on-screen reminder.

SETUP

- 1. Unpack:** Carefully remove the toaster and all packaging materials.
- 2. Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials. Ensure adequate ventilation around the appliance.
- 3. Power Connection:** Plug the power cord into a standard 120V AC electrical outlet. The touchscreen will illuminate.
- 4. Initial Setup:** Follow the on-screen prompts to set the time and any initial preferences.
- 5. First Use:** It is recommended to run a toast cycle without food on a medium setting (e.g., level 3 or 4) to burn off any manufacturing residues. A slight odor or smoke is normal during this initial use.

OPERATING INSTRUCTIONS

The Revolution R270 Toaster features an intuitive touchscreen for easy operation.

Basic Toasting:

- 1. Insert Food:** Place your bread, bagel, or other item into the toaster slots.
- 2. Activate Screen:** Tap the touchscreen to wake it up.
- 3. Select Food Type:** Scroll through the available food types (e.g., Bread, Bagel, Waffle, Pastry, English Muffin, Gluten-Free) and tap your selection.
- 4. Choose Mode:** Select "Fresh", "Frozen", or "Reheat" based on your food's state.
- 5. Adjust Browning:** Select your desired browning level from 1 (lightest) to 7 (darkest). The screen will display a visual representation of the toast shade.
- 6. Start Toasting:** Tap the "Start" button. The toaster will automatically lower the food and begin the toasting cycle.
- 7. Completion:** A chime will sound when toasting is complete, and the food will automatically rise.

The ONLY cooking appliance on Oprah's Favorite Things 2022



Toast Your Way

This toaster lives up to its name. It's revolutionary.

Consider this the iPhone of toasters. You can use the touchscreen to select one of seven brownness levels, and special heat technology means your bread gets crispy on the outside but stays soft and moist inside. Need to throw frozen slices in there? No prob! Craving a panini? It even has an attachment for that.



*accessories sold separately

The touchscreen interface of the R270 Toaster, displaying options for bread type, fresh/frozen/reheat modes, and a slider for browning levels.

Special Modes:

- **Gluten-Free Mode:** Select this option for gluten-free items. The toaster adjusts its algorithms for optimal results.
- **Panini Mode:** Use with the optional Panini Press accessory. Select "Panini" from the food type menu.
- **Warming Rack Mode:** Use with the optional Warming Rack accessory. Select "Warming Rack" from the food type menu.



Frustrated with slow,
inconsistent toasters,

We invented **INSTA****GLO**®

Faster.
Smarter.
Tastier.

Reaches full heat in
seconds, searing your
bread without drying it.

The Revolution R270 Toaster shown with the optional Panini Press and Warming Rack accessories, demonstrating its versatility beyond standard toast.

Customizing Your Home Menu:

You can save your favorite toasting modes to the home screen for quick access. Refer to the on-screen settings menu for customization options.



The touchscreen displaying the "Selection Preferences" menu, allowing users to select and save their favorite food types for quick access on the home screen.

Video Demonstrations:

Revolution Cooking with Patented InstaGLO Technology:

Your browser does not support the video tag.

This video highlights the patented InstaGLO Technology, explaining how it provides fast and consistent toasting results.

MAINTENANCE

Cleaning the Crumb Tray:

The toaster will periodically remind you to empty the crumb tray.

1. Unplug the toaster from the power outlet and allow it to cool completely.
2. Locate the crumb tray at the bottom front of the toaster.
3. Pull the tray out to remove it.
4. Discard crumbs and wipe the tray clean with a damp cloth.
5. Ensure the tray is completely dry before reinserting it into the toaster.

Exterior Cleaning:

Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or immerse the toaster in water.

TROUBLESHOOTING

If you encounter issues with your Revolution R270 Toaster, refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Toaster does not power on.	Not plugged in; power outage; circuit breaker tripped.	Ensure the toaster is securely plugged into a working outlet. Check your home's circuit breaker.
Food is not toasting evenly.	Incorrect food type selected; uneven food thickness.	Verify the correct food type is selected on the touchscreen. Ensure food is evenly sliced and fits properly in the slots.
Touchscreen is unresponsive.	Temporary software glitch; power cycle needed.	Unplug the toaster from the outlet for 30 seconds, then plug it back in.
Crumb tray reminder appears frequently.	Crumb tray is full.	Empty and clean the crumb tray as described in the Maintenance section.

SPECIFICATIONS

- **Brand:** Revolution
- **Model:** R270
- **Color:** Brushed Platinum
- **Material:** Stainless Steel
- **Product Dimensions:** 6.1"D x 11.6"W x 8.4"H
- **Wattage:** 1500 watts
- **Number of Slices:** 2
- **Voltage:** 120 Volts
- **Number of Settings:** 16 (referring to bread modes)
- **UPC:** 810034150073
- **Item Weight:** 6.96 pounds

WARRANTY AND SUPPORT

Warranty Information:

The Revolution R270 Toaster comes with a 1-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

Customer Support:

For warranty claims, technical assistance, or product inquiries, please visit the official Revolution Cooking website or contact their customer service department.

[Visit the Revolution Store on Amazon](#)

PRODUCT DISPOSAL

This product should not be disposed of with other household waste. To prevent possible harm to the

environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. Contact your local authority for information regarding collection points.

© 2026 Revolution. All rights reserved.