

[Manuals.plus](#) /

> [USARMT](#) /

> USARMT BN59-01315J Remote Control Instruction Manual for Samsung Smart TV

USARMT BN59-01315J

USARMT BN59-01315J Remote Control Instruction Manual

For Samsung Smart TV 4K UHD LED 6, 7, 8 Series

INTRODUCTION

This manual provides instructions for the USARMT BN59-01315J Remote Control, designed for use with various Samsung Smart TV 4K UHD LED models. This remote is pre-programmed and requires no setup or programming.

COMPATIBLE TV MODELS

The BN59-01315J remote control is compatible with the following Samsung 4K Ultra HD LED Smart TV models:

- UN43TU7000F, UN50TU7000F, UN55TU7000F, UN58TU7000F, UN58TU700DF, UN65TU7000F, UN65TU700DF, UN70TU7000F, UN70TU700DF, UN75TU7000F, UN75TU700DF
- UN43TU7000FXZA, UN50TU7000FXZA, UN50TU700DFXZA, UN55TU7000FXZA, UN58TU7000FXZA, UN65TU7000FXZA, UN65TU7000FXZC, UN70TU7000FXZA, UN75TU7000FXZA
- UN43TU7000FXZC, UN50TU7000FXZC, UN55TU7000FXZC, UN58TU7000FXZC, UN65TU7000FXZC, UN70TU7000FXZC, UN75TU7000FXZC

SETUP

The USARMT BN59-01315J remote control is pre-programmed and does not require any manual setup or programming. To begin using the remote:

1. **Install Batteries:** Open the battery compartment cover on the back of the remote control. Insert two AAA batteries (not included), ensuring correct polarity (+ and -).
2. **Close Compartment:** Replace the battery compartment cover securely.
3. **Ready for Use:** The remote control is now ready to operate your compatible Samsung Smart TV.

No programming or setting up is required



BN59-01315J



Image: Front view of the BN59-01315J remote control, highlighting that no programming is required.

OPERATING INSTRUCTIONS

This section outlines the basic functions and button layout of your BN59-01315J remote control.





Image: Front and back views of the BN59-01315J remote control, showing all buttons and the battery compartment area.

Button Functions:

- **Power ():** Turns the TV on or off.
- **Source:** Selects the input source (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly select channels.
- **Pre-CH:** Returns to the previously viewed channel.
- **Volume (+/-):** Adjusts the volume level.
- **Mute:** Mutes or unmutes the TV sound.
- **Channel (CH Up/Down):** Changes channels sequentially.
- **CH LIST:** Displays the channel list.
- **Navigation Pad (Up/Down/Left/Right/Enter):** Navigates menus and confirms selections.
- **Netflix, Prime Video, Samsung TV Plus:** Direct access buttons for streaming services.
- **Home ():** Accesses the Smart Hub or main menu.
- **Guide:** Displays the electronic program guide.
- **Return (↶):** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Functionality varies by application or TV menu.
- **Settings:** Accesses TV settings.
- **Info:** Displays information about the current program.
- **CC/VD:** Activates Closed Captions or Video Description.
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind):** Controls media playback.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, heat sources, and moisture.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

Problem	Solution
Remote control is not working.	<ul style="list-style-type: none"> ◦ Ensure batteries are inserted correctly with the correct polarity. ◦ Replace old batteries with new AAA batteries. ◦ Check for any obstructions between the remote and the TV's infrared receiver. ◦ Confirm the remote is pointed directly at the TV.
Buttons are unresponsive or sticky.	<ul style="list-style-type: none"> ◦ Clean the remote control surface with a soft, dry cloth. ◦ Avoid spilling liquids on the remote.
Remote works intermittently.	<ul style="list-style-type: none"> ◦ This often indicates low battery power. Replace batteries. ◦ Ensure there are no strong light sources (like direct sunlight) interfering with the IR signal.

SPECIFICATIONS

Feature	Detail
Model Number	BN59-01315J
Brand	USARMT
Compatible Devices	Samsung Smart Televisions
Special Feature	Universal (for specified Samsung models), Pre-programmed
Color	Black
Max Supported Devices	1
Product Dimensions	6 x 2 x 0.5 inches
Item Weight	3 ounces
Batteries Required	2 x AAA (not included)

WARRANTY AND SUPPORT

This product comes with a 30-Day Hassle-Free Return Policy. For customer questions or support, responses are typically

provided within 1 business day.

For further assistance, please refer to the seller's contact information on the purchase platform.

