

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NEEWER](#) /

› [NEEWER VS107 Aluminum Alloy Camera Cage Instruction Manual](#)

## NEEWER VS107

# NEEWER VS107 Aluminum Alloy Camera Cage Instruction Manual

## 1. INTRODUCTION

---

The NEEWER VS107 Aluminum Alloy Camera Cage is a versatile filmmaking rig designed to enhance stability and expand mounting options for a wide range of DSLR and mirrorless cameras. Constructed from durable CNC aluminum alloy, it features a top handle, dual grips, and an Arca-type base, providing multiple configurations for various shooting scenarios. This manual provides detailed instructions for assembly, operation, and maintenance of your camera cage.

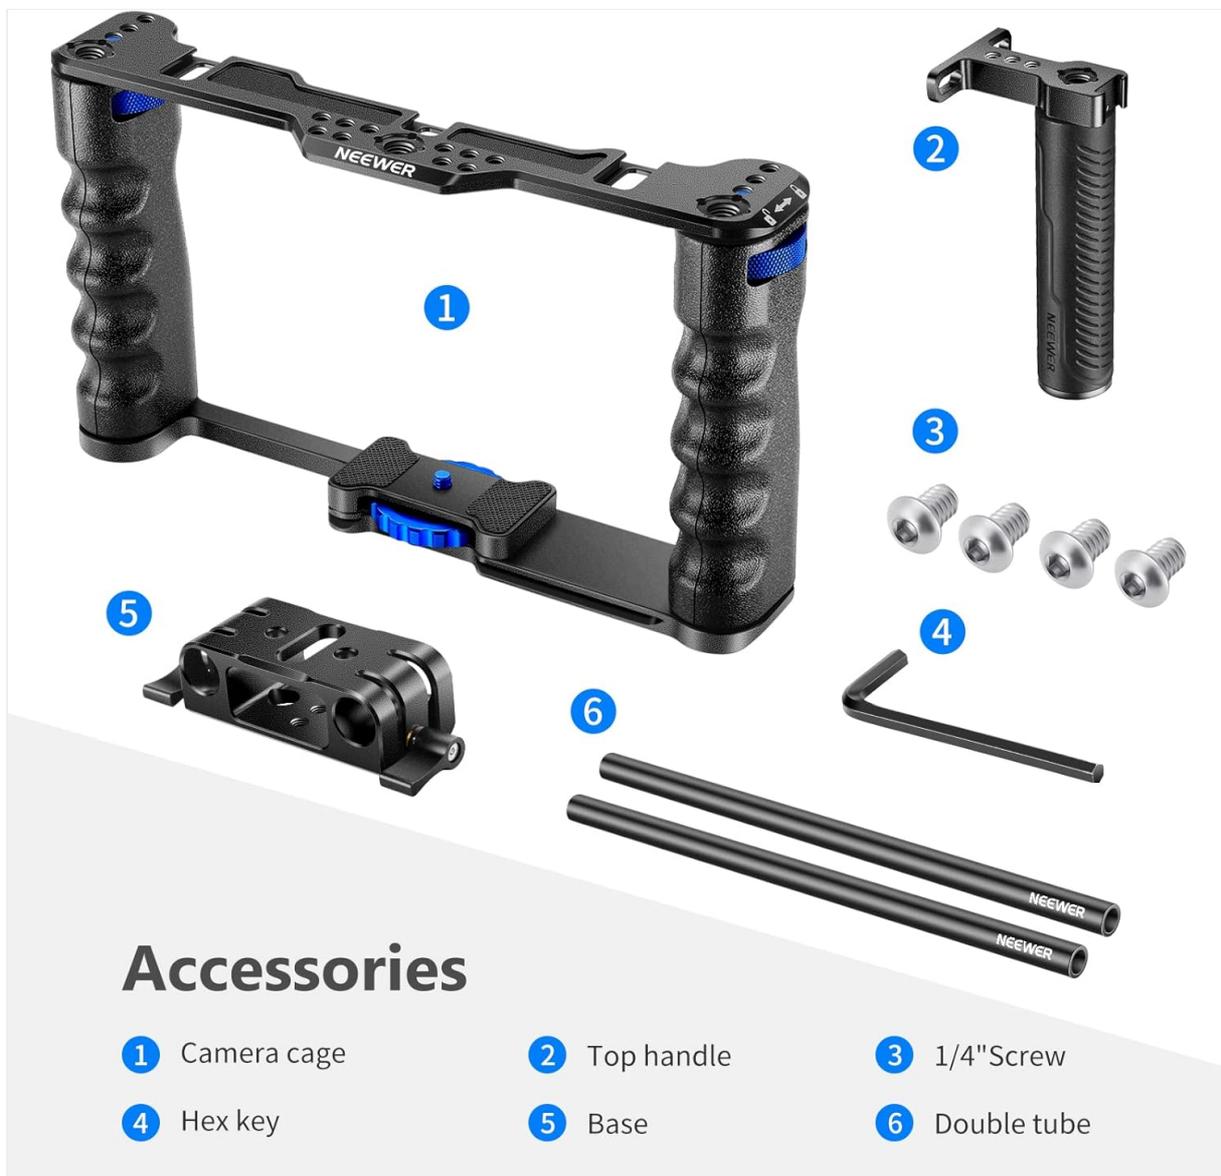


Figure 1: NEEWER VS107 Aluminum Alloy Camera Cage

## 2. WHAT'S IN THE BOX

Verify that all components are present before proceeding with assembly.

- 1 × Camera Cage
- 1 × Top Handle
- 4 × 1/4" Screws
- 1 × Hex Key
- 1 × Base
- 2 × Double Tubes (15mm rods)



## Accessories

- 1 Camera cage
- 2 Top handle
- 3 1/4" Screw
- 4 Hex key
- 5 Base
- 6 Double tube

Figure 2: Included Accessories

### 3. PRODUCT FEATURES

- **Universal Compatibility:** Engineered with premium CNC aluminum alloy, this camera cage is compatible with various DSLR and mirrorless cameras including Canon EOS 90D/6D Mark II, Sony Alpha 7C/7 III/7R IV/9 II/6600, Nikon Z 6/Z 6II/Z 7/Z 7II, Blackmagic 4K/6K, Fujifilm X-T4, Pentax, and others up to 33lb/15kg. *Note: Not suitable for lenses with support rings; remove support ring before use.*
- **Comprehensive Design:** Features a dual-rod base, two 15mm-diameter rods, and a standard 60mm rail gauge for attaching follow focus, hood, lens support, and other accessories.
- **Ergonomic Grips:** Includes a non-slip top silicone handle and two ergonomic handgrips with synthetic leather textures and finger contours for comfortable and secure handling.
- **Diverse Mounting Points:** The cage offers numerous 1/4" and 3/8" female threads, cold shoes, and ARRI locating holes for mounting accessories such as magic arms, cold shoe mount adapters, microphones, field monitors, and LED video lights.
- **Easy Camera Installation:** An integrated 1/4" aluminum alloy thumb screw with knurls provides quick, convenient, and tool-free camera installation. An enlarged silicone pad prevents wobbling and protects the camera from scratches.



## Versatile camera cage

The aluminum alloy camera cage is a simple and multi-functional platform, all-in-one design, more convenient to use.


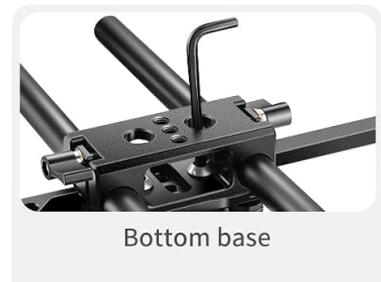


Figure 3: Camera Cage Components Overview

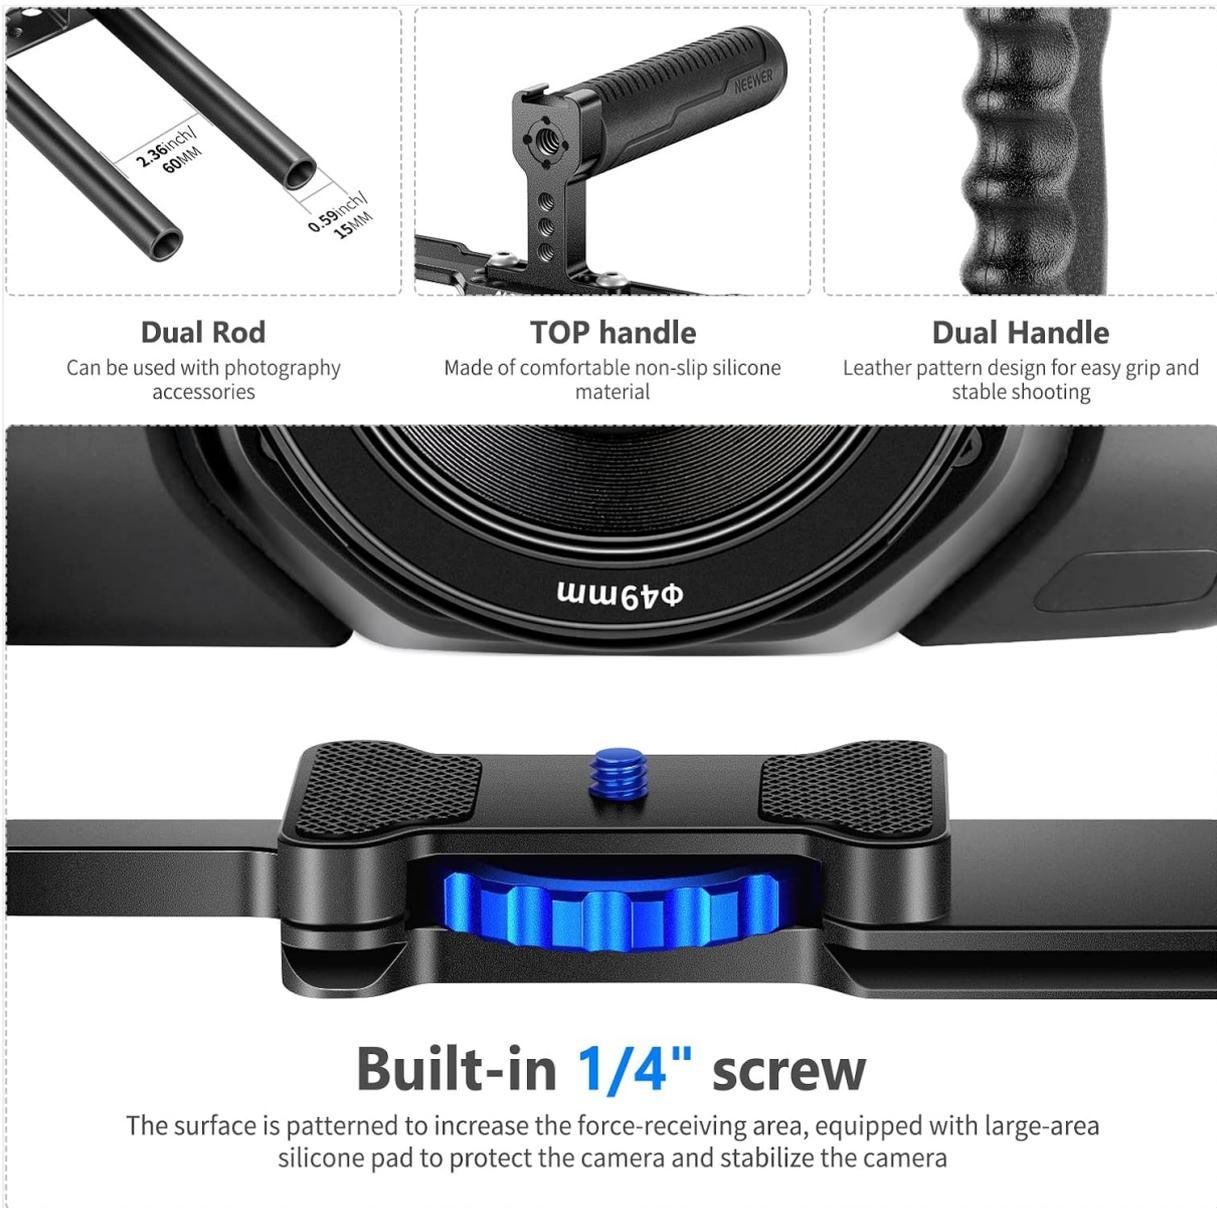

## Built-in 1/4" screw

The surface is patterned to increase the force-receiving area, equipped with large-area silicone pad to protect the camera and stabilize the camera

Figure 4: Key Features and Details

## 4. ASSEMBLY AND SETUP

- 1. Attach Camera to Base:** Secure your camera to the baseplate using the integrated 1/4" thumb screw. Ensure the camera is firmly seated on the enlarged silicone pad to prevent movement and scratches.
- 2. Mount Dual Grips:** Slide the dual grips onto the side rails of the cage. Use the adjustment knobs to secure them in your desired position for comfortable handling.
- 3. Install Top Handle:** Attach the top handle to the top plate of the cage using the provided 1/4" screws. This handle is ideal for low-angle shots and provides an additional grip point.
- 4. Attach 15mm Rods:** Insert the two 15mm rods into the dual-rod base. Use the 15mm rod release knobs to adjust their position and secure them. These rods are used for mounting additional accessories like a follow focus or matte box.

For a visual guide on setting up your camera cage, please refer to the video below:

Your browser does not support the video tag.

Video 1: Easy Set Up! (Seller Video)

This short video demonstrates the quick and easy setup process of the NEEWER camera cage, showing how to attach the camera and handles.

## 5. OPERATING INSTRUCTIONS

### 5.1 Handheld Operation

- Grasp the cage with the two contoured handgrips for stable shooting.
- Hold the top silicone handle for low-angle shots, providing a comfortable and secure grip.

### 5.2 Tripod Mounting

There are two primary methods to mount the camera cage on a tripod:

1. Screw the dual-rod base directly to a quick-release plate via the 1/4" screw holes.
2. Remove the dual-rod base and secure the cage directly to the tripod using the integrated Arca-type base.

### 5.3 Accessory Mounting

Utilize the numerous 1/4" and 3/8" female threads, cold shoes, and ARRI locating holes on the cage to attach various accessories such as microphones, field monitors, LED lights, and more, customizing your rig for specific shooting needs.

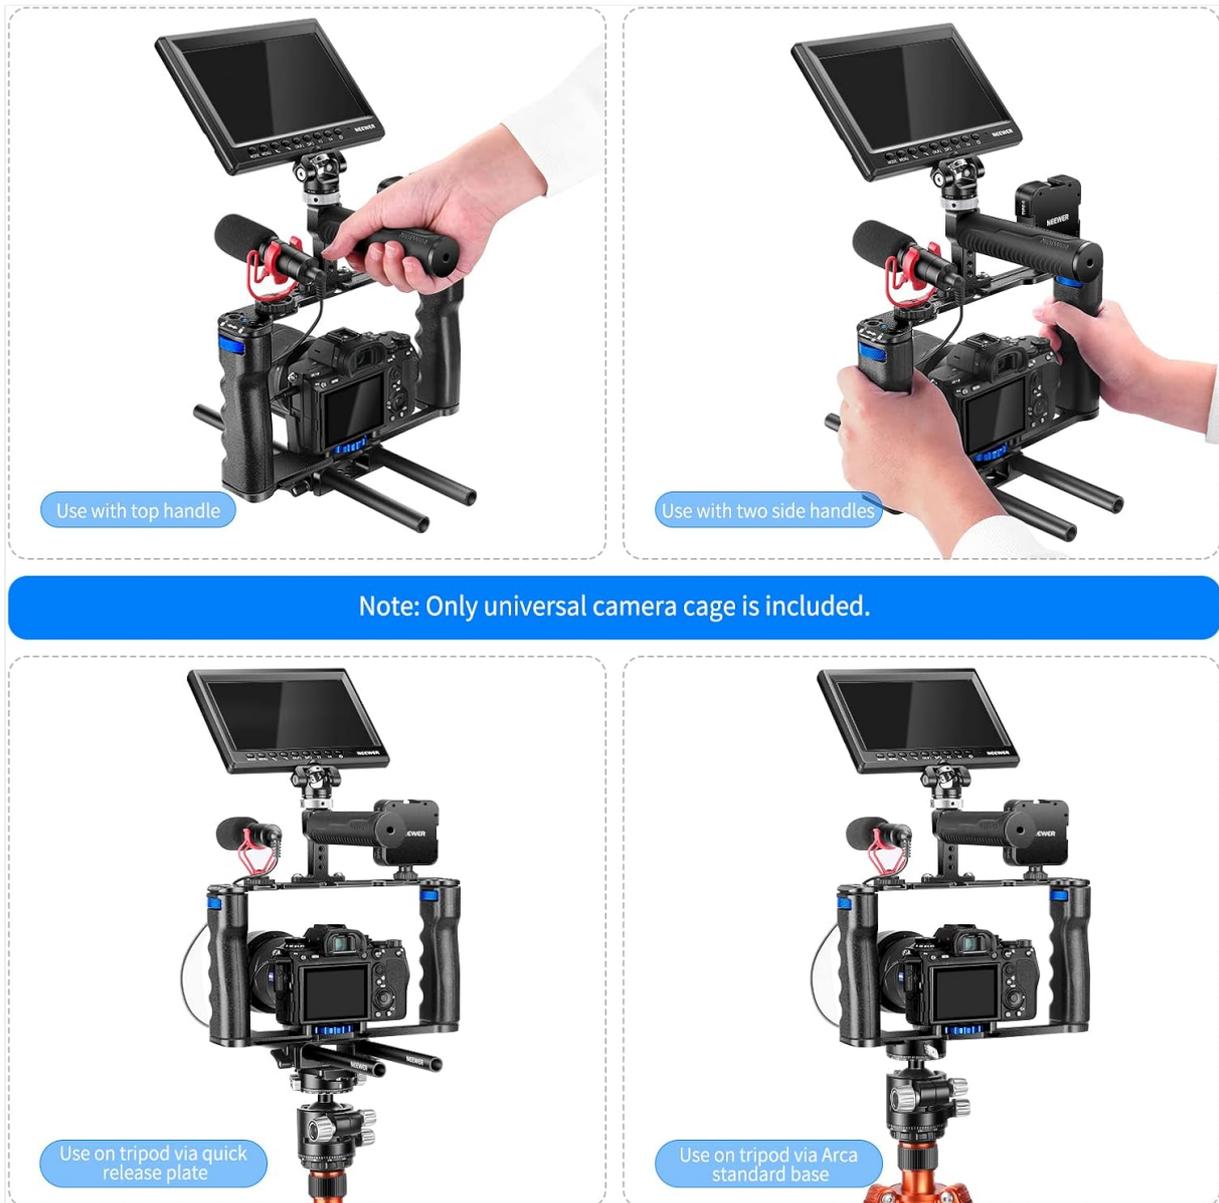


Figure 5: Multiple Usage Scenarios

## For more photographic accessories

Multiple Mounting Options, it can meet various shooting needs.

**Note:** Only universal camera cage is included.



Figure 6: Camera Cage with Mounted Accessories

**Your browser does not support the video tag.**

Video 2: A Must-Have for Any Videographer / Content Creator (Seller Video)

This video showcases the versatility and utility of the camera cage for various videography and content creation tasks.

**Your browser does not support the video tag.**

Video 3: Product Overview Video (Seller Video)

A general overview of the NEEWER camera cage, highlighting its features and potential applications.

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your NEEWER Camera Cage, follow these maintenance guidelines:

- **Cleaning:** Wipe the aluminum alloy surfaces with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly. Avoid abrasive cleaners or solvents.
- **Inspection:** Regularly check all screws and connections to ensure they are tight. Re-tighten any loose components using the provided hex key.
- **Storage:** Store the camera cage in a dry, dust-free environment when not in use.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your NEEWER Camera Cage, consider the following:

- **Camera Wobbling:** Ensure the 1/4" thumb screw is fully tightened and the camera is properly seated on the silicone pad. Check that your camera model is within the compatible weight limit (up to 33lb/15kg).
- **Accessories Not Fitting:** Verify that the accessory uses standard 1/4" or 3/8" threads, cold shoe mount, or ARRI locating pins. Ensure no debris is obstructing the mounting points.
- **Handles Loose:** Tighten the adjustment knobs on the dual grips and the screws on the top handle.

## 8. SPECIFICATIONS

---

Feature	Detail
Product Dimensions	9.8 x 10.4 x 11.8 inches (9.8"D x 10.4"W x 11.8"H)
Item Weight	2.51 pounds (1.14 Kilograms)
Item Model Number	VS107 Blue
Brand	NEEWER
Color	Blue
Compatible Devices	Camcorder, Camera, Monitor
UPC	191073071629

## 9. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official NEEWER website. Keep your proof of purchase for any warranty claims.