

YOTON YD105

YOTON 10.5-inch Portable DVD Player User Manual

Model: YD105

1. INTRODUCTION

Thank you for purchasing the YOTON 10.5-inch Portable DVD Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

This portable DVD player is designed for convenient entertainment on the go, featuring a high-definition swivel screen, long battery life, and versatile compatibility.

2. SAFETY INFORMATION

WARNING:

- Do not expose the device to rain or moisture to prevent fire or electric shock.
- Do not block ventilation openings. Ensure proper airflow around the device.
- Use only specified power adapters and accessories.
- Avoid extreme temperatures. Do not place the device near heat sources or in direct sunlight.
- Handle discs carefully. Do not touch the disc surface.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.
- Keep out of reach of small children to prevent accidental ingestion of small parts.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- YOTON 10.5-inch Portable DVD Player (Model: YD105)
- AC Power Adapter
- Car Charger (1.8m cable)
- 3-in-1 AV Cable
- Remote Control
- User Manual (this document)

YOTON Tailored for You



Figure 3.1: Included accessories with the YOTON Portable DVD Player.

4. PRODUCT OVERVIEW

The YOTON YD105 features a compact design with a 10.5-inch HD screen that can swivel for optimal viewing. It includes integrated stereo speakers and various ports for connectivity.



Figure 4.1: YOTON 10.5-inch Portable DVD Player.

4.1 Key Features

- **10.5-inch HD Swivel Screen:** The screen can rotate 90 degrees clockwise and 180 degrees counter-clockwise, allowing for multiple viewing angles or folding flat like a tablet.
- **Long Battery Life:** Built-in 2500 mAh rechargeable battery provides 4 to 6 hours of playback.
- **Last Memory Function:** Automatically resumes playback from the last watched position.
- **Region-Free Playback:** Compatible with DVDs from any region.
- **Wide Compatibility:** Supports DVD, CD, CD-R/RW, DVD, WMA, MPG/MPG2, DIVX, AVI formats. *Note: Does not support 1080P, 4K, or Blu-ray discs. Video resolution supported is 720x480.*
- **Multiple Power Options:** Can be powered by AC adapter, car charger, or the internal battery.
- **Dual Stereo Speakers:** Integrated speakers for clear audio.
- **Connectivity:** USB port, SD card slot, 3.5mm headphone jack, AV input/output.

5. SETUP

5.1 Charging the Battery

Before first use, fully charge the player's internal battery. Connect the AC power adapter to the DC IN port on the player and plug it into a wall outlet. The charging indicator light will illuminate. Once fully charged, the light may change color or

turn off.

For car use, connect the provided car charger to the DC IN port and plug it into your vehicle's cigarette lighter socket.

Various Power Options



AC adapters



Car charger



Built-in Battery

Figure 5.1: Powering the device using AC adapter, car charger, or built-in battery.

5.2 Powering On/Off

To power on the device, slide the POWER switch to the ON position. To power off, slide the switch to the OFF position.

6. OPERATING INSTRUCTIONS

6.1 Inserting a Disc

1. Gently open the disc cover.
2. Place the DVD or CD onto the spindle with the label side facing up.
3. Press down gently on the center of the disc until it clicks into place.
4. Close the disc cover. The player will automatically begin reading the disc.

Region-Free Playback



Doesn't Support Blu-ray Dics

DVD : Mini DVD, DVD-5, DVD-9, DVD-10, DVD-18
DVD+R, DVD-R, DVD-RW, DVD+RW

Figure 6.1: Inserting a compatible DVD or CD.

6.2 Basic Playback Controls

Use the buttons on the player or the remote control to manage playback:

- **PLAY/PAUSE:** Start or pause playback.
- **STOP:** Stop playback.
- **PREV/NEXT:** Skip to the previous or next chapter/track.
- **FF/REW:** Fast forward or rewind.
- **VOL+/VOL-:** Adjust volume.
- **SETUP:** Access the system settings menu.
- **MODE:** Switch between DVD/USB/SD card modes.

6.3 Screen Rotation

The 10.5-inch screen can be rotated for various viewing positions:

- The screen can swivel 90 degrees clockwise.
- It can then rotate 180 degrees counter-clockwise on its axis.
- This allows for a flat, tablet-like configuration or an upright display for multiple viewers.



Flexible Rotating Screen

Entertainment anywhere take fun to your kids

Figure 6.2: Flexible screen rotation for optimal viewing.

6.4 Last Memory Function

The player features a last memory function. If the device is powered off or the disc is removed during playback, it will automatically resume from the exact point where it stopped when powered on again or the disc is re-inserted.

Last Memory Function



Figure 6.3: Demonstration of the Last Memory Function.

6.5 Connecting to External Devices

The YOTON DVD player can be connected to other devices using the provided AV cable:

- **Sync Screen to Television:** Connect the AV OUT port of the DVD player to the AV IN ports of your television.
- **Sync Screen to Projector:** Connect the AV OUT port of the DVD player to the AV IN ports of your projector.
- **Sync Screen to Similar Player:** Connect the AV OUT of one player to the AV IN of another to share content.

Multi-Device Connection



Figure 6.4: Connecting to external displays.

For private listening, connect headphones to the 3.5mm headphone jack.

The player also supports media playback from USB drives and SD cards. Insert your USB drive into the USB port or SD card into the SD card slot, then select the corresponding mode using the MODE button.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the screen, use a soft, lint-free cloth specifically designed for electronics. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Always hold discs by their edges. Store discs in their cases when not in use to prevent scratches and dust accumulation.
- **Storage:** When not in use for extended periods, store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery drained; Power adapter not connected properly.	Charge the battery; Ensure power adapter is securely connected.
Disc not playing	Disc is dirty, scratched, or incompatible format (e.g., Blu-ray, 4K).	Clean the disc; Try another disc; Ensure disc is a supported format (DVD, CD, etc., not Blu-ray/4K).
No sound	Volume too low; Mute function active; External speakers/headphones not connected properly.	Increase volume; Disable mute; Check connections of external audio devices.
Picture distorted/No picture	Disc issue; External connection issue; Screen settings.	Clean disc; Check AV cable connection to TV/projector; Adjust screen settings in menu.
Remote control not working	Batteries low/dead; Obstruction between remote and player; Remote sensor blocked.	Replace remote batteries; Remove obstructions; Ensure remote is pointed at the player's sensor.

9. SPECIFICATIONS

Feature	Detail
Brand	YOTON
Model Number	YD105
Screen Size	10.5 Inches
Display Type	LCD
Display Resolution	720x480 pixels
Compatible Media Types	DVD, CD, CD-R/RW, WMA, MPG/MPG2, DIVX, AVI
Battery Type	Lithium-ion (2 included)
Battery Life	4-6 hours (approx.)
Connectivity Technology	USB, AV In/Out, 3.5mm Headphone Jack, SD Card Slot
Product Dimensions	26L x 19W x 4H centimeters
Item Weight	1005 Grams
Color	Black
Manufacturer	YOTON
Country of Origin	China

10. WARRANTY AND SUPPORT

YOTON provides a **six-month manufacturer's warranty** for this product. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any inquiries, please contact YOTON customer service. Details for contacting support are typically found on the product packaging or the official YOTON website.

Return Policy: This product is eligible for a 30-day refund/replacement return policy, as per standard retail terms. Please retain your proof of purchase for warranty validation.

© 2024 YOTON. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question