

[Manuals.plus](#) /

› [PHI VILLA](#) /

› PHI VILLA Outdoor Rattan Dining Chairs (6-Piece Set) Instruction Manual

PHI VILLA 6 PCS Rattan 1

PHI VILLA Outdoor Rattan Dining Chairs (6-Piece Set) Instruction Manual

Model: 6 PCS Rattan 1 | Brand: PHI VILLA

1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your PHI VILLA Outdoor Rattan Dining Chairs. Please read all instructions carefully before use and retain this manual for future reference.

2. SAFETY INFORMATION

- Always assemble according to the provided instructions.
- Do not exceed the maximum weight recommendation of 300 lbs (136 kg) to ensure safety and stability.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as necessary.
- Place chairs on a flat, stable surface to prevent tipping.
- Keep children away from the assembly area and ensure all small parts are out of reach.
- Avoid placing hot items directly on the rattan surface without protection.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer service.

- 6 x Rattan Dining Chairs
- 6 x Removable Cushions

- Installation Hardware (screws, washers, Allen wrench)
- User Manual (this document)



Image: Components of the PHI VILLA Outdoor Rattan Dining Chairs, including chair frames and cushions.

4. ASSEMBLY INSTRUCTIONS

Assembly is required for these chairs. All necessary hardware and tools are included. It is recommended to assemble the chairs on a soft, clean surface to prevent scratches.

1. Unpack all components and lay them out. Identify the chair back, seat, and armrests/legs.
2. Attach the armrests/legs to the chair seat using the provided screws and Allen wrench. Do not fully tighten yet.
3. Attach the chair back to the assembled seat and armrests/legs.
4. Once all parts are loosely connected, place the chair upright on a flat surface. Gently rock the chair to ensure it is level.
5. Evenly tighten all screws until secure. Do not overtighten.
6. Place the removable cushions onto the chair seats.



Interior heavy-duty steel frame

All Rattan Wrapped Steel Structure
Sturdy & Weather-Resistant



Image: Fully assembled PHI VILLA Outdoor Rattan Dining Chair with cushion.

Assembly Video Guide

Your browser does not support the video tag.

Video: Detailed assembly instructions for PHI VILLA Wicker Chairs. (Creator: PHI VILLA)

5. OPERATING INSTRUCTIONS

The PHI VILLA Outdoor Rattan Dining Chairs are designed for comfortable outdoor seating. They can be used in various configurations on patios, decks, yards, and porches.

- Use the chairs for dining, relaxation, or social gatherings.
- The lightweight design allows for easy repositioning as needed.
- Ensure cushions are properly seated for optimal comfort.



Image: PHI VILLA Rattan Dining Chairs arranged around an outdoor dining table.

6. MAINTENANCE

Proper care will extend the life and appearance of your PHI VILLA chairs.

6.1 Cleaning

- **Rattan Frame:** Wipe with a damp cloth and mild soap. Rinse thoroughly and dry completely. Avoid harsh chemicals or abrasive cleaners.
- **Cushions:** The cushion covers are made of water-resistant fabric and are removable with a zipper closure for easy cleaning. Hand wash with mild soap and water, or machine wash on a gentle cycle with cold water. Air dry only. Do not bleach or iron.

6.2 Storage and Protection

- While the chairs are weather-resistant, prolonged exposure to extreme weather conditions (heavy rain, snow,

intense sun) can affect their lifespan.

- Consider using outdoor furniture covers when not in use, especially during off-seasons, to protect against fading and wear.
- Store cushions indoors during inclement weather or when not in use for extended periods.



High-Quality Outdoor Wicker Chair

Providing You With A Comfortable Seating Experience

Image: Close-up view of the durable, hand-woven rattan material.

7. TROUBLESHOOTING

If you encounter any issues with your chairs, refer to the following common solutions:

Problem	Possible Cause	Solution
Chair feels wobbly	Loose screws or uneven surface.	Check and tighten all assembly screws. Ensure the chair is on a flat, level surface.

Problem	Possible Cause	Solution
Cushions fading	Prolonged exposure to direct sunlight.	Store cushions indoors or use furniture covers when not in use.
Rattan appears damaged	Physical impact or extreme weather exposure.	Contact customer service for repair advice or replacement parts.

8. SPECIFICATIONS

- **Brand:** PHI VILLA
- **Model:** 6 PCS Rattan 1
- **Material:** Weather-resistant Resin Wicker Rattan, Powder-coated Steel Frame
- **Color:** Brown Rattan with Blue Cushions
- **Chair Dimensions:** 23.8" (L) x 19.7" (W) x 34.4" (H)
- **Weight Capacity:** 300 lbs per chair
- **Assembly Required:** Yes
- **Included Components:** Cushion, Installation Hardware, User Manual



Image: Detailed dimensions of the PHI VILLA Outdoor Rattan Dining Chair.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the product packaging or contact PHI VILLA customer service directly. For any questions, missing parts, or support needs, please visit the [PHI VILLA Store on Amazon](#) or contact their support team.