

Manuals.plus /

› BOSCH /

› Bosch VeroBarista 400 Fully Automatic Coffee Machine User Manual

BOSCH TIS65429RW

Bosch VeroBarista 400 Fully Automatic Coffee Machine

Model: TIS65429RW

INTRODUCTION

This user manual provides essential information for the safe and efficient operation, maintenance, and care of your Bosch VeroBarista 400 Fully Automatic Coffee Machine. Please read these instructions carefully before using the appliance for the first time and keep them for future reference.

SAFETY INSTRUCTIONS

- Always connect the appliance to a properly grounded power outlet.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep children away from the appliance during operation.
- Do not operate the appliance if the power cord or plug is damaged.
- Use only original Bosch spare parts and accessories.
- Hot surfaces: The brewing unit and coffee spouts can become very hot during operation. Avoid direct contact.

PRODUCT OVERVIEW

The Bosch VeroBarista 400 is a fully automatic coffee machine designed to prepare a variety of coffee and milk specialties with ease. Key features include a high-quality ceramic grinder, OneTouch Function, and automatic cleaning programs.



Front view of the Bosch VeroBarista 400 fully automatic coffee machine, showcasing its control panel, coffee spouts, and milk frother wand, with two espresso cups beneath. This image illustrates the machine's sleek design and user interface.

SETUP

1. **Unpacking:** Carefully remove all packaging materials. Ensure all components are present and undamaged.
2. **Initial Cleaning:** Before first use, clean the water tank, drip tray, and coffee grounds container with warm water and a mild detergent. Rinse thoroughly.
3. **Water Tank:** Fill the removable water tank (1.7 l volume) with fresh, cold water up to the 'MAX' mark. Ensure it is correctly inserted into the machine.
4. **Bean Container:** Open the lid of the bean container and fill it with fresh coffee beans. Close the lid securely.



Close-up view of the coffee bean container, located on the top of the Bosch fully automatic coffee machine, filled with fresh coffee beans. This shows the proper way to load beans into the machine.

5. **Power Connection:** Plug the appliance into a grounded power outlet. The machine will perform an automatic rinsing program upon switching on.
6. **Water Filter (Optional):** If using a BRITA Intenza water filter, follow the filter's instructions for installation and activation. This helps reduce lime content and improve taste.

OPERATING INSTRUCTIONS

Turning On/Off

Press the **Start/Stop** button to turn the machine on or off. The machine will perform an automatic rinsing cycle when switched on and off.

Preparing Coffee Specialties (OneTouch Function)

The CoffeeComfort Display allows you to select and prepare various coffee and milk specialties by simply touching the sensor fields.

1. Place a cup or glass under the coffee outlet. The coffee outlet and milk frother are height-adjustable (up to 14 cm) to accommodate various cup sizes.
2. Select your desired beverage (e.g., Espresso, Coffee, Cappuccino, Latte Macchiato) from the display.
3. For extra-strong coffee with less bitterness, select the **AromaDouble Shot** option if available for your chosen drink. This involves two grinding and brewing processes.
4. The machine will automatically grind the beans and brew your coffee. For milk-based drinks, ensure the milk frother is connected to a milk container.
5. You can save up to 2 personalized beverages using the **Favorites** function.
6. The **IndividualCup Volume** feature allows you to adjust cup sizes individually to ensure your cup is filled to your preference.

Using Ground Coffee

A separate chute is provided for ground coffee, suitable for caffeine-free coffee or other pre-ground varieties. Open the chute, add one scoop of ground coffee, and select the 'Ground Coffee' option on the display before brewing.



A display of various coffee beverages, including espresso, cappuccino, and latte macchiato, served in different cups and glasses, demonstrating the machine's versatility in preparing a wide range of drinks.

MAINTENANCE

Regular cleaning and maintenance ensure the longevity and optimal performance of your coffee machine.

- **Removable Brewing Unit:** The brewing unit can be easily removed for hygienic cleaning under running water. Refer to the appliance's internal short user manual for specific removal instructions.
- **Automatic Rinsing:** The machine performs an automatic rinsing program when switching on and off.
- **autoMilk Clean:** Automatic steam cleaning occurs after every milk-based drink to ensure hygiene and prevent milk residue buildup.
- **Milk Frother:** The milk frother is removable and dishwasher-proof for thorough cleaning.
- **Drip Tray and Coffee Grounds Container:** Empty and clean the drip tray and coffee grounds container regularly. The machine will prompt you when they need emptying.
- **Descaling:** The machine will indicate when descaling is required. Use a suitable descaling solution as per the instructions. If using a BRITA Intenza water filter, descaling frequency will be reduced.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------------|---|---|
| No coffee is dispensed. | Water tank empty; coffee beans empty; brewing unit blocked. | Refill water tank; refill coffee beans; clean brewing unit. |
| Milk not frothing correctly. | Milk frother dirty or blocked; milk type unsuitable. | Clean milk frother thoroughly; use cold, fresh milk with appropriate fat content. |
| Machine displays 'Descale'. | Limescale buildup. | Perform descaling program as per instructions. |
| Coffee tastes weak. | Grind setting too coarse; insufficient coffee quantity. | Adjust grinder to a finer setting; select a stronger coffee strength. |

SPECIFICATIONS

Brand: BOSCH

Model Number: TIS-65429RW

Color: Black

Product Dimensions: 1 x 1 x 0.9 cm

Power / Wattage: 1500 watts

Voltage: 240 Volts

Material: Ceramic (grinder)

Special Features: Milk Frother, Permanent Filter, Thermal, Timer, Water Filter

Item Weight: 249 g

Coffee Maker Type: Espresso Machine

Specific Uses For Product: Cappuccino, Espresso, Latte Macchiato, Coffee, Americano, Flat White

WARRANTY AND SUPPORT

Your Bosch VeroBarista 400 Fully Automatic Coffee Machine comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage.

For technical support, service, or to order spare parts, please contact Bosch customer service in your region. Contact details can typically be found on the Bosch official website or in the documentation provided with your appliance.

