

[Manuals.plus](#) /

› [SQQBZZ](#) /

› SQQBZZ 7-inch Portable DVD Player User Manual

SQQBZZ SQQBZZ-006

SQQBZZ 7-inch Portable DVD Player User Manual

Model: SQQBZZ-006



INTRODUCTION

This manual provides detailed instructions for the operation, maintenance, and troubleshooting of your SQQBZZ 7-inch Portable DVD Player. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.



Image: The SQQBZZ 7-inch Portable DVD Player with its remote control, showcasing its compact design.

WHAT'S IN THE BOX

Upon opening the package, please verify that all the following items are included:

- Portable DVD Player
- AC Adapter
- Remote Control
- AV Cable
- Car Adapter

KEY FEATURES

- **Versatile Power Options:** The player features a built-in 2000 mAh rechargeable lithium battery providing up to 5 hours of video playback. It also includes an AC charger for home use and a car charger for on-the-go convenience, allowing use while charging.



Image: Illustration of the three power modes: AC adapter, car adapter, and internal battery.

- **Extensive Multimedia Support:** Directly plays various disc formats including DVD, CD-R/RW, DVD-R/+R, DVD+RW/-RW, VCD, and SVCD. It is region-free. Additionally, it supports media playback from USB drives and SD cards up to 32GB, compatible with MP3/WMA/WAV audio, JPEG images, and MPEG2/AVI/DIVX video formats.



Image: The DVD player shown with a USB flash drive and an SD card, highlighting its compatibility with various digital media.

- **Swiveling Screen:** The 7-inch screen offers a 270-degree rotation and 180-degree flip feature, allowing it to be used as a tablet or easily mounted for car headrest viewing.



Image: A visual representation of the screen's 270-degree swivel and 180-degree flip capabilities.

- **Enhanced Audio:** Integrated with two powerful stereo speakers for louder and clearer sound. A 3.5mm earphone jack is also available for private listening.



Image: The DVD player with visual indicators pointing to its dual built-in speakers.

- **User-Friendly Design:** Simple operating system and large volume controls make it suitable for users of all ages.



Image: Close-up of the DVD player's control panel, showing clearly labeled buttons for easy operation.

SETUP

Charging the Battery

Before first use, fully charge the player's internal battery. Connect the AC adapter to the DC IN port on the player and plug it into a wall outlet. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off (refer to specific indicator behavior in the product's quick start guide if available). For car use, connect the car adapter to the DC IN port and your vehicle's cigarette lighter socket.

Connecting to External Devices

The player supports AV IN and AV OUT connections. Use the provided AV cable to connect the player to a TV or another display device for synchronized screen playback. Ensure the correct input/output ports are used on both devices.

Sync Screen Playback

AV OUT Function Support Connecting to TV or Other Players.

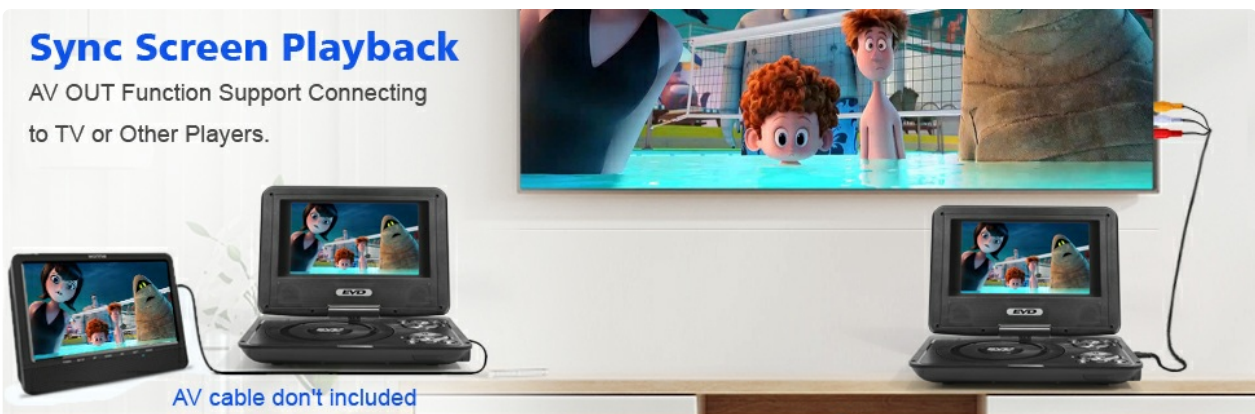


Image: The portable DVD player connected to a television, demonstrating its AV OUT function for larger screen viewing.



Image: A detailed view of the player's side ports, including USB, SD Card slot, headphone jack, AV In/Out, and DC In.

OPERATING INSTRUCTIONS

Powering On/Off

To power on the device, slide the power switch to the "ON" position. To power off, slide the switch to "OFF".

Playing a DVD/CD

1. Open the disc cover gently.
2. Place the DVD or CD onto the spindle with the label side facing up.
3. Close the disc cover securely.
4. The player will automatically detect and begin playing the disc. Use the on-device controls or remote control for playback functions (Play, Pause, Stop, Skip, Volume).

Note: This player supports standard DVD, CD-R/RW, DVD-R/+R, DVD+RW/-RW, VCD, and SVCD formats. It does not support Blu-ray discs, 1080P, or 4K video resolutions.

Playing from USB/SD Card

Insert a USB drive into the USB port or an SD card into the SD card slot. The player will automatically switch to the corresponding media mode or prompt you to select it. Navigate through your files using the control buttons or remote. Supported formats include MP3/WMA/WAV for audio, JPEG for images, and MPEG2/AVI/DIVX for video (up to 720x480 resolution for video, 2650x1440 for images).

Adjusting the Screen

The 7-inch screen can be swiveled up to 270 degrees and flipped 180 degrees to achieve optimal viewing angles or to convert the player into a tablet-like form factor. Gently adjust the screen to your desired position.

Audio Output

Utilize the built-in dual stereo speakers for audio playback. For private listening, connect standard 3.5mm headphones to the earphone jack on the right side of the player.

Official Product Video

Your browser does not support the video tag.

Video: An official product video from SQQBZZ demonstrating features and usage common to their portable DVD players, including swivel screen functionality, button controls, and various connectivity ports. (Duration: 0:47)

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the screen, use a screen-specific cleaning solution and a microfiber cloth. Avoid abrasive cleaners or solvents.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.
- **Storage:** When not in use for extended periods, store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Life:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	Battery is depleted; Power adapter not connected or faulty.	Charge the battery using the AC or car adapter. Ensure power connections are secure.
Disc not playing / "No Disc" error.	Disc is dirty, scratched, or incompatible format; Disc not inserted correctly.	Clean the disc with a soft cloth. Ensure the disc is placed correctly. Verify disc format is supported (no Blu-ray, 1080P, 4K).
Low volume from speakers.	Volume set too low; Audio settings.	Increase volume using the VOL+ button or remote. Check audio settings in the player's menu.

Problem	Possible Cause	Solution
No picture when connected to TV.	Incorrect AV cable connection; TV input not selected correctly.	Ensure AV cable is securely connected to AV OUT on player and AV IN on TV. Select the correct AV input source on your TV.
USB/SD card not recognized.	Card/drive not inserted correctly; Incompatible format or file system; Capacity too large.	Reinsert the card/drive. Ensure it's formatted to FAT32 (common for smaller devices). Max capacity 32GB. Check file formats.

SPECIFICATIONS

Feature	Detail
Model Number	SQQBZZ-006
Screen Size	7 Inches (Visible screen diagonal: 18 cm)
Display Type	LCD
Battery Type	1 Lithium Polymer battery (2000 mAh)
Battery Life	Up to 5 hours video watching
Supported Media Types	DVD, CD-R/RW, DVD-R/+R, DVD+RW/-RW, VCD, SVCD, USB (up to 32GB), SD Card (up to 32GB)
Supported File Formats	MP3/WMA/WAV (audio), JPEG (images), MPEG2/AVI/DIVX (video)
Max Video Resolution	720x480 (Does not support 1080P, 4K, or Blu-ray discs)
Max Image Resolution	2650x1440
Swivel Screen	270 degrees rotation, 180 degrees flip
Speakers	Dual built-in stereo speakers
Connectivity	USB, SD Card, 3.5mm Earphone Jack, AV In, AV Out, DC In
Color	Black
Item Weight	2.59 pounds
Package Dimensions	13.3 x 8.7 x 3.23 inches

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact SQQBZZ customer service directly. Keep your purchase receipt as proof of purchase for warranty

claims.

For further assistance, you may visit the official SQQBZZ store page on Amazon:[SQQBZZ Store](#)