

Manuals.plus /

- › Epson /
- › Epson EcoTank ET-4800 Wireless All-in-One Supertank Printer User Manual

Epson C11CJ65201

Epson EcoTank ET-4800 Wireless All-in-One Supertank Printer User Manual

Model: ET-4800 | Brand: Epson

INTRODUCTION

The Epson EcoTank ET-4800 is an innovative cartridge-free all-in-one supertank printer designed for home offices. It offers printing, scanning, copying, and faxing capabilities with high-capacity, easily refillable ink tanks, reducing the need for frequent ink cartridge replacements. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your printer.



Figure 1: Epson EcoTank ET-4800 printer with its cartridge-free ink system and included ink bottles.

WHAT'S IN THE BOX

- EcoTank ET-4800 all-in-one printer

- Manual
- CD-ROM for product setup
- Power cord
- 1x bottle 522 Black (65 mL) ink
- 1x bottle each 522 Cyan, Magenta, Yellow (65 mL) ink

SETUP

1. Initial Ink Filling

The EcoTank ET-4800 uses high-capacity ink tanks instead of traditional cartridges. Follow these steps to fill the ink tanks:

1. Open the ink tank unit cover on the side of the printer.
2. Open the cap for each color ink tank (Black, Yellow, Magenta, Cyan).
3. Unpack the corresponding ink bottle. Each bottle has a unique key to prevent accidental filling of the wrong color.
4. Insert the ink bottle into the filling port. The ink will automatically stop flowing when the tank is full.
5. Remove the bottle and close the ink tank cap securely. Repeat for all colors.

Stress-Free, Cartridge-Free Printing

ecotank®
80 MILLION SOLD
Worldwide 2011 - 3/2023

Use Epson's exclusive **EcoFit® bottles** to easily refill the high-capacity ink tanks, with up to **2 years of ink included in the box**—and with every replacement ink set¹



¹ Based on average monthly document print volumes of about 125 pages.

Figure 2: The cartridge-free design allows for easy and mess-free ink refilling using EcoFit bottles.

2. Power On and Basic Configuration

1. Connect the power cord to the printer and a wall outlet.
2. Press the power button to turn on the printer.
3. Follow the on-screen instructions on the color display to select your language, country, and initial setup.

3. Connectivity (Wi-Fi and Ethernet)

The ET-4800 supports both wireless (Wi-Fi) and wired (Ethernet) connections.

- **Wi-Fi Setup:** On the printer's control panel, navigate to Wi-Fi Setup. Select your network from the list and enter the password.
- **Ethernet Setup:** Connect an Ethernet cable from your router to the printer's Ethernet port. The printer will automatically detect the connection.

EcoTank® ET-4800

Wireless | Print | Copy | Scan | Fax | Ethernet

HOME

HOME OFFICE

SMALL BUSINESS

PHOTO/GRAPHICS

Print Speeds[†]

10
BLACK
ISO PPM

5
COLOR
ISO PPM



Mobile device
not included.



Wi-Fi®
Ethernet



Auto
Copy/Scan



1.44" Color
Display



Mobile
Printing¹

[†] Black and color print speeds are measured in accordance with ISO/IEC 24734. Actual print times will vary based on factors including system configuration, software, and page complexity. For more information, visit www.epson.com/printspeed

¹ Most features require an Internet connection to the printer, as well as an Internet- and/or email-enabled device. For a list of Epson Connect™ enabled printers and compatible devices and apps, visit www.epson.com/connect

Figure 3: The printer supports Wi-Fi and Ethernet connectivity, enabling mobile printing and network integration.

OPERATING THE PRINTER

Loading Paper

Load paper into the rear paper feeder. Adjust the paper guides to fit the paper size. The maximum input sheet capacity is 100 sheets.

Printing

You can print from a computer, smartphone, or tablet. Ensure the printer is connected to your network. For optimal results, use the Epson Smart Panel app for mobile printing.

- **From Computer:** Select "Print" from your application, choose the ET-4800, and adjust settings as needed.
- **From Mobile Device:** Download the Epson Smart Panel app. Select your printer, choose the document or photo, and adjust print settings.

Scanning

The ET-4800 features a high-resolution flatbed scanner and an Automatic Document Feeder (ADF).

- **Flatbed Scanning:** Place the document or photo face-down on the scanner glass.
- **ADF Scanning:** Load multiple pages face-up into the ADF.
- Initiate the scan from the printer's control panel or from your computer/mobile device using Epson software.

Copying

Place the document on the scanner glass or in the ADF. Use the printer's color display to select "Copy" and adjust settings like number of copies (up to 100), color/black & white, and paper size.

Faxing

The ET-4800 includes fax functionality. Connect a phone line to the printer. Use the control panel to enter the recipient's fax number and send documents.

MAINTENANCE

Checking Ink Levels

You can visually check the ink levels through the transparent ink tanks on the front of the printer. The printer's display or the Epson Smart Panel app can also provide ink level status.

Cleaning the Print Head

If print quality declines (e.g., missing lines, faded colors), perform a print head cleaning. This can be done through the printer's maintenance menu or Epson software on your computer.

Nozzle Check

Before cleaning, perform a nozzle check to diagnose print quality issues. This prints a pattern that helps identify clogged nozzles.

TROUBLESHOOTING

Problem	Possible Solution
Printer not turning on	Ensure power cord is securely connected to both printer and outlet. Check the power outlet.
Poor print quality	Perform a nozzle check and print head cleaning. Ensure genuine Epson ink is used. Check paper type settings.
Printer not connecting to Wi-Fi	Verify Wi-Fi password. Ensure printer is within range of the router. Restart printer and router.
Paper jams	Remove all jammed paper carefully. Ensure paper is loaded correctly and not creased or torn.

SPECIFICATIONS

- **Model Name:** EcoTank ET-4800

- **Functions:** Print, Scan, Copy, Fax
- **Printing Technology:** Inkjet (Micro Piezo Heat-Free Technology)
- **Connectivity:** Wi-Fi, Ethernet, USB
- **Max Print Speed (Black):** 10 ppm
- **Max Print Speed (Color):** 5 ppm
- **Max Print Resolution (Black):** 1200 dpi
- **Scanner Type:** Flatbed, Sheetfed
- **Max Input Sheet Capacity:** 100 sheets
- **Display Type:** Color display
- **Product Dimensions:** 13.6"D x 14.7"W x 9.3"H
- **Item Weight:** 11 pounds
- **Power Consumption:** 12 Watts (On-mode)
- **Duplex Printing:** Yes (Auto)

WARRANTY & SUPPORT

The Epson EcoTank ET-4800 comes with a limited warranty. For detailed warranty information, please refer to the official documentation.

- **Return Policy:** 30 days for refund/replacement.
- **Protection Plans:** Available for 3-Year and 4-Year coverage.
- **Official User Manual (PDF):** [Download Here](#)
- **Installation Manual (PDF):** [Download Here](#)
- **User Guide (PDF):** [Download Here](#)
- For further support, visit the official Epson website or contact customer service.