

[Manuals.plus](#) /

› [GYMAX](#) /

› GYMAX 2-Piece Kids Carry-On Luggage Set (12" & 18") with Spinner Wheels, Astronaut Model GM1504 Instruction Manual

GYMAX GM1504

GYMAX 2-Piece Kids Carry-On Luggage Set (Astronaut)

Model: GM1504

1. INTRODUCTION

This instruction manual provides essential information for the proper use and maintenance of your GYMAX 2-Piece Kids Carry-On Luggage Set. This set includes one 18-inch rolling suitcase and one 12-inch backpack, designed for children's travel needs. Please read this manual thoroughly before using the product to ensure safe and optimal performance.



Image 1: The GYMAX 2-Piece Kids Carry-On Luggage Set featuring an astronaut design.

2. PRODUCT FEATURES

- **Durable Construction:** Both the suitcase and backpack are crafted from durable ABS material, providing resistance to wear and scratches. The hard outer shell is further protected by a scratch-resistant, waterproof PC film.
- **Adjustable Handle and Straps:** The suitcase features a retractable handle with adjustable height, accommodating children of various heights. The backpack includes adjustable shoulder straps for a comfortable fit.
- **Ergonomic Design:** Wide shoulder straps on the backpack are designed to reduce pressure on a child's shoulders. The suitcase is equipped with 360-degree omni-directional spinner wheels for effortless movement.
- **Waterproof and Easy Maintenance:** The waterproof PC film allows for easy cleaning with a damp cloth.
- **Spacious and Lightweight:** The set offers ample storage capacity while remaining lightweight, allowing children to pack their belongings independently.



Image 2: Key features of the luggage set, including strong construction and large capacity.

3. SETUP AND INITIAL USE

1. **Unpacking:** Carefully remove all components from the packaging. Inspect for any shipping damage.

2. **Protective Film:** The suitcase is covered with a clear protective film to prevent scratches during transit. This film can be peeled off for a pristine finish, or left on for added protection during initial use.
3. **Handle Adjustment (Suitcase):** To adjust the telescopic handle, press the button located on the top of the handle and extend or retract it to the desired height. Release the button to lock it in place.
4. **Strap Adjustment (Backpack):** Adjust the shoulder straps of the backpack to fit the child's shoulders comfortably. Ensure the backpack sits securely on their back without excessive sagging.

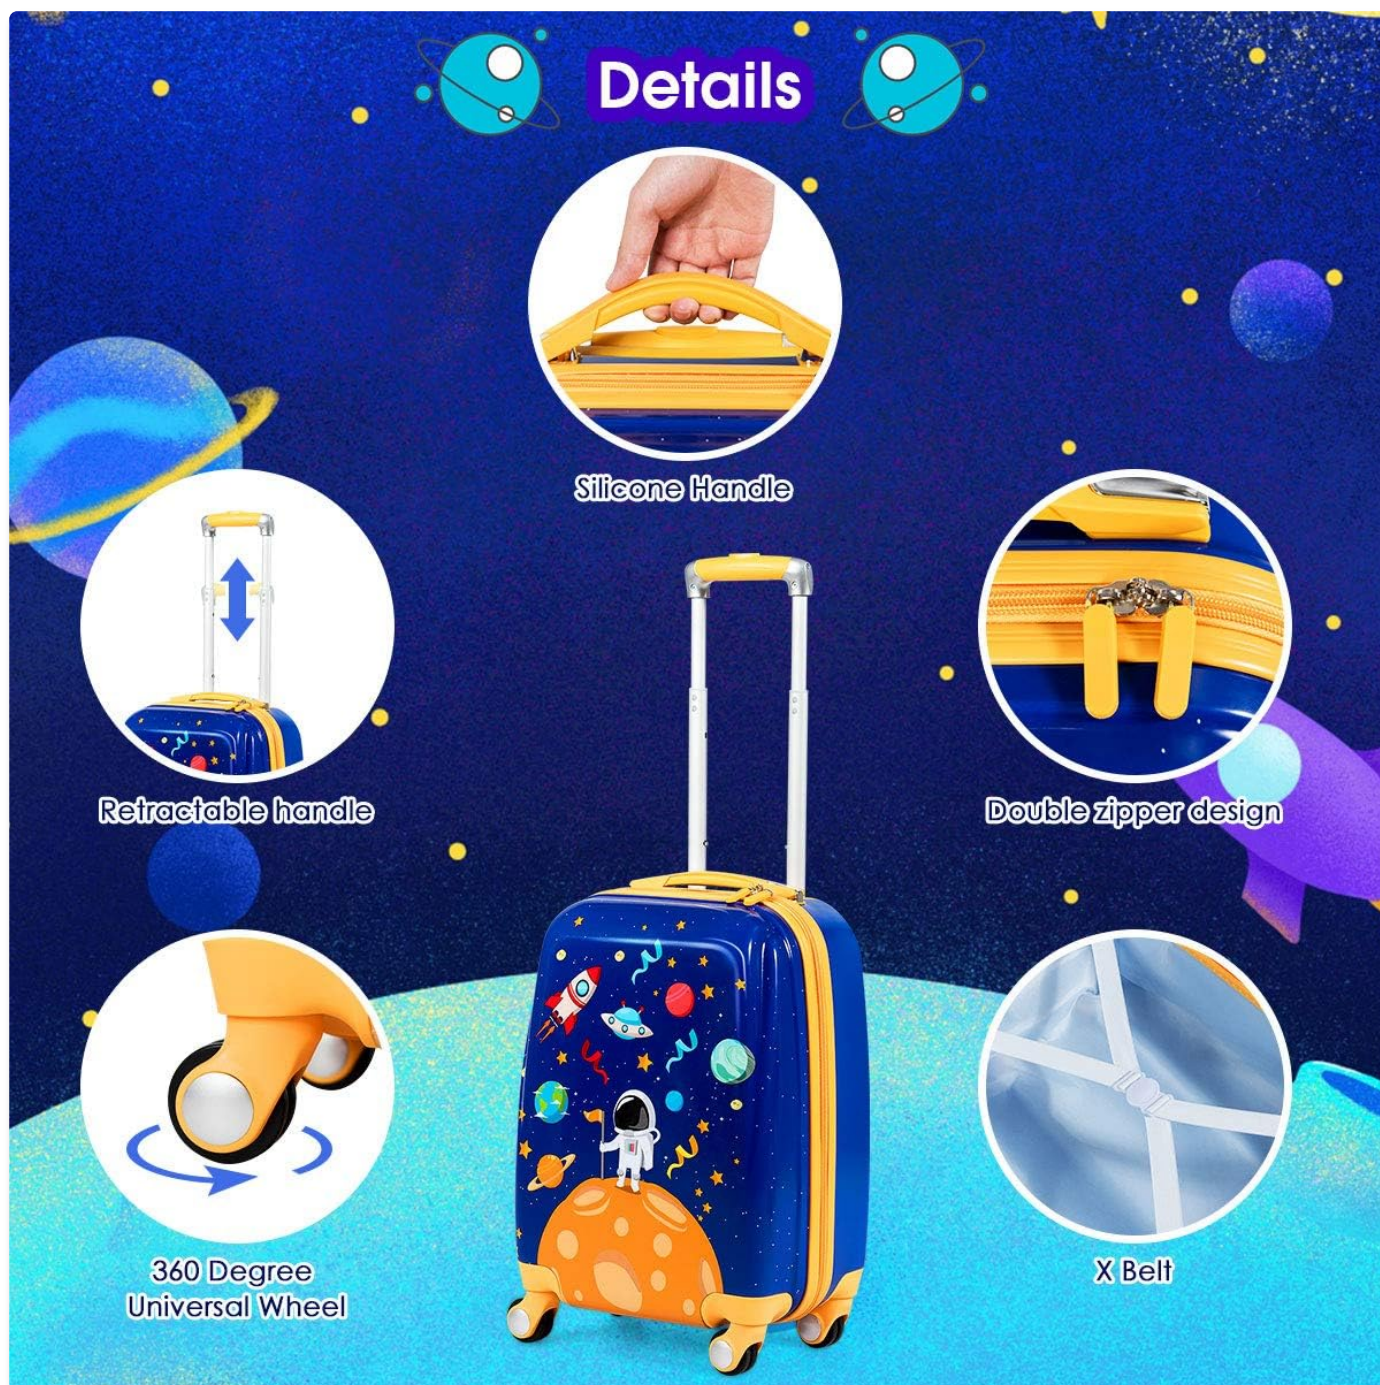


Image 3: Close-up details of the suitcase, including the retractable handle and spinner wheels.



Image 4: Close-up details of the backpack, highlighting adjustable straps and internal storage.

4. OPERATING INSTRUCTIONS

4.1 Packing the Luggage

- **Suitcase:** Open the suitcase using the double zipper design. Utilize the internal X-belt straps to secure clothing and other items, preventing shifting during transit. The interior also features zippered compartments for organized storage of smaller items.
- **Backpack:** The backpack offers classified storage space. It is suitable for carrying smaller essentials such as toys, books, or snacks.



Image 5: Illustrates the internal capacity of both the suitcase and backpack.

4.2 Maneuvering the Suitcase

The 360-degree spinner wheels allow the suitcase to be pushed, pulled, or rolled alongside the user with minimal effort. Ensure the handle is fully extended and locked for comfortable handling.

Become A Little Traveler



Image 6: A child demonstrating the ease of use of the luggage set.

4.3 Carrying the Backpack

The backpack can be worn on the child's back using the adjustable shoulder straps. For shorter distances or when combined with the suitcase, it can also be carried by its top handle.



Image 7: Various scenarios illustrating the multi-use nature of the luggage set.

5. MAINTENANCE AND CARE

- **Cleaning:** For general cleaning, wipe the exterior surfaces of both the suitcase and backpack with a damp cloth. The manufacturer recommends hand washing only for thorough cleaning. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the luggage set in a cool, dry place away from direct sunlight when not in use. Ensure the items are clean and dry before storage to prevent mold or mildew.
- **Wheel Care:** Periodically check the wheels for any debris or hair that might impede smooth rolling. Clean as necessary.

Waterproof & Easy to Clean

- ✓ Waterproof
- ✓ Easy to Clean
- ✓ Wear Resistant



Anti-scratch PC
Protective Film



Image 8: Highlights the waterproof and easy-to-clean properties of the luggage.

6. TROUBLESHOOTING

- **Stuck Zipper:** If a zipper becomes difficult to move, apply a small amount of zipper lubricant or a graphite pencil lead along the teeth. Avoid forcing the zipper.
- **Wheels Not Rolling Smoothly:** Check for any obstructions (e.g., lint, hair) caught in the wheel mechanism. Clean the wheels thoroughly. If the issue persists, ensure the luggage is not overloaded beyond its capacity.
- **Handle Sticking:** Ensure the release button is fully depressed when adjusting the handle. Check for any foreign objects obstructing the telescopic mechanism.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Product Dimensions (Suitcase)	13.5 x 8.5 x 20.5 inches (L x W x H, including wheels and handle)
Product Dimensions (Backpack)	Approximately 12.5 inches (Height)
Model Number	GM1504
Material	ABS with PC film
Wheels	4 Spinner Wheels (Suitcase)
Care Instructions	Hand Wash Only



Image 9: Detailed dimensions of the luggage set components.

8. WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries not covered in this manual, please contact GYMAX customer service directly. Refer to your purchase documentation or the GYMAX official website for contact details.

Optional protection plans may be available for purchase separately to extend coverage beyond the standard manufacturer's warranty. Please consult the retailer for details on these plans.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09P4W8SLC>

More documents and user manuals: <https://manuals.plus/>