

[Manuals.plus](#) /

› [HomeSpot](#) /

› HomeSpot JY100 Neckband Wireless Earbuds User Manual

HomeSpot JY100

HomeSpot JY100 Neckband Wireless Earbuds User Manual

Model: JY100

INTRODUCTION

Thank you for choosing the HomeSpot JY100 Neckband Wireless Earbuds. These earbuds are designed to provide a high-quality audio experience with features like Bluetooth 5.1, aptX Low Latency, and Qualcomm CVC noise cancellation. This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal performance.

PACKAGE CONTENTS

Please check the package for the following items:

- HomeSpot JY100 Neckband Wireless Earbuds
- USB Charging Cable
- Multiple Sizes of Ear Tips
- User Manual (this document)



Image: The package contents for the HomeSpot JY100 earbuds, showing the neckband headphones, a USB charging cable, and various sizes of ear tips.

PRODUCT OVERVIEW

The HomeSpot JY100 features an ergonomic neckband design for comfortable wear. The earbuds are equipped with in-line controls for easy management of audio playback and calls.



Comfortable & Fit for Sports

HomeSpot JY100 Wireless Neckband Headphones are designed ergonomically for your ears and neck curves, comfortable for long-hour wearing and listening, perfect for Jogging, workout and gym.

Image: A full view of the HomeSpot JY100 Neckband Wireless Earbuds, highlighting their sleek black design and flexible neckband.

SETUP

1. Charging the Earbuds

Before first use, fully charge your earbuds. Connect the provided USB charging cable to the charging port on the neckband and plug the other end into a USB power source (e.g., computer, wall adapter). The LED indicator will show charging status. A full charge takes approximately **3 hours**.

2. Powering On/Off

- **Power On:** Press and hold the Multi-function button until the LED indicator flashes blue.
- **Power Off:** Press and hold the Multi-function button until the LED indicator flashes red and then turns off.

3. Bluetooth Pairing

To connect your earbuds to a device:

1. Ensure the earbuds are powered off.
2. Press and hold the Multi-function button for approximately 5-7 seconds until the LED indicator flashes red and blue alternately. This indicates pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "**HomeSpot JY100**" from the list of found devices.
5. Once connected, the LED indicator on the earbuds will flash blue slowly.

The earbuds will automatically attempt to reconnect to the last paired device when powered on.



Image: The HomeSpot JY100 earbuds shown in the center, with Bluetooth signals extending to a smartphone on the left and another on the right, demonstrating the pairing process.

OPERATING INSTRUCTIONS

Music Control

- **Play/Pause:** Press the Multi-function button once.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.
- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.

Call Management

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.

- **Redial Last Number:** Double-press the Multi-function button.

Voice Assistant

Triple-press the Multi-function button to activate your device's voice assistant (e.g., Siri, Google Assistant).



Image: The HomeSpot JY100 earbuds resting on a table next to a smartphone playing music, with visual indicators for battery life and Bluetooth range.

MAINTENANCE

- **Cleaning:** Gently wipe the earbuds and neckband with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- **Ear Tips:** Remove ear tips periodically and clean them with mild soap and water. Ensure they are completely dry before reattaching.
- **Storage:** Store the earbuds in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** The earbuds are water resistant. Avoid submerging them in water or exposing them to heavy rain. Dry them thoroughly if they get wet.

TROUBLESHOOTING

Problem	Solution
Earbuds won't power on	Ensure the earbuds are fully charged. Connect to a power source and allow to charge for at least 30 minutes before attempting to power on again.
Cannot pair with device	Make sure the earbuds are in pairing mode (LED flashing red and blue). Turn off Bluetooth on other nearby devices. Restart your device's Bluetooth and try pairing again.
No sound or intermittent audio	Check the volume levels on both the earbuds and your connected device. Ensure the earbuds are within the 10-meter Bluetooth range of your device. Try disconnecting and re-pairing the earbuds.
Poor call quality	Ensure the microphone is not obstructed. Move closer to your connected device. Check for environmental interference.

SPECIFICATIONS

Feature	Detail
Model Name	JY100
Connectivity Technology	Bluetooth 5.1, Wireless
Wireless Technology	Bluetooth
Bluetooth Range	10 Meters (30 feet)
Ear Placement	In Ear
Noise Control	Active Noise Cancellation (Qualcomm CVC)
Audio Driver Type	Dynamic Driver
Audio Driver Size	10 Millimeters
Battery Average Life	8 Hours
Battery Charge Time	3 Hours
Control Method	Touch (Media Control)
Water Resistance Level	Water Resistant
Compatible Devices	iOS devices, Android devices, Bluetooth-enabled laptops
Material	Acrylonitrile Butadiene Styrene (ABS)

WARRANTY AND SUPPORT

HomeSpot products are designed for reliability and performance. For warranty information, technical support, or customer

service inquiries, please refer to the official HomeSpot website or contact our customer support team through the details provided on your product packaging or purchase receipt.
Please retain your proof of purchase for warranty claims.