



Manuals.plus /

› FRIZCOL /

› FRIZCOL Portable Clip-on Fan User Manual

FRIZCOL XF-TENTFAN-BLACK-01

FRIZCOL Portable Clip-on Fan Instruction Manual

Model: XF-TENTFAN-BLACK-01

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your FRIZCOL Portable Clip-on Fan. Please read this manual thoroughly before using the product and retain it for future reference.

2. PRODUCT FEATURES



Figure 2.1: FRIZCOL Portable Clip-on Fan with remote control and phone charging capability.

- **High Capacity Battery:** Equipped with a 12000mAh rechargeable battery, providing 12 to 65 hours of operation depending on speed settings.
- **Remote Control:** Includes an RF wireless remote controller with a maximum range of 12ft (3.7m) for convenient operation.
- **Integrated LED Lights:** Features 9 LED lights with 2 adjustable brightness levels for illumination.
- **Timer Functionality:** Offers 1-hour, 3-hour, and 5-hour timer settings for automated shutdown.
- **Power Bank Function:** Two charging ports (in/out) allow the fan to serve as a power bank for mobile devices.
- **Versatile Mounting:** Strong grip clamp can attach to surfaces up to 3 inches thick. Humanized hook design allows for hanging.
- **Adjustable Airflow:** 360-degree angle rotation for directing airflow vertically or horizontally.
- **Quiet Operation:** Designed for ultra-quiet performance, less than 23 dB.
- **Efficient Motor:** High-performance brushless DC motor, smooth and efficient at 2500 RPM.
- **Optimized Blades:** Enhanced wing-shaped 3-blade design for powerful and efficient airflow.



Figure 2.2: Key features of the FRIZCOL Portable Clip-on Fan.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package.

- FRIZCOL Portable Clip-on Fan (Model: XF-TENTFAN-BLACK-01)
- RF Wireless Remote Controller
- USB-C Charging Cable
- User Manual (This document)



Figure 3.1: Outer packaging and included components.

4. SETUP

4.1 Charging the Fan

Before first use, fully charge the fan. The fan requires approximately 4.5 hours for a full charge.

1. Connect the provided USB-C charging cable to the fan's charging port.
2. Connect the other end of the cable to a compatible USB power source (e.g., wall adapter, computer USB port, power bank).
3. The indicator lights on the fan will show charging progress. All lights will be solid when fully charged.

Large 12000 Battery Capacity

Long Lasting

Gentle 65 hrs
Nature 42 hrs
Strong 12 hrs



Figure 4.1: Charging the fan and its large battery capacity.

4.2 Mounting the Fan

The fan offers multiple mounting options:

- **Clip-on:** Use the strong grip clamp to attach the fan to surfaces up to 3 inches thick, such as desks, tent poles, strollers, or golf carts.
- **Hanging:** Utilize the integrated hook design to hang the fan from tent ceilings, branches, or other suitable fixtures.
- **Freestanding:** Place the fan on any flat surface for stable operation.



Figure 4.2: Fan hanging in a tent, demonstrating the hook design.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Fan Speed Adjustment

The fan can be operated using the buttons on the unit or the wireless remote control.

- **Power On/Off:** Press the power button on the fan or the remote control to turn the fan on or off.
- **Fan Speed:** Press the fan speed button repeatedly to cycle through 3 speed settings (Low, Medium, High).



Figure 5.1: Fan speed settings and 360-degree adjustability.

5.2 LED Light Operation

The fan features integrated LED lights with adjustable brightness.

- **Turn On/Off:** Press the light button on the fan or the remote control to activate or deactivate the LED lights.
- **Adjust Brightness:** Press the light button repeatedly to cycle through 2 brightness levels.



Figure 5.2: Ambiance-boosting light feature.

5.3 Timer Settings

Set a timer for automatic fan shutdown.

- **Activate Timer:** Press the timer button on the remote control to select 1-hour, 3-hour, or 5-hour shutdown.
- The fan will automatically turn off after the selected duration.



Figure 5.3: Timer functionality for scheduled operation.

5.4 Using as a Power Bank

The fan can provide emergency power to your mobile devices.

- Connect your mobile device's charging cable to the fan's USB output port.
- The fan will begin charging your device.



Figure 5.4: Fan providing power to a smartphone.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your fan.

- **Cleaning:** Ensure the fan is turned off and unplugged before cleaning. The front grill can be removed without tools for easy cleaning of the blades. Use a soft, dry cloth to wipe down the exterior and blades. Do not use abrasive cleaners or immerse the fan in water.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged (around 50%) before storage to prolong battery life.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Low battery; Power button not pressed correctly.	Charge the fan fully. Ensure the power button is pressed firmly.
Weak airflow.	Low speed setting; Obstruction in front/back of fan; Dirty blades.	Increase fan speed. Clear any obstructions. Clean the fan blades.
LED lights not working.	Light button not pressed; Low battery.	Press the light button. Charge the fan.
Remote control not working.	Out of range; Battery in remote is dead.	Ensure remote is within 12ft (3.7m) of the fan. Replace remote battery if applicable (check remote specifications for battery type).
Fan makes unusual noise.	Obstruction hitting blades; Loose components.	Turn off and unplug the fan. Check for and remove any obstructions. If noise persists, contact customer support.

If the problem persists after attempting these solutions, please contact FRIZCOL customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	FRIZCOL
Model Name	XF-TENTFAN-BLACK-01
Color	Black
Power Source	Battery Powered
Battery Capacity	12000mAh (Lithium Polymer)
Working Hours	12 to 65 hours (depending on speed)
Charging Time	Approx. 4.5 hours
Product Dimensions	8"D x 3.43"W x 6.73"H
Item Weight	15.2 ounces
Number of Fan Speeds	3
LED Lights	9 LEDs, 2 brightness levels
Timer Settings	1H / 3H / 5H
Control Method	Remote Control, Buttons on unit
Max Clamp Thickness	3 inches
Motor Speed	Up to 5000 RPM
Noise Level	<23 dB
Indoor/Outdoor Usage	Indoor, Outdoor

9. WARRANTY AND SUPPORT

FRIZCOL offers a 2-year service warranty for this product. For any inquiries, operational problems, missing parts, or to report a bad experience, please contact our customer support team.

How to Contact Us:

You can typically find our contact information through your purchase platform or by visiting the official FRIZCOL store page.



Enhanced Wing-shaped Blades

Optimized 3-blade design ensures powerful, efficient airflow, replicating natural wind flow for unparalleled cooling comfort.

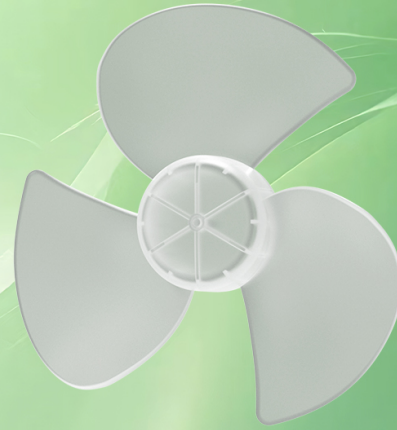


Figure 9.1 : Steps to contact FRIZCOL customer support.