

[Manuals.plus](#) /

› [MECHEN](#) /

› MECHEN 64GB MP3 Player with Bluetooth 5.2 Instruction Manual

MECHEN D22

MECHEN 64GB MP3 Player with Bluetooth 5.2 Instruction Manual

Model: D22

INTRODUCTION

Thank you for choosing the MECHEN 64GB MP3 Player. This digital audio player is designed to provide a high-quality music experience with versatile features including Bluetooth 5.2 connectivity, FM radio, voice recording, and e-book functionality. This manual will guide you through the setup, operation, and maintenance of your new device.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1 x MP3 Player
- 1 x Type-C Charging Cable
- 1 x Wired Headset
- 1 x 64GB Memory Card
- 1 x Card Reader

Type-C port charging

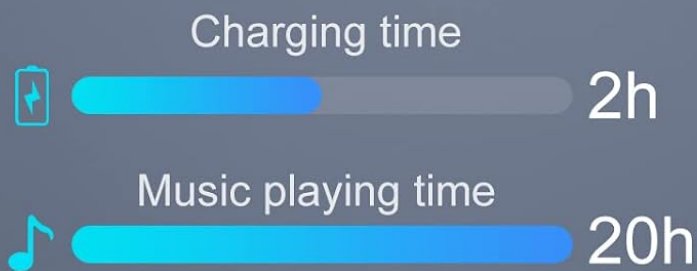


Image: The complete packing list for the MECHEN MP3 Player, showing all included accessories.

PRODUCT OVERVIEW

The MECHEN MP3 Player features a large 2.8-inch TFT screen for clear navigation and touch buttons for intuitive control. Its sleek design incorporates a durable zinc alloy mental material.

2.8in Bigger Display

Super Visual Experience with Clearer Display
Zinc alloy mental material, more durable.



Image: The 2.8-inch display of the MECHEN MP3 Player, offering a larger visual experience.

Multifunctional MP3 Player

2.8in Bigger Display | High speed connection



Bluetooth 5.2



Recording



Radio



E-Book



Alarm

Image: The multifunctional design of the MECHEN MP3 Player, emphasizing its various features.

SETUP

1. Charging the Device

Before first use, fully charge your MP3 player. Use the provided Type-C charging cable and connect it to a compatible USB power adapter (not included) or a computer's USB port.

- Charging time: Approximately 2 hours.

- Music playing time: Up to 20 hours on a full charge.

HIFI lossless Sound

Music is a good medicine. Soothing music relaxes your body and mind, passionate music inspires progress.



DAC Audio
Decoder Chip



Layer Noise
Depth Filter



Mp3 APE FLAC
WMA WAV Supported



Optimize the
AMP Amplificatioin



Image: The MP3 Player being charged via its Type-C port, indicating efficient power transfer.

2. Installing the Memory Card

The MP3 player comes with a 64GB Micro SD card. Locate the TF card slot on the side of the device and gently insert the memory card until it clicks into place. The external storage can be expanded up to 128GB.



Image: The MP3 Player alongside its 64GB Micro SD card and card reader, demonstrating its expandable storage.

OPERATING INSTRUCTIONS

Basic Navigation

The device is controlled by touch buttons located at the bottom of the screen. Use the arrow keys to navigate through menus and the central 'OK' button to select options. The 'Menu' button (three horizontal lines) typically accesses settings or sub-menus, and the 'Return' button (curved arrow) goes back to the previous screen.

Music Playback

Select the 'Music' icon from the main menu. You can browse your music by artist, album, genre, or all songs. The player supports Hi-Fi lossless sound, providing a high-quality audio experience.

External 64GB Storage

Make Life Full Of Music



16000
Songs Stored



50 Hours
Music Playing



128G SD
Card Supported



Image: The MP3 Player delivers Hi-Fi lossless sound for an immersive listening experience.

Bluetooth Connectivity

The player features Bluetooth 5.2 for stable and efficient wireless connections to headphones or speakers. From the main menu, select 'Bluetooth' to turn it on and search for available devices. Note: This device cannot connect with smartphones, tablet PCs, or laptops.

Bluetooth 5.2

Perfectly compatible with Bluetooth headsets.
speakers. Headphones



Image: The MP3 Player's Bluetooth 5.2 feature, compatible with various audio devices.

FM Radio

To use the FM Radio function, a wired headset must be plugged into the 3.5mm audio jack, as it acts as the antenna. Select 'FM Radio' from the main menu to access this feature.

Voice Recorder

Select the 'Recorder' icon to access the voice recording function. You can record audio directly onto the device's memory card.

E-book and Picture Viewing

The device supports E-book and picture viewing. Transfer compatible files to the memory card and

select the respective icons from the main menu to view them.

Alarm Function

Set alarms directly on the device through the 'Alarm' function in the main menu.

MAINTENANCE

To ensure the longevity and optimal performance of your MECHEN MP3 Player, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the device. Do not use abrasive cleaners, solvents, or strong chemicals.
- **Storage:** Store the device in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts. Protect the screen from scratches.
- **Battery Care:** For best battery life, avoid completely depleting the battery frequently. Charge it regularly.

TROUBLESHOOTING

If you encounter issues with your MECHEN MP3 Player, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on or charge.	Battery is completely depleted or charging cable/port issue.	Ensure the Type-C cable is securely connected to both the player and a working power source. Try a different cable or power adapter. Hold the power button for an extended period (10-15 seconds) to attempt a forced restart. If the device has been stored for a long time, it may take a few minutes for the charging indicator to appear.
Cannot connect to Bluetooth device.	Bluetooth is off, device is out of range, or incompatible.	Ensure Bluetooth is enabled on both the MP3 player and the target device. Place devices within close proximity. Remember, the MP3 player cannot connect to smartphones or computers.

Problem	Possible Cause	Solution
Music files are not recognized.	Unsupported file format or corrupted files.	Ensure your music files are in a supported format (e.g., MP3, APE, FLAC, WMA, WAV). Re-transfer the files to the memory card.
FM Radio not working.	Wired headset not connected.	Plug in the wired headset firmly, as it functions as the antenna for the FM radio.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3.57 x 1.7 x 0.35 inches
Item Weight	3.44 ounces
Manufacturer	MECHEN
Item Model Number	D22
Batteries	1 Lithium Ion batteries required (included)
Date First Available	December 19, 2021
Special Feature	Bluetooth, FM Radio, Voice Recorder
Connectivity Technology	Bluetooth
Memory Storage Capacity	64 GB (expandable up to 128GB)
Color	64GB-Black
Screen Size	2.8 Inches
Media Type	Micro SD
Display Technology	LCD

WARRANTY & SUPPORT

Warranty information for your MECHEN MP3 Player is typically provided with the product packaging or can be found on the manufacturer's official website. For technical support, troubleshooting assistance, or warranty claims, please contact MECHEN customer service directly. You can often find contact information on the product's retail page or by searching for 'MECHEN customer support' online.

© 2023 MECHEN. All rights reserved.