

JISOWA BDP2900, BDP2930, BDP2305, BDP3100, BDP3200, BDP1502/F7, BDP2100/F7, BDP2105/F7, BDP2205/F7, BDP1200/F7

JISOWA Replacement Remote Control for Philips Blu-ray DVD Players

Instruction Manual

INTRODUCTION

This manual provides instructions for the JISOWA replacement remote control, designed for use with various Philips Blu-ray and DVD Disc Players. This remote control is pre-programmed and requires no setup or pairing. Simply insert batteries to begin operation.

Compatible Philips Blu-ray/DVD Player Models include:BDP1305, BDP1305/F7, BDP1502, BDP1502/F7, BDP2100, BDP2100/F7, BDP2105, BDP2105/F7, BDP2205, BDP2205/F7, BDP2305, BDP2305/F7, BDP2900, BDP2900/F7, BDP2930, BDP3100, BDP3200, BDP3306, BDP3306/F7, BDP5406, BDP5406/F7, and many others.

SETUP

The JISOWA replacement remote control is pre-programmed and does not require any additional setup or pairing with your Philips Blu-ray or DVD player. Follow these steps to begin using your remote:

1. **Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Gently slide or press and lift the cover to open it.
2. **Insert Batteries:** Insert two (2) 1.5V AAA batteries into the compartment, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. **Close the Battery Compartment:** Replace the battery compartment cover until it clicks securely into place.
4. **Begin Use:** The remote control is now ready for immediate use with your compatible Philips Blu-ray or DVD player.

01 Ergonomic design

Comfortable to hold, agile to operate.

HOME and NETFLIX button



Induction light



Special soft plastic button



02 New ABS material



Environmentally

Durable

Quality assurance

Figure 1: Remote control features and battery installation. The image highlights the ergonomic design, soft plastic buttons, and the battery compartment requiring two AAA batteries.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your Philips Blu-ray or DVD player. Below is a guide to the main buttons and their functions:

Using the remote



Figure 2: Detailed button layout and functions of the remote control.

Power Button: Turns the player on or off.

HOME: Enters the player's home menu. Displays the wall paper when pressed on the category icon of the home menu.

NETFLIX: Accesses the NETFLIX application.

Vudu: Accesses the Vudu application.

Color Buttons (RED/BLUE/YELLOW/GREEN): Shortcut keys for interactive functions. Use these buttons according to the directions on the TV's display.

DISC MENU / POP-UP MENU: Opens or closes the Blu-ray ROM's Pop-Up Menu or the DVD's Menu.

TOP MENU: Opens or closes the BD's or DVD's Top Menu.

RETURN: Returns to the previous display.

OPTIONS: Displays the available options on the screen.

Navigation (Up, Down, Left, Right, OK): Used to navigate menus and confirm selections.

PLAY/PAUSE: Plays or pauses playback.

PREV/NEXT: Skips to the previous/next chapter, track, or file.

STOP: Stops playback and remembers the stop point. The resume point for a title/track is the last point you played or the last photo for a photo folder.

SUBTITLE: Selects the subtitle language when multi-lingual subtitles are recorded on BD/ROM/DVD videos.

AUDIO: Selects the language track when multi-lingual tracks are recorded on BD/ROM/DVD videos.
Selects the sound track on CDs.

Number Buttons (0-9): Used for direct track selection or inputting numbers.



Figure 3: Remote control in use with a Philips Blu-ray DVD player, highlighting access to Home, Netflix, and Vudu functions.

MAINTENANCE

- **Cleaning:** To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place.

TROUBLESHOOTING

Remote is not responding:

- Ensure batteries are inserted correctly with the correct polarity.
- Replace old batteries with new 1.5V AAA batteries.
- Check for any obstructions between the remote control and the Blu-ray/DVD player's infrared sensor.
- Ensure you are within the effective operating range (typically up to 40 feet) and pointing the remote directly at the player.

Specific buttons (e.g., NETFLIX) do not work:

This replacement remote control is pre-programmed and cannot be programmed to other devices. If your original Philips player remote did not feature a specific button (e.g., NETFLIX), the corresponding button on this replacement remote may not function correctly or at all with your player.

Remote control feels sluggish or inconsistent:

This usually indicates low battery power. Replace both AAA batteries with fresh ones.

SPECIFICATIONS

Brand	JISOWA
Compatible Devices	Philips DVD/Blu-ray Players, Home Theater Systems
Connectivity Technology	Infrared (IR)
Power Source	2 x 1.5V AAA Batteries (not included)
Product Dimensions	5.08 x 1.6 x 0.78 inches (approximately 12.9 x 4.1 x 2 cm)
Item Weight	1.59 ounces (approximately 45 grams)
Special Feature	Ergonomic design, Pre-programmed

Replacement Blu-ray DVD Remote Control Universal for Philips Blu-ray DVD Disc Players

No Setup Required

No Programming or Pairing Required.



 **Long-distance Control**
Transmission Singal Range is father than 40 ft.

Figure 4: Dimensions of the JISOWA replacement remote control.

WARRANTY AND SUPPORT

JISOWA offers an unconditional money-back guarantee for any defective items. If you encounter any issues or have questions regarding this remote control, please contact JISOWA customer support. We are committed to providing a suitable solution within 1 business day.

For support, please refer to the contact information provided with your purchase or on the JISOWA official website.

