

[manuals.plus](#) /

- › [SWEETFULL](#) /
- › [SWEETFULL USB Desk Fan User Manual](#)

## SWEETFULL S1s

# SWEETFULL USB Desk Fan User Manual

Model: S1s

Brand: SWEETFULL

## 1. INTRODUCTION AND OVERVIEW

The SWEETFULL USB Desk Fan (Model S1s) is a compact and quiet personal cooling device designed for various settings such as offices, homes, and during travel. It features a brushless motor for quiet operation and offers three adjustable speeds for personalized airflow. Its versatile design includes a 360-degree rotating head and a detachable grille for easy cleaning.



Figure 1: SWEETFULL USB Desk Fan (Black)

# Compact Space Saver



Figure 2: Compact dimensions of the fan, ideal for small spaces.

## 2. SAFETY INSTRUCTIONS

- Always unplug the fan before cleaning or when not in use.
- Do not use the fan near water or in excessively humid environments.
- Ensure the fan is placed on a stable, flat surface to prevent tipping.
- Keep fingers, hair, and loose clothing away from the fan blades during operation.
- Avoid using high amperage fast chargers as a power source, as this may damage the motor. Use a standard USB power source.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or

instruction concerning use of the appliance by a person responsible for their safety.

### 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x SWEETFULL USB Desk Fan
- 1 x User Manual

### 4. SETUP

Follow these steps to set up your SWEETFULL USB Desk Fan:

1. **Placement:** Place the fan on a flat, stable surface. The fan features an anti-skid base for stability. It also includes a foldable hook for versatile placement, allowing it to be hung if desired.

# Tilt Upside Down

360°

Angle adjustment



With hook base



Figure 3: Fan with 360-degree angle adjustment and hook base.

2. **Power Connection:** Connect the USB cable from the fan to any compatible USB power source. This can include a computer, power bank, wall outlet (with a USB adapter), or a car charger.

# Versatile USB Fan

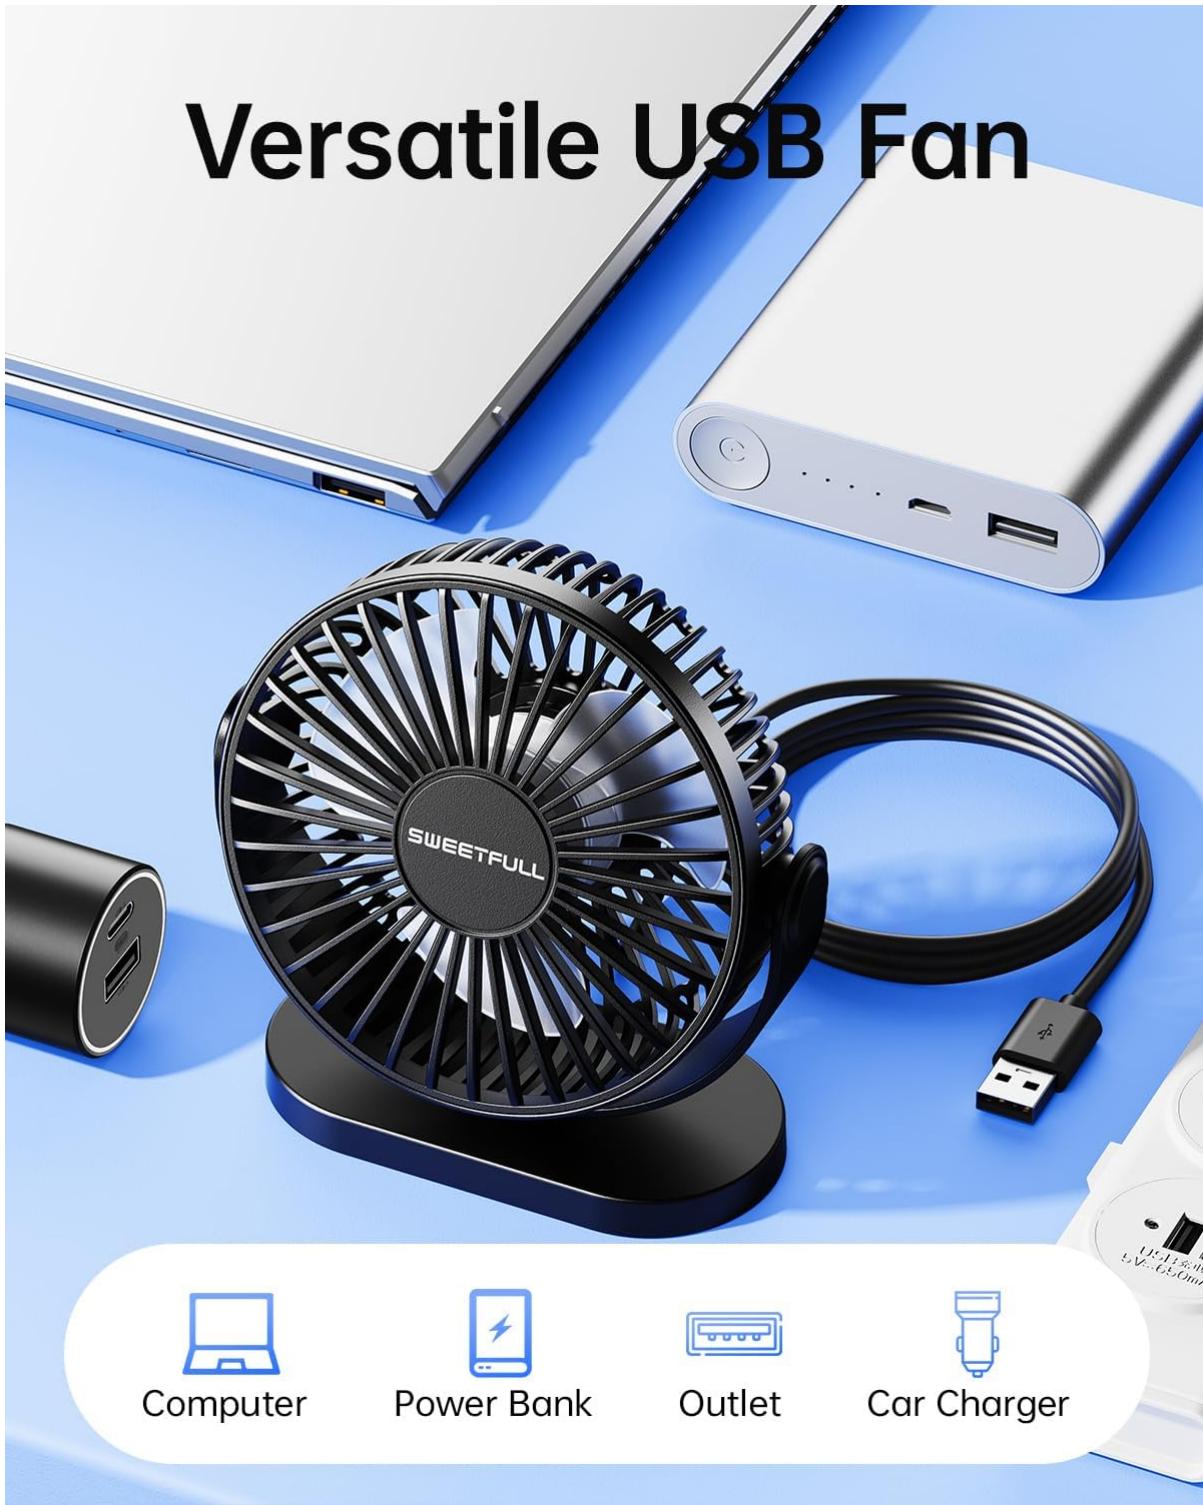


Figure 4: Versatile USB power options for the fan.

## 5. OPERATING INSTRUCTIONS

The SWEETFULL USB Desk Fan is designed for simple and intuitive operation:

- 1. Power On/Off:** Locate the push button on the back of the fan. Press it once to turn the fan on to the lowest speed setting.
- 2. Adjusting Fan Speed:** Continue pressing the power button to cycle through the three available speed settings (Low, Medium, High). Pressing the button a fourth time will turn the fan off.

# 3-level Settings



Quiet Mode  
2000RPM



Standard Mode  
2400RPM



Powerful Mode  
3000RPM



Figure 5: Three-level speed settings for customized airflow.

3. **Adjusting Fan Angle:** The fan head can be manually rotated 360 degrees vertically to direct airflow precisely where needed.

The fan operates quietly, even at higher speeds, with a noise level of approximately 32 dB.

# Whisper Quiet

32dB



Figure 6: The fan's quiet operation, suitable for undisturbed environments.

## Product in Use Video

Your browser does not support the video tag.

Video 1: Demonstrates the SWEETFULL USB Desk Fan in various usage scenarios, highlighting its quiet operation and adjustable features.

## 6. MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your fan:

- **Cleaning the Grille and Blades:** The front cover of the fan can be easily removed by turning it counter-clockwise. This allows for convenient cleaning of the grille and fan blades. Use a soft, dry cloth to wipe

away dust. For stubborn dirt, a slightly damp cloth can be used, ensuring the fan is completely dry before reassembly and use.

- Storage:** When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply or loose USB connection.	Ensure the USB cable is securely plugged into both the fan and a working USB power source. Try a different USB port or adapter.
Weak airflow.	Fan speed set too low or dirty blades/grille.	Increase the fan speed by pressing the power button. Clean the fan blades and grille as described in the Maintenance section.
Unusual noise during operation.	Obstruction in the fan or loose components.	Unplug the fan and check for any foreign objects or debris obstructing the blades. Ensure the front grille is securely attached.
Fan motor burns out.	Using a high amperage fast charger.	Always use a standard USB power source with low amperage. Avoid fast chargers designed for phones or tablets.

## 8. SPECIFICATIONS

Feature	Detail
Brand	SWEETFULL
Model Name	Desk Fan (S1s)
Color	Black
Product Dimensions	2.1"D x 5.5"W x 5.9"H
Item Weight	7.3 Ounces
Power Source	USB Powered
Number of Speeds	3
Noise Level	32 dB
Control Method	Push Button
Special Features	3 Speeds, Anti Slip Base, Quiet, Detachable Cover, 360° Rotation
Included Components	1* User Manual, 1* USB Desk Fan

## 9. WARRANTY AND SUPPORT

The SWEETFULL USB Desk Fan is covered by a standard manufacturer's warranty. For specific details regarding warranty coverage, please refer to the documentation included with your purchase or contact SWEETFULL Technology directly.

**Return Policy:** A 30-day return policy applies for this product.

For further assistance or technical support, please contact the seller or manufacturer through their official channels.