



Manuals.plus /

› ChooChoo /

› ChooChoo EUR-CT2103-1TGL Rustic Coffee Table Assembly and Care Manual

## ChooChoo EUR-CT2103-1TGL

# ChooChoo EUR-CT2103-1TGL Rustic Coffee Table Assembly and Care Manual

Model: EUR-CT2103-1TGL

## INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, and maintenance of your ChooChoo EUR-CT2103-1TGL Rustic Coffee Table. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

## Safety Warnings

- Do not exceed the maximum weight capacity of 54.4 kg (120 lbs) for the tabletop and 36.3 kg (80 lbs) for the bottom shelf to prevent tipping or collapse.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Keep small parts and packaging materials away from children to avoid choking hazards.
- Assemble the product on a soft, clean surface to prevent scratches.

## PARTS LIST

---

Before assembly, verify that all components listed below are present. If any parts are missing or damaged, please contact customer support.



Image: Detailed view showing the tabletop, bottom shelf, and side slats, highlighting the construction and materials.

Part	Description	Quantity
A	Tabletop	1
B	Bottom Shelf	1
C	Legs/Side Panels	4
D	Hardware Pack (screws, bolts, Allen wrench)	1 set

*Note: The actual number of individual fasteners may vary. Refer to the included assembly guide for precise counts.*

## ASSEMBLY INSTRUCTIONS

Assembly typically takes 0.5 to 1 hour. It is recommended to have two people for easier assembly, though it can be done by one person.

- 1. Unpack and Identify Parts:** Carefully unpack all components and lay them out on a clean, soft surface. Compare them with the parts list to ensure everything is present.

2. **Attach Legs to Bottom Shelf:** Secure the four legs (C) to the bottom shelf (B) using the provided hardware from pack (D). Ensure they are oriented correctly as per the assembly diagram. Do not fully tighten screws yet.
3. **Attach Tabletop:** Carefully place the tabletop (A) onto the assembled legs and bottom shelf. Align the pre-drilled holes.
4. **Secure Tabletop:** Attach the tabletop (A) to the legs (C) using the remaining hardware from pack (D).
5. **Final Tightening:** Once all parts are loosely assembled, gradually tighten all screws and bolts using the Allen wrench until secure. Do not overtighten.
6. **Positioning:** Carefully lift and place the assembled coffee table in its desired location.



Image: The fully assembled ChooChoo Rustic Coffee Table, showcasing its Mission style and grey finish.

## USAGE GUIDELINES

---

To ensure the longevity and safety of your coffee table, please adhere to the following guidelines:

- **Weight Capacity:** The tabletop can support up to 54.4 kg (120 lbs). The bottom shelf can support up to 36.3 kg (80 lbs). Do not exceed these limits.
- **Placement:** Place the table on a flat, stable surface. Avoid placing it in direct sunlight or near heat sources to prevent material damage or discoloration.
- **Hot Items:** Always use coasters or protective pads under hot beverages or dishes to prevent heat marks on the tabletop.
- **Moving the Table:** When moving the table, always lift it rather than dragging it to prevent damage to the legs and floor.



Image: The ChooChoo Rustic Coffee Table positioned in a living room, demonstrating its functional use and aesthetic appeal.

## MAINTENANCE AND CARE

---

Proper care will help maintain the appearance and structural integrity of your coffee table.

- **Cleaning:** Wipe the table with a dry, soft cloth. For spills, wipe immediately with a slightly damp cloth and then dry thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust the surface with a soft, lint-free cloth.
- **Fastener Check:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Avoid Moisture:** Do not allow liquids to sit on the surface for extended periods, as this can cause damage to the wood finish. The product is not stain-resistant.

## TROUBLESHOOTING

---

If you encounter any issues with your coffee table, refer to the following common solutions:

- **Table is Wobbly:**

- Ensure all screws and bolts are fully tightened.
- Check that the table is placed on a level surface. Adjust if necessary.

- **Parts Missing or Damaged:**

- Review the parts list in this manual and the included assembly guide.
- Contact ChooChoo customer support for replacement parts.

- **Difficulty Assembling:**

- Re-read the assembly instructions carefully, paying attention to diagrams.
- Ensure parts are oriented correctly.
- Do not overtighten screws until all parts are in place.

## PRODUCT SPECIFICATIONS

---

<b>Model Number</b>	EUR-CT2103-1TGL
<b>Brand</b>	ChooChoo
<b>Dimensions (L x W x H)</b>	101.5 cm x 56 cm x 46 cm (39.9 inches x 22 inches x 18.1 inches)
<b>Item Weight</b>	17.6 kg (38.8 lbs)
<b>Maximum Load Capacity (Tabletop)</b>	54.4 kg (120 lbs)
<b>Maximum Load Capacity (Bottom Shelf)</b>	36.3 kg (80 lbs)
<b>Frame Material</b>	Wood, Engineered Wood (P2 MDF, Pine Wood, Rubberwood)
<b>Color</b>	Grey
<b>Style</b>	Mission
<b>Number of Shelves</b>	1
<b>Assembly Required</b>	Yes
<b>Care Instructions</b>	Wipe with a dry cloth
<b>UPC</b>	759382137230



Image: Technical drawing illustrating the dimensions of the coffee table, including length, width, and height.

## WARRANTY AND SUPPORT

---

ChooChoo stands behind the quality of its products. For any questions, missing parts, or support needs, please refer to the contact information provided in your purchase documentation or on the official ChooChoo website.

Please retain your proof of purchase for warranty claims.