

[Manuals.plus](#) /

› [AICase](#) /

› AICase Biometric Fingerprint Storage Box E0866 User Manual

AICase E0866

AICase Biometric Fingerprint Storage Box

MODEL: E0866

1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your AICase Biometric Fingerprint Storage Box. Please read this manual thoroughly before using the product to ensure proper function and security.



Image: The AICase Biometric Fingerprint Storage Box, shown in pink.

Your browser does not support the video tag.

Video: An overview of the AICase Portable Cash Jewelry Security Case, highlighting its features and uses.

2. Product Features

- **Quick Access:** Two methods for unlocking: biometric fingerprint and a 12-digit Morse code.
- **Biometric Fingerprint Technology:** Fast recognition, stores up to 50 unique fingerprints.
- **Rechargeable Battery:** Built-in 280mAh lithium battery provides over 2000 unlocks and 180 days standby time on a full charge.
- **Low Battery Reminder:** Red light flashes when battery is below 10%.
- **Portable Design:** Compact size (9 x 5.9 x 3 inches, 2.8 lbs) for easy transport and discreet storage.
- **Interior Organization:** Includes a divider and detachable shelf for flexible storage of valuables.



Image: The interior of the storage box, showing its large space and customizable dividers for organizing items.

3. Package Contents

- AICase Biometric Fingerprint Storage Box
- 6.5ft Type-C Charging Cable
- User Manual

4. Specifications

Attribute	Detail
Brand	AICase
Model Number	E0866
Product Dimensions	5.51"D x 8.66"W x 2.76"H

Lock Type	Biometric Fingerprint, Morse Code
Material	Silver (referring to internal components/finish)
Item Weight	12.32 ounces
Battery	280mAh Lithium Battery
Charging Port	Type-C

5. Setup

5.1 Initial Charging

Before first use, fully charge the storage box using the provided Type-C charging cable. Connect the cable to the charging port on the box and a USB power source. The indicator light will show charging status.



Image: The side of the storage box with the charging port, illustrating its large battery capacity.

5.2 Registering Fingerprints

The box can store up to 50 fingerprints. The first two fingerprints registered are considered administrator fingerprints. If the box is in factory mode, anyone can open it. Register your fingerprints immediately upon receiving the product.

1. **Enter Registration Mode:** Long press the fingerprint sensor until the purple light turns on, then release your finger.
2. **Register Fingerprint:** Place your finger on the sensor. The light will flash green. Lift and place your finger repeatedly from different angles until the light turns blue, indicating successful registration.
3. **Add More Fingerprints:** To add more fingerprints, repeat step 2. The first two registered fingerprints will be administrators.



Image: A finger being placed on the biometric sensor for fingerprint registration.

Your browser does not support the video tag.

Video: Demonstrates how to set up a new fingerprint and Morse code password on the storage box.

5.3 Setting Morse Code Password

The Morse code password consists of 12 digits, using '0' (short press) and '1' (long press). The default password is '000000000001'.

1. **Authorize:** Press an administrator fingerprint to authorize. The light will change to blue.
2. **Input Password:** Short press the fingerprint sensor for '0' (green light) or long press for '1' (purple light). Input your desired 12-digit code.
3. **Confirm:** After inputting 12 digits, the blue light will turn on. Input the password again to confirm. A long beep indicates success.

6. Operation

6.1 Unlocking with Fingerprint

Simply place a registered finger on the fingerprint sensor. The box will automatically open upon successful recognition.



Image: A hand unlocking the storage box with a single touch on the fingerprint sensor.

6.2 Unlocking with Morse Code

Input your 12-digit Morse code by short pressing for '0' and long pressing for '1' on the fingerprint sensor. The box will open after the correct sequence is entered.

2 Ways to Open the Safe Fingerprint Box

Easy to Access



Image: Illustrates both fingerprint and Morse code unlocking methods for the storage box.

Your browser does not support the video tag.

Video: A comprehensive guide on how to use the biometric fingerprint storage box, including unlocking procedures.

6.3 Low Battery Reminder

When the battery level drops below 10%, the red indicator light will flash during unlocking attempts. Connect the box to a USB power source using the Type-C cable to charge it.

6.4 Emergency Unlock

In case of emergency or if the battery is too low to unlock, you can temporarily supply power via the USB charging port and then use your fingerprint or Morse code to unlock.

7. Maintenance

- Keep the fingerprint sensor clean and dry for optimal performance.
- Avoid exposing the box to extreme temperatures or moisture.
- Charge the battery regularly, especially if the low battery indicator flashes.

- Do not attempt to disassemble the lock mechanism or the box, as this may void the warranty and compromise security.

8. Troubleshooting

- **Fingerprint not recognized:** Ensure your finger is clean and dry. Try re-registering your fingerprint from different angles. If the battery is low, charge the device.
- **Box does not open:** Check the battery level. If low, connect to a power source. Ensure you are using a registered fingerprint or the correct Morse code.
- **Indicator lights not working:** The battery may be completely depleted. Connect to a power source for an extended period.
- **Accidental factory reset:** If the box is in factory mode, anyone can open it. Immediately re-register your fingerprints to secure the device.

9. Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact AICase customer service through your retailer. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question