

[Manuals.plus](#) /

› [Homeleader](#) /

› Homeleader SE-17E Electronic Digital Security Safe User Manual

Homeleader SE-17E

Homeleader SE-17E Electronic Digital Security Safe User Manual

Model: SE-17E-BLUE

INTRODUCTION

Thank you for choosing the Homeleader Electronic Digital Security Safe. This manual provides essential information for the safe and proper operation, setup, and maintenance of your new security safe. Please read this manual thoroughly before use and retain it for future reference.

The Homeleader SE-17E safe is designed with a reinforced solid steel wall structure and a thickened double-steel latch door for enhanced security. It features a digital electronic keypad for quick access and an emergency key for backup. The safe is suitable for securing valuables such as jewelry, money, documents, and small firearms in homes, offices, or during travel.

SAFETY PRECAUTIONS

- Do not store emergency keys inside the safe. Keep them in a secure, separate location.
- Ensure the safe is securely mounted if intended for permanent installation to prevent unauthorized removal.
- Keep the safe away from excessive moisture or extreme temperatures.
- Do not attempt to force the safe open if the battery is low or the code is forgotten. Use the emergency key.
- This safe is not water-resistant. Protect contents from water exposure.

PACKAGE CONTENTS

- Homeleader Electronic Digital Security Safe (Model SE-17E-BLUE)
- Emergency Keys (2)
- Mounting Hardware (Expansion bolts)
- User Manual



Image: The Homeleader SE-17E safe, open to reveal its interior, digital keypad, and emergency key access. The safe is blue with a silver keypad panel.

SETUP AND INITIAL OPERATION

1. Installing Batteries

1. Locate the battery compartment on the inside of the safe door.
2. Insert four (4) AA batteries (not included) according to the polarity indicators.
3. Close the battery compartment cover.

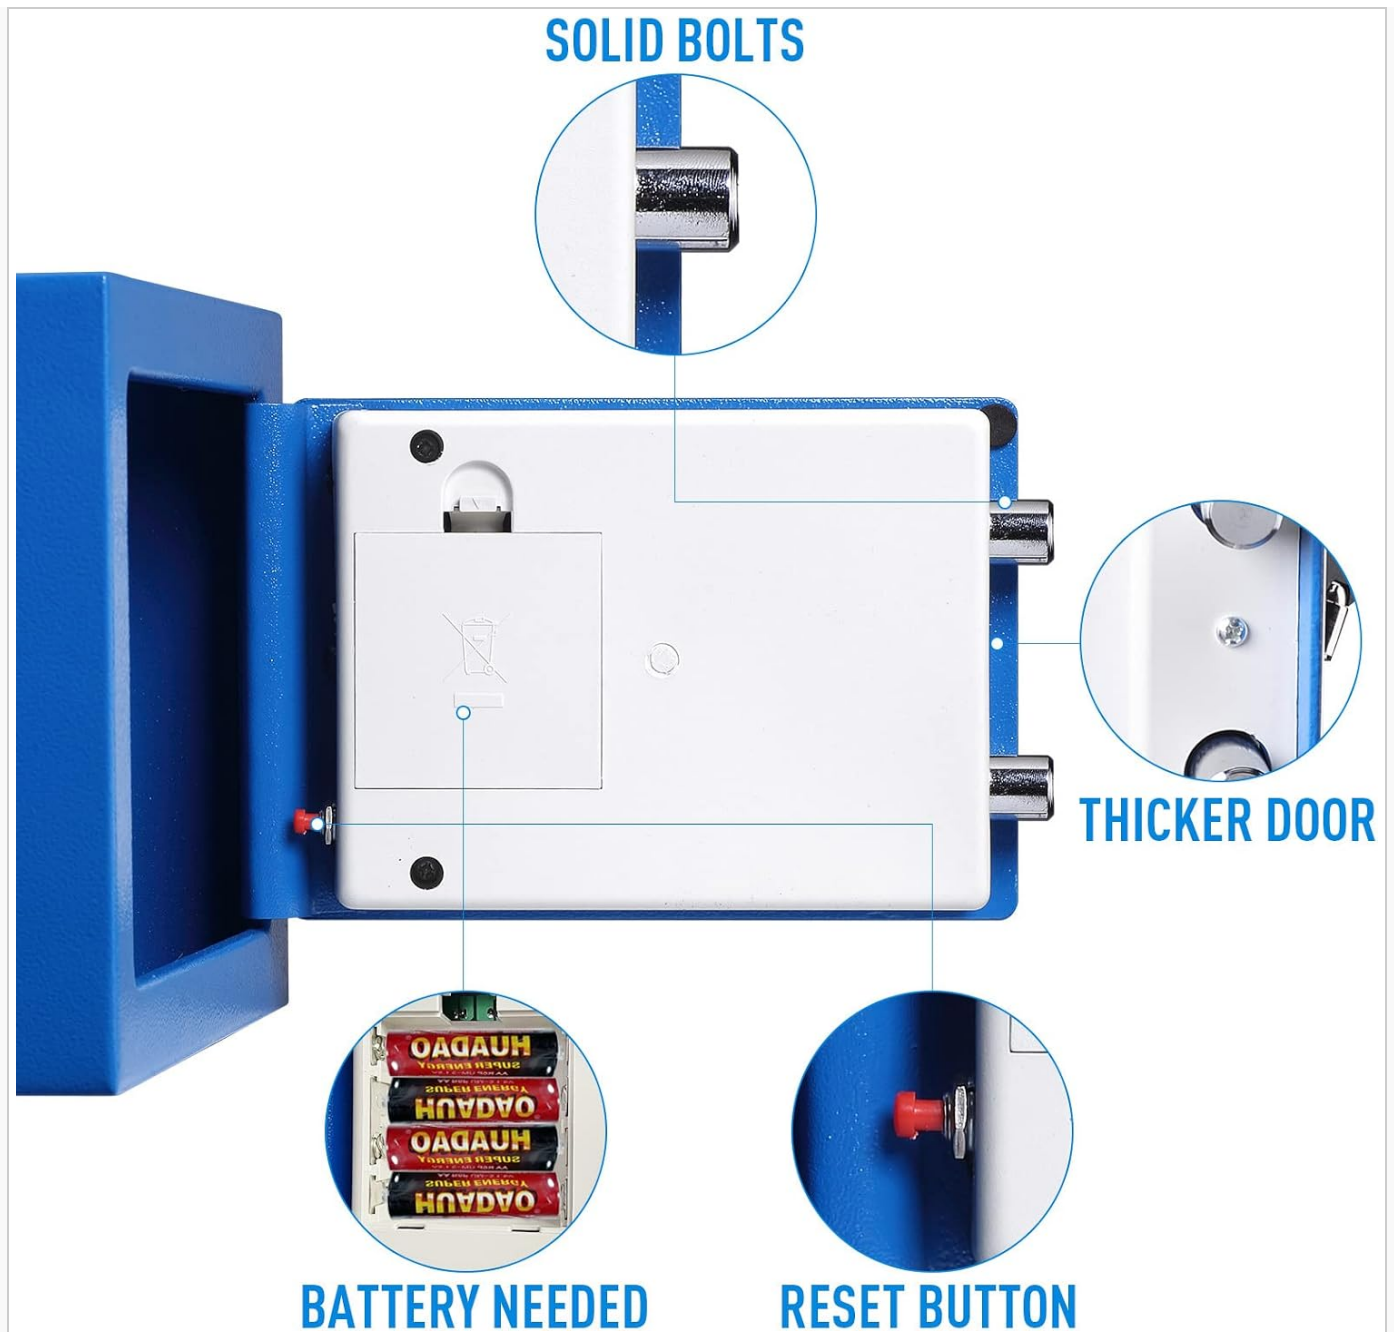


Image: Detailed view of the safe's interior door, highlighting the battery compartment and the red reset button.

2. Opening the Safe for the First Time (Using Emergency Key)

1. Locate the emergency keyhole, usually hidden behind a small cover on the keypad panel.
2. Insert one of the provided emergency keys into the keyhole and turn it clockwise.
3. While the key is turned, rotate the knob counter-clockwise to open the safe door.
4. Remove the key once the safe is open.

3. Setting Your Personal Passcode

1. With the safe door open, locate the red reset button on the inside of the door (near the battery compartment).
2. Press the red reset button. The yellow indicator light on the keypad will illuminate.
3. Within 5 seconds, enter your desired 3 to 8 digit passcode on the keypad.
4. Press the "E" button to confirm. The yellow light will turn off, and a green light may flash, indicating successful programming.
5. Test your new passcode with the door open before closing it.

2 WAYS TO OPEN THE SAFE BOX



Key+Knob



Password+Knob



Image: Visual guide illustrating the two methods of opening the safe: emergency key with knob, and digital passcode with knob.

OPERATING INSTRUCTIONS

Opening the Safe with Passcode

1. Enter your 3 to 8 digit passcode on the keypad.
2. Press the "E" button. The green indicator light will illuminate.
3. Within 5 seconds, rotate the knob counter-clockwise to open the safe door.

Closing and Locking the Safe

1. Close the safe door firmly.
2. Rotate the knob clockwise to engage the locking bolts. The safe is now locked.

Emergency Key Override

If you forget your passcode or the batteries are depleted, you can use the emergency key to open the safe. Follow the steps outlined in "Opening the Safe for the First Time (Using Emergency Key)" above.

Security Features

- **Incorrect Entry Lockout:** After 3 consecutive incorrect passcode entries, the safe will enter a lockout period for 20 seconds. After 3 more incorrect entries, the lockout period extends to 5 minutes.
- **Low Battery Warning:** The red indicator light will illuminate when batteries are low, signaling that they need replacement.

INSTALLATION (MOUNTING)

The Homeleader safe is equipped with pre-drilled mounting holes on the back for secure installation to a wall or floor. This enhances security by preventing unauthorized removal of the safe.

INSTALLATION TUTORIAL OF FIXING BOLTS

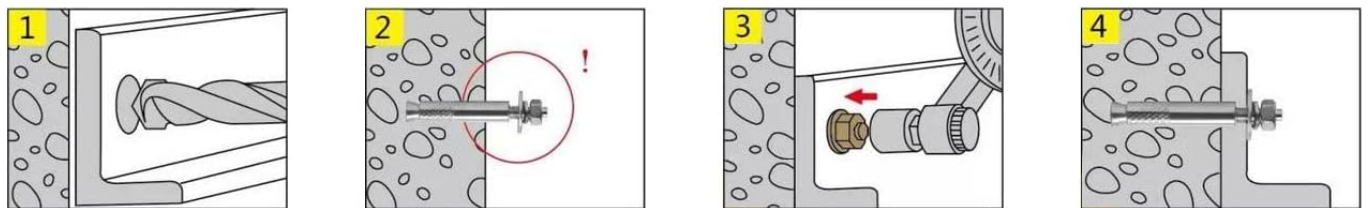


Image: An illustration demonstrating the four-step process for securely mounting the safe using expansion bolts.

1. Choose a suitable location for mounting, ensuring it is a solid surface (e.g., concrete wall, wooden stud, or floor).
2. Mark the drilling points through the pre-drilled holes on the back of the safe onto your chosen surface.
3. Drill pilot holes at the marked points using an appropriate drill bit for your surface material.
4. Align the safe with the drilled holes and insert the expansion bolts (provided) through the safe's holes and into the wall/floor.
5. Tighten the bolts securely to fasten the safe in place.

- **Battery Replacement:** Replace batteries promptly when the low battery warning appears. Use four (4) new AA batteries.
- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Keyhole Maintenance:** Keep the emergency keyhole clean and free of obstructions.
- **Regular Checks:** Periodically check the locking mechanism and mounting bolts for any signs of wear or loosening.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with passcode.	Incorrect passcode entered; batteries are low or dead.	Re-enter passcode carefully. Replace batteries. Use emergency key to open.
Keypad is unresponsive.	Batteries are completely dead or incorrectly installed.	Replace batteries, ensuring correct polarity. Use emergency key.
Safe is locked out.	Too many incorrect passcode attempts.	Wait for the lockout period to expire (20 seconds or 5 minutes) before trying again.
Cannot reset passcode.	Reset button not pressed correctly; passcode not entered within 5 seconds.	Ensure the reset button is fully pressed and the new passcode is entered promptly.

SPECIFICATIONS

Feature	Detail
Brand	Homeleader
Model Number	SE-17E-BLUE
External Dimensions (D x W x H)	9.1" x 6.7" x 6.7" (23.1 cm x 17 cm x 17 cm)
Internal Dimensions (D x W x H)	8.9" x 6.5" x 6.5" (22.6 cm x 16.5 cm x 16.5 cm)
Capacity	0.24 Cubic Feet
Lock Type	Electronic Digital Keypad, Emergency Key
Passcode Length	3-8 Digits
Material	Alloy Steel
Color	Blue
Weight	5.5 Pounds (2.5 kg)
Power Source	4 x AA Batteries (not included)
Mounting	Wall Mount (pre-drilled holes)
Alarm	Anti-theft (incorrect entry lockout)
Water Resistance	Not Water Resistant

PRODUCT SIZE

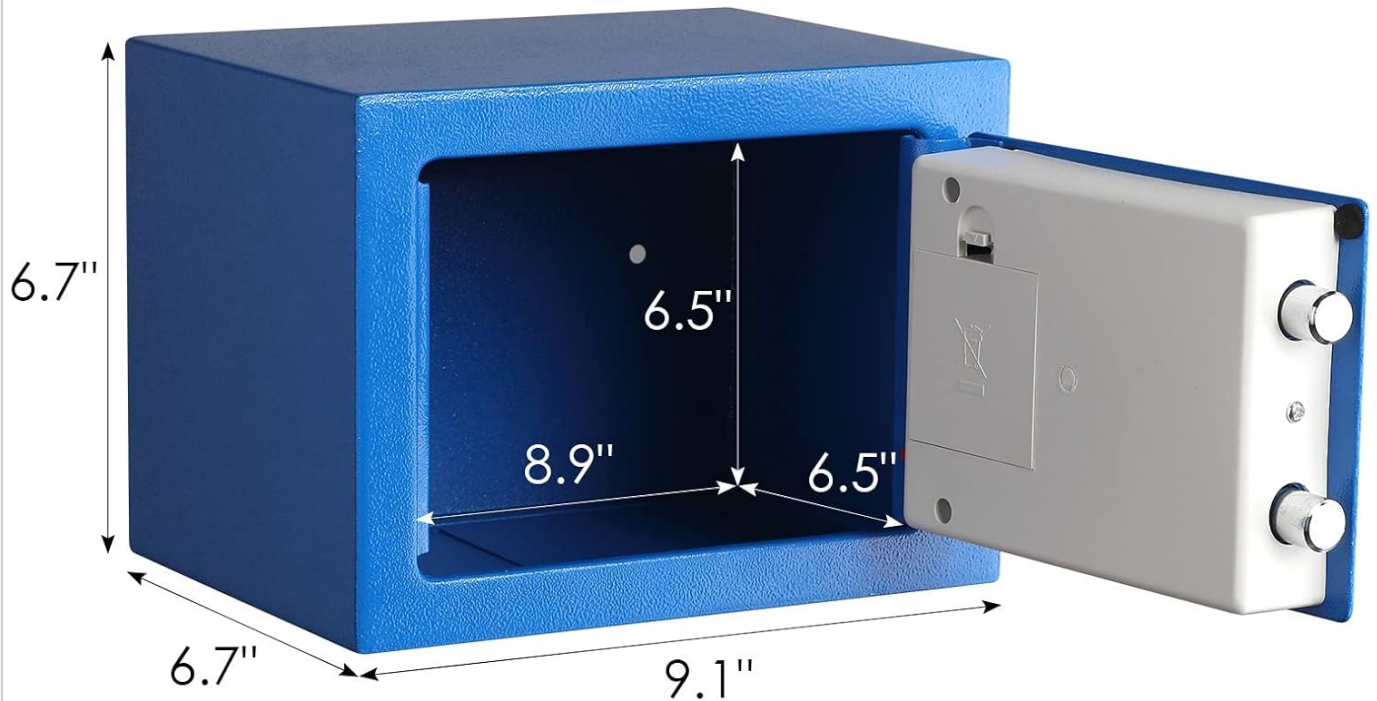


Image: A visual representation of the safe's dimensions, including external measurements of 6.7" x 9.1" x 6.7" and internal measurements of 6.5" x 8.9" x 6.5".

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Homeleader website. Please have your model number (SE-17E-BLUE) and purchase date available when contacting support.

Online Resources: For additional information and product updates, visit the [Homeleader Store on Amazon](#).

© 2026 Homeleader. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question