



[Manuals.plus](#) /

> [WOWLIVE](#) /

> WOWLIVE 154L Double Laundry Hamper with Lid and Removable Bags Instruction Manual

## WOWLIVE WOWLIVE 783902558519

# WOWLIVE 154L Double Laundry Hamper Instruction Manual

**Brand:** WOWLIVE | **Model:** WOWLIVE 783902558519

## INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your WOWLIVE 154L Double Laundry Hamper. Please read thoroughly before use to ensure proper functionality and longevity of the product.

## PRODUCT OVERVIEW

The WOWLIVE 154L Double Laundry Hamper is designed for efficient laundry organization. Key features include:

- **Sturdy Lid:** Features a fixed lid to conceal contents and odors.
- **Removable Liner Bags:** Two individual liner bags allow for easy transport of laundry to the washing machine.
- **Double Compartment Structure:** Separates darks from lights or other categories.
- **Durable Construction:** Made from high-density 600D Oxford fabric with six fiber rods for stability.
- **Spacious Capacity:** Total capacity of 154 liters, with 77 liters per compartment.



*Figure 1: The WOWLIVE 154L Double Laundry Hamper in Beige, shown with two removable liner bags.*

## SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present: 1 outer hamper body, 1 lid, 6 fiber rods, and 2 removable liner bags.
2. **Insert Fiber Rods:** Locate the six vertical sleeves inside the hamper body. Insert one fiber rod into each sleeve to provide structural support. Ensure rods are fully seated at the bottom.
3. **Attach Liner Bags:** The two removable liner bags are designed to fit into the two compartments. Secure each liner bag by attaching its loops to the toggles located on the inside rim of the hamper. There are typically two toggles per compartment.
4. **Place the Lid:** Position the lid on top of the hamper, aligning it with the edges. The lid is designed to rest securely, covering the contents.

# Large Capacity & Collapsable Laundry Hamper

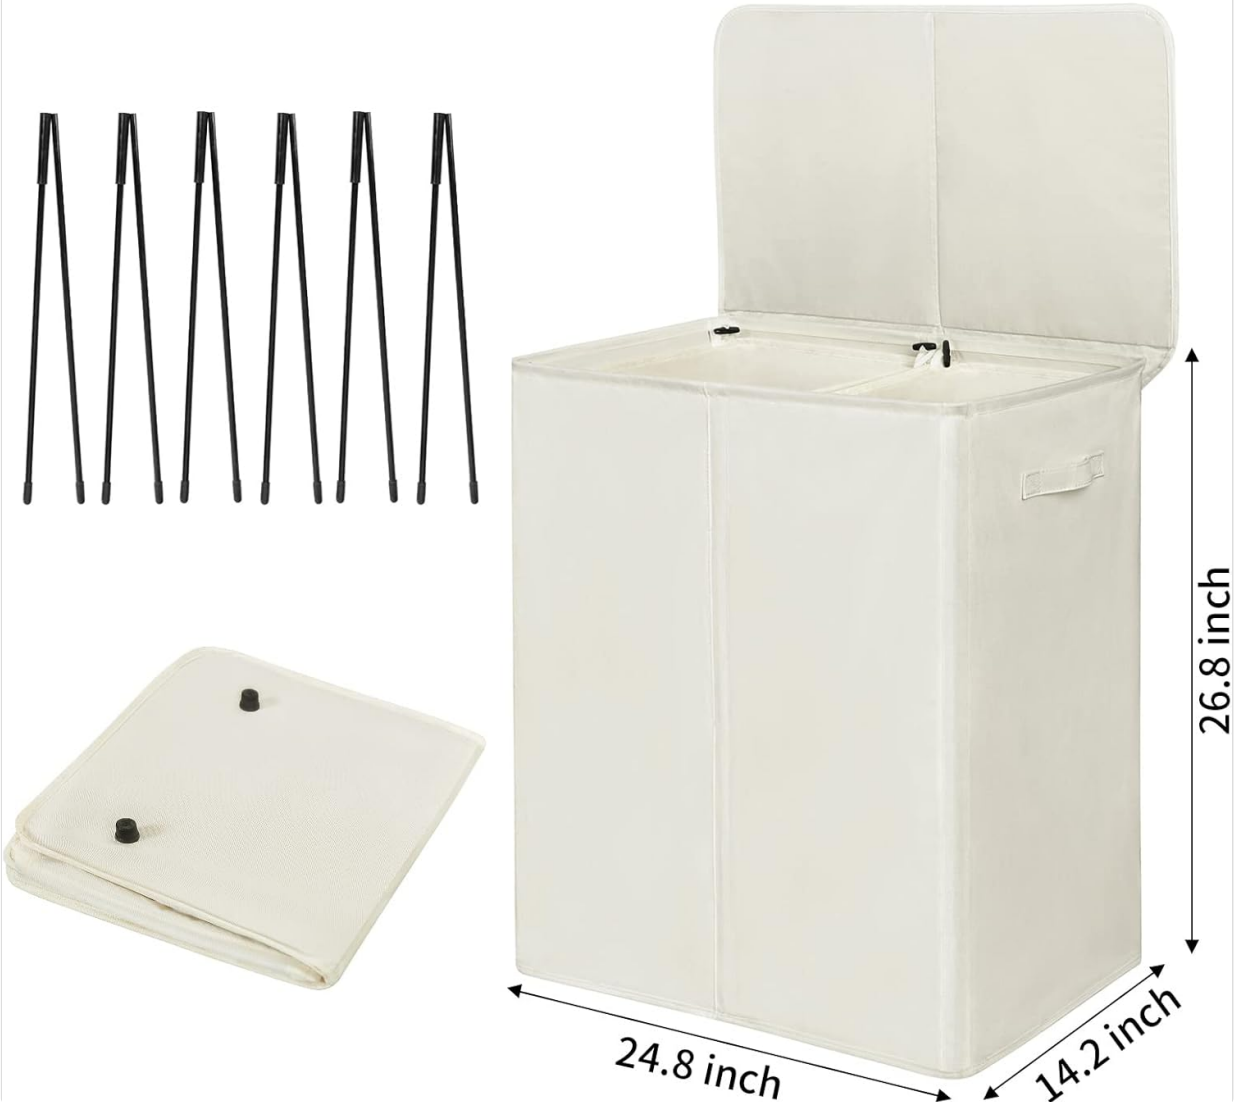


Figure 2: Visual guide for inserting fiber rods and understanding product dimensions.



*Figure 3: Detail of the toggles and Velcro used to secure the removable liner bags within the hamper.*

## OPERATING INSTRUCTIONS

- **Sorting Laundry:** Utilize the two separate compartments to sort laundry as desired (e.g., darks and lights, delicates and regular items).
- **Using the Lid:** Keep the lid closed to contain odors and maintain a tidy appearance.
- **Transporting Laundry:** When ready to wash, unhook the liner bags from the toggles and lift them out using their integrated handles. Carry the filled liner bags directly to your washing machine.
- **Returning Liner Bags:** After emptying and washing the liner bags (if applicable), re-insert them into the hamper and secure them with the toggles.



Figure 4: Demonstrates the ease of removing a liner bag from the hamper for transport.

Your browser does not support the video tag.

Video 1: An overview of the WOWLIVE 154L Double Laundry Hamper, highlighting its features and ease of use.

## MAINTENANCE

- **Cleaning the Outer Hamper:** The high-density 600D Oxford fabric is durable and water-resistant. Wipe down the exterior with a damp cloth and mild detergent as needed. Allow to air dry completely.
- **Cleaning Liner Bags:** The removable liner bags can be machine washed on a gentle cycle with cold water. Air dry or tumble dry on low heat. Do not bleach or iron.
- **Frame Care:** Periodically check the fiber rods for any signs of damage. Replace if necessary to maintain the hamper's structural integrity.



Figure 5: Illustrates the waterproof nature of the Oxford fabric, making cleaning easier.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Hamper is not standing upright or appears flimsy.	Fiber rods are not correctly inserted or are damaged.	Ensure all six fiber rods are fully inserted into their respective sleeves. Check rods for bends or breaks and replace if necessary.
Liner bags detach easily.	Liner bag loops are not securely fastened to the toggles.	Re-attach the loops of the liner bags firmly to the toggles on the hamper's rim.
Unpleasant odors persist.	Liner bags or hamper exterior require cleaning.	Clean the removable liner bags and wipe down the hamper exterior as per maintenance instructions. Ensure laundry is not left damp inside for extended periods.

## SPECIFICATIONS

---

- **Model:** WOWLIVE 783902558519
- **Dimensions (Overall):** 24.8" L x 14.2" W x 26.8" H (63cm L x 36cm W x 68cm H)
- **Capacity:** 154 Liters (77 Liters per compartment)
- **Material:** High-density 600D Oxford Fabric
- **Color:** Beige
- **Number of Compartments:** 2
- **Included Components:** Hamper body, lid, 6 fiber rods, 2 removable liner bags
- **Mounting Type:** Floor Mount
- **Item Weight:** Approximately 4.07 pounds (1.85 kg)

## WARRANTY AND SUPPORT

---

For any product inquiries, warranty claims, or support needs, please contact WOWLIVE customer service. Refer to the contact information provided with your purchase or visit the official WOWLIVE website.

**Note:** Keep your purchase receipt for warranty purposes.