

[Manuals.plus](#) /

› [UEME](#) /

› UEME Retro Tabletop Jukebox with Bluetooth, FM Radio, AUX-in Port and Color Changing LED Lights Brown User Manual

UEME JK-01

UEME Retro Tabletop Jukebox User Manual

Model: JK-01

INTRODUCTION

Thank you for purchasing the UEME Retro Tabletop Jukebox. This device combines nostalgic aesthetics with modern audio technology, offering Bluetooth connectivity, FM radio, and an AUX-in port, complemented by color-changing LED lights. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and enjoyment of your jukebox.



Image: Front view of the UEME Retro Tabletop Jukebox, showcasing its classic design with illuminated arch and central control panel.

WHAT'S IN THE BOX

- UEME Retro Tabletop Jukebox (Model JK-01)

- Power Adapter
- Owner's Manual
- Quick Start Guide

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the jukebox on a stable, flat surface. Ensure adequate ventilation around the unit.
3. **Power Connection:** Connect the provided power adapter to the DC 9V input port on the back of the jukebox. Plug the other end into a standard wall outlet.
4. **Antenna (FM Radio):** For optimal FM radio reception, extend the telescopic antenna located on the back of the unit. Adjust its position as needed.

Product Dimensions



Image: Diagram illustrating the dimensions of the UEME Retro Tabletop Jukebox, showing its compact size suitable for tabletops.

OPERATING INSTRUCTIONS

Power On/Off

Press the **POWER** button located on the front panel to turn the unit on or off.

Mode Selection

Press the **MODE** button to cycle through available input modes: Bluetooth, FM Radio, and AUX-in.

Bluetooth Mode

1. Switch the jukebox to Bluetooth mode using the **MODE** button. The display will indicate 'BT' and a pairing sound will be heard.
2. Enable Bluetooth on your audio device (smartphone, tablet, etc.).
3. Search for 'UEME JK-01' in your device's Bluetooth list and select it to pair.
4. Once paired, a confirmation sound will be heard. You can now stream audio wirelessly from your device.
5. Use the **PREV** and **NEXT** buttons on the jukebox or your connected device to skip tracks.

Bluetooth



Image: The jukebox with a Bluetooth icon and two smartphones, illustrating its wireless connectivity feature.

FM Radio Mode

1. Switch the jukebox to FM Radio mode using the **MODE** button.
2. **Auto Scan:** Press and hold the **SCAN** button to automatically scan and store available FM stations. The jukebox can store up to 50 presets.
3. **Manual Tune:** Briefly press the **PREV** or **NEXT** buttons to manually tune to the next available station.
4. **Select Presets:** Use the **PREV** or **NEXT** buttons to navigate through stored preset stations.



FM radio



Image: The jukebox with its telescopic FM antenna extended, indicating its radio functionality.

AUX-in Mode

1. Switch the jukebox to AUX-in mode using the **MODE** button.
2. Connect an external audio device (e.g., MP3 player, CD player) to the **AUX IN** port on the front of the jukebox using a 3.5mm audio cable (not included).
3. Audio will now play through the jukebox speakers. Control playback from your connected device.

Volume Control

Use the **VOL+** and **VOL-** buttons to adjust the playback volume.

EQ Modes

Press the **EQ** button to cycle through preset equalizer settings: Jazz, Vocal, Flat, Classic, Pop, and Rock. Select the mode that best suits your audio preference.

LED Lights

The jukebox features color-changing LED light tubing. Press and hold the **MODE** button to turn the LED lights on or off.



Image: Detailed view highlighting the rotating LED lights and the dual stereo speakers of the jukebox.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the jukebox. Do not use abrasive cleaners, waxes, or solvents.
- **Dust:** Regularly dust the unit to prevent accumulation, especially around speaker grilles and control buttons.

- **Storage:** If storing the unit for an extended period, disconnect the power adapter and store it in a cool, dry place, preferably in its original packaging.
- **Liquid Exposure:** Keep the jukebox away from liquids and excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; Outlet not active	Ensure power adapter is securely connected to the jukebox and a working wall outlet.
No sound	Volume too low; Incorrect mode selected; Device not paired (Bluetooth); AUX cable loose	Increase volume. Verify correct mode (Bluetooth, FM, AUX). Re-pair Bluetooth device. Check AUX cable connection.
Poor FM reception	Antenna not extended; Weak signal area	Fully extend and adjust the telescopic antenna. Try relocating the jukebox to an area with better signal.
Bluetooth device won't pair	Jukebox not in pairing mode; Device too far; Bluetooth already connected to another device	Ensure jukebox is in Bluetooth mode. Move device closer to jukebox (within 33 feet). Disconnect from other Bluetooth devices.
LED lights not working	Lights turned off	Press and hold the MODE button to toggle the lights on.

SPECIFICATIONS

- **Model:** JK-01
- **Brand:** UEME
- **Connectivity:** Bluetooth 5.1, 3.5mm AUX-IN, FM Radio
- **Speakers:** 2 x 8W Stereo Speakers (16 Watt total)
- **FM Frequency Range:** 87.5MHz - 108MHz
- **FM Presets:** Up to 50 stations
- **EQ Modes:** Jazz, Vocal, Flat, Classic, Pop, Rock
- **LED Lights:** Color-changing tubing
- **Dimensions (L x W x H):** Approximately 26 cm x 18.5 cm x 37 cm (10.24 x 7.28 x 14.57 inches)
- **Weight:** Approximately 8 pounds (3.6 kg)
- **Power Input:** DC 9V
- **Country of Origin:** China

WARRANTY AND SUPPORT

UEME products are designed and manufactured to the highest quality standards. For warranty information or technical support, please refer to the contact details provided in the Quick Start Guide or visit the official UEME website. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question