

[Manuals.plus](#) /

› [AECOJOY](#) /

› AECOJOY 3-Seat Outdoor Patio Swing with Canopy Instruction Manual

AECOJOY B09P89RKFM

AECOJOY 3-Seat Outdoor Patio Swing with Canopy Instruction Manual

INTRODUCTION

Thank you for choosing the AECOJOY 3-Seat Outdoor Patio Swing with Canopy. This product is designed to provide a comfortable and versatile outdoor seating solution, functioning as both a 3-seat swing and a convertible hammock. Its adjustable canopy offers protection from the sun, enhancing your outdoor relaxation experience. Please read this manual thoroughly before assembly and use to ensure safe and proper operation.



Image: The AECOJOY 3-Seat Outdoor Patio Swing with Canopy, showcasing its design in an outdoor environment.

SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum weight capacity of 750 lbs (approximately 340 kg). Overloading can cause structural damage and injury.
- **Assembly:** Ensure all parts are correctly assembled and tightened according to the instructions. Regularly check all bolts and nuts for tightness.
- **Placement:** Place the swing on a flat, stable surface. Avoid uneven ground or slopes.
- **Weather Conditions:** While the canopy offers some UV and water resistance, it is recommended to secure or remove the canopy and cushions during strong winds, heavy rain, or snow to prevent damage.
- **Children:** Supervise children when they are using the swing. Do not allow them to stand on the swing or engage in rough play.
- **Maintenance:** Periodically inspect the swing for any signs of wear, damage, or loose components. Replace damaged parts immediately.

PACKAGE CONTENTS

Before assembly, ensure all components are present. If any parts are missing or damaged, please contact customer support.

Item	Description	Quantity
A	Main Frame Components (Legs, Crossbars, Top Bar)	1 Set
B	Swing Seat Frame	1
C	Canopy Frame and Fabric	1 Set
D	Seat Cushions	3
E	Hardware Pack (Bolts, Nuts, Washers, Springs)	1 Set
F	Assembly Tool (e.g., Allen Wrench)	1

SETUP AND ASSEMBLY

Assembly typically requires two adults. Follow these steps carefully:

- Unpack Components:** Lay out all parts on a clean, soft surface to prevent scratches. Verify all parts are present against the package contents list.
- Assemble Main Frame:** Connect the leg components and crossbars using the provided hardware. Ensure all connections are secure but do not fully tighten until the entire frame is assembled.
- Attach Swing Seat:** Secure the swing seat frame to the main frame using the heavy-duty springs and appropriate hardware. Ensure the seat hangs freely and securely.
- Install Canopy Frame:** Assemble the canopy frame and attach it to the top bar of the main frame.
- Drape Canopy Fabric:** Place the canopy fabric over the canopy frame and secure it as instructed.
- Place Cushions:** Position the removable cushions on the swing seat.
- Final Tightening:** Once all components are in place, fully tighten all bolts and nuts.



2-in-1 DESIGN *Easily transform from swing chair to hammock bed*



Pull the Buckle Fix the Backrest Frame



Fix the Seat Frame



Fasten the Buckle

Image: Visual guide demonstrating the 2-in-1 design, converting the swing chair into a hammock bed by pulling a buckle, fixing the backrest frame, fixing the seat frame, and fastening the buckle.

BUILT TO LAST

Brighten Your Delightful Outdoor Time



Heavy Spring with 750LBS



Soft Padded Cushion



Fixed Bar Design



Non-slip Feet



High Density Fabric

Image: Close-up details of the swing's construction, including the heavy spring with 750 lbs capacity, soft padded cushion, fixed bar design for stability, non-slip feet, and high-density fabric.

Assembly Video

Your browser does not support the video tag.

Video: Official AECOJOY video demonstrating the features and possibly assembly of the 3-Seat Patio Swing.

OPERATING INSTRUCTIONS

Converting to Hammock

The swing features a 2-in-1 converting design, allowing it to transform from a 3-seat swing to a comfortable hammock bed. To convert:

1. Locate the lock-and-release system on the backrest frame.
2. Pull the buckle to release the backrest.
3. Adjust the backrest to a flat position, aligning it with the seat.
4. Fix the seat frame and fasten the buckle to secure the hammock position.

Adjusting the Canopy

The canopy is adjustable to provide optimal shade. To adjust:

1. Locate the adjustable knob on the side of the canopy frame.
2. Loosen the knob by turning it counter-clockwise.
3. Adjust the canopy to your desired angle to block sunlight.
4. Tighten the knob by turning it clockwise to secure the canopy in place.

ADJUSTABLE CONVERTIBLE CANOPY

Effective harmful UV blocking & water repellent



Image: Illustration of the adjustable canopy, showing its range of motion and the adjustable knob used to secure its position.

MAINTENANCE

- **Cleaning Frame:** Wipe the metal frame with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent rust.
- **Cleaning Cushions:** The cushions are removable. Spot clean with a mild detergent and water. Allow to air dry completely before reattaching or storing. Do not machine wash or tumble dry.
- **Canopy Care:** The canopy fabric is water repellent and UV resistant. Clean with a soft brush and mild soap solution. Avoid harsh chemicals.
- **Seasonal Storage:** During off-seasons or prolonged periods of non-use, it is recommended to store the

cushions and canopy indoors. If possible, cover the entire swing with a weather-resistant cover.

- **Hardware Check:** Periodically check all bolts, nuts, and springs to ensure they remain tight and secure. Tighten as needed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing feels unstable or wobbly.	Loose hardware; uneven ground.	Ensure all bolts and nuts are fully tightened. Move the swing to a flat, level surface.
Canopy does not stay in position.	Adjustable knob is loose.	Tighten the adjustable knob firmly after positioning the canopy.
Difficulty converting to hammock.	Mechanism not fully disengaged or engaged.	Ensure the lock-and-release buckle is fully pulled/released. Follow conversion steps precisely.
Cushions feel uncomfortable.	Personal preference; prolonged use.	The cushions are removable and can be supplemented with additional padding if desired.

SPECIFICATIONS

Product Dimension

Products bearing: **750 lbs**



Image: Detailed diagram illustrating the overall dimensions and seat dimensions of the patio swing.

Feature	Detail
Brand	AECOJOY
Model Number	B09P89RKFM
Color	Beige
Material	Linen, Iron (Frame: Alloy Steel)
Product Dimensions (L x W x H)	71.6" x 42.5" x 70" (Overall)
Item Weight	152.5 Pounds
Maximum Weight Recommendation	750 Pounds
Seat Depth	42.5 inches

Feature	Detail
Finish Type	Painted
Required Assembly	Yes

WARRANTY AND SUPPORT

For warranty information or technical support, please contact AECOJOY customer service. Keep your purchase receipt for any warranty claims. You can typically find contact information on the manufacturer's website or through the retailer where you purchased the product.

For further assistance, please visit the official AECOJOY store: [AECOJOY Store on Amazon](#)