



[Manuals.plus](#) /

> [JISOWA](#) /

> JISOWA Replacement Remote Control Instruction Manual for Yamaha AV Receivers (Model d85be300-6f47-4f30-b789-005ba59b2b3b)

JISOWA d85be300-6f47-4f30-b789-005ba59b2b3b

JISOWA Replacement Remote Control Instruction Manual

For Yamaha AV Receivers (Model: d85be300-6f47-4f30-b789-005ba59b2b3b)

1. INTRODUCTION

This manual provides comprehensive instructions for the JISOWA replacement remote control, designed for various Yamaha AV receiver models. This remote is pre-programmed and requires no additional setup or programming. Simply insert batteries to begin operation.

2. PRODUCT OVERVIEW

The JISOWA replacement remote control features an ergonomic design for comfortable handling and agile operation. It is constructed from new ABS material, ensuring durability and environmental responsibility. The buttons are made of soft plastic, providing a comfortable feel and quick response.

Replacement Receiver Remote Control for **Yamaha** AV Audio Video Receiver

No Setup Required

No Programming or Pairing Required.



Long-distance Control

Transmission Singal Range is father than 40 ft.

Figure 2.1: Front, side, and back views of the remote control with approximate dimensions (Length: 8.27 inches, Width: 1.97 inches, Thickness: 0.75 inches). This image illustrates the overall design and size of the remote.

01 Ergonomic design

Comfortable to hold, agile to operate.



Induction light



02 New ABS material



Environmentally
Durable
Quality assurance

Figure 2.2: Detailed view highlighting the ergonomic button layout, induction light, and the battery compartment. The image also shows the ABS material pellets, emphasizing the durable and environmentally friendly construction.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA 1.5V batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: Batteries are not included with the remote control. Please use new alkaline AAA batteries for optimal performance.

3.2 Initial Use

This remote control is pre-programmed for compatible Yamaha AV receivers. No additional programming or setup is required. Once batteries are installed, the remote is ready for immediate use.

4. OPERATING INSTRUCTIONS

Point the remote control directly at your Yamaha AV receiver. Ensure there are no obstructions between the remote and the receiver's infrared sensor.

4.1 Basic Functions

- **Power On/Off:** Press the **POWER** button to turn the receiver on or off.
- **Volume Control:** Use the **VOLUME +/-** buttons to adjust the audio level.
- **Input Selection:** Press the dedicated input buttons (e.g., **HDMI**, **AV**, **TUNER**, **USB**) to switch between different audio/video sources.
- **Mute:** Press the **MUTE** button to temporarily silence the audio.

4.2 Advanced Functions

- **Tuner Functions:** Use **FM/AM**, **PRESET**, and navigation buttons for radio tuning.
- **Scene Selection:** Utilize the **SCENE** buttons for quick access to pre-configured settings.
- **Navigation:** Use the directional arrow buttons and **ENTER** for menu navigation.

Enjoy Your Time



Endless Entertainment

Figure 4.1: The remote control incorporates a smart chip for sensitive and durable performance, ensuring stable signal transmission. This technology allows for precise control over your AV receiver.



**Special soft plastic buttons.
Feel comfortable.**



**Buttons sensitive.
Response quickly.**



Figure 4.2: This image highlights the soft plastic buttons designed for comfort and quick response, ensuring a smooth user experience.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or solvents, as these may damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.

6. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the proper polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the AV receiver's infrared sensor.
- Confirm you are within the effective operating range (up to 10 meters).

- **Specific button not working (e.g., SLEEP):**

- This remote is a replacement and may not fully replicate all functions if your original receiver remote did not have that specific button or function. For example, the SLEEP button function may not work if your receiver does not support it via the original remote.

7. SPECIFICATIONS

Brand	JISOWA
Model Number	d85be300-6f47-4f30-b789-005ba59b2b3b
Connectivity Technology	Infrared
Compatible Devices	Yamaha AV Receivers (Home Theater)
Power Source	2 x AAA Batteries (not included)
Maximum Range	10 Meters (approximately 33 feet)
Color	Black
Item Weight	73 Grams

8. WARRANTY INFORMATION

This product is covered by a standard return policy. For specific details regarding returns or replacements for defective units, please refer to the retailer's return policy or contact customer support.

9. SUPPORT

For any questions, concerns, or assistance with your JISOWA replacement remote control, please contact the seller directly through the platform where the purchase was made. Provide your order details for prompt support.