

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Little People Barbie DreamHouse Playset Instruction Manual

Fisher-Price HKB80

Fisher-Price Little People Barbie DreamHouse Playset

Model: HKB80

INTRODUCTION

The Fisher-Price Little People Barbie DreamHouse Playset offers an interactive and engaging play experience for toddlers and preschool children aged 18 months to 5 years. This playset is designed to encourage imaginative play and develop fine motor skills through various interactive features.

The DreamHouse features three floors of play, including a moving elevator, a rotating clothes closet, a light-up pool with a slide, and multiple activation points that trigger over 45 songs, sounds, and phrases. It comes with two Little People figures and five additional play pieces, all sized appropriately for small hands.



The complete Fisher-Price Little People Barbie DreamHouse Playset with included figures and accessories.

SETUP AND ASSEMBLY

Before play can begin, some assembly of the DreamHouse playset is required. Please follow these instructions carefully.

Package Contents:

- 1 x Barbie Little DreamHouse Playset (assembly required)
- 2 x Little People Figures
- 5 x Play Pieces (e.g., table, chairs, oven trays)

Battery Installation:

The playset requires 3 AA batteries for its interactive lights, sounds, and music features. Batteries are not included and must be installed prior to use.

1. Locate the battery compartment, typically on the back or base of the playset.
2. Using a Phillips head screwdriver (not included), loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Insert 3 new AA (LR6) alkaline batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
5. Replace the cover and tighten the screw securely.

Important: Always use fresh batteries. Do not mix old and new batteries, or different types of batteries (e.g., alkaline, standard, rechargeable).

OPERATING INSTRUCTIONS

The Barbie DreamHouse Playset offers a variety of interactive elements for engaging play.

Key Features and How to Use Them:

- **Moving Elevator:** Place a Little People figure on the elevator platform. Manually slide the platform up and down the side of the playset to move figures between floors.
- **Spiral Slide & Light-Up Pool:** Position a figure at the top of the spiral slide. Gently push the figure down the slide to send them into the light-up pool on the second floor. The pool will illuminate as the figure lands.
- **Activation Points:** The playset features four distinct activation points that trigger over 45 songs, sounds, and phrases. These points are located in various areas of the house, such as the bathroom (toilet), kitchen, living room, and pool area. Pressing or interacting with these points will activate the sounds and lights.
- **Rotating Clothes Closet:** The closet on the top floor can be rotated to reveal different outfits or scenes, encouraging imaginative dress-up play.
- **Opening Refrigerator/Oven:** The kitchen area includes doors that can be opened, allowing for pretend cooking and food storage.



**4 play points activate 45+ songs,
sounds and phrases**

Pressing the toilet button activates sounds and phrases.



Figures can slide down into the light-up pool for interactive fun.



The kitchen features an oven with an opening door for pretend play.

MAINTENANCE

Proper care will ensure the longevity and continued enjoyment of your playset.

Cleaning:

To clean the playset, wipe surfaces with a damp cloth using mild soap and water. Do not immerse the playset in water, especially the electronic components. Avoid using harsh cleaners or abrasives, as these can damage the plastic.

Battery Care:

- Remove batteries if the playset will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

If you encounter any issues with your playset, please refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No sound or lights from activation points.	Batteries are dead, incorrectly installed, or missing.	Check battery compartment. Replace with fresh AA batteries, ensuring correct polarity.
Sounds are distorted or faint.	Batteries are low.	Replace all batteries with new AA alkaline batteries.
Elevator or slide not moving smoothly.	Obstruction or debris.	Inspect the tracks and clear any obstructions. Ensure figures are placed correctly.
Playset seems unstable after assembly.	Parts not fully clicked into place.	Review assembly instructions and ensure all connecting pieces are securely fastened until they click.

SPECIFICATIONS

- **Product Dimensions:** 16.54 x 24.02 x 24.02 inches (L x W x H)
- **Item Weight:** 2.87 pounds
- **Model Number:** HKB80
- **Manufacturer Recommended Age:** 18 months - 5 years
- **Batteries Required:** 3 AA batteries (not included)
- **Manufacturer:** Fisher-Price
- **Release Date:** June 13, 2023

WARRANTY AND SUPPORT

Fisher-Price products are manufactured to high-quality standards. For information regarding warranty, replacement parts, or further assistance, please contact Fisher-Price Customer Service directly. Contact details can typically be found on the product packaging or the official Fisher-Price website.

Visit the official Fisher-Price website for more information:www.fisher-price.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I get the sounds to work again on my Fisher-Price Little People Barbie DreamHouse Playset (HKB80)?

If your Fisher-Price Little People Barbie DreamHouse (Model HKB80) has working lights but no sound, please try the following troubleshooting steps: Check the Volume Switch: There is a power/volume switch located on the back or...

[Read full answer](#)