



Manuals.plus /

› Hot Wheels /

› Hot Wheels Jurassic World Dominion Clash 'n Crash Playset Instruction Manual

Hot Wheels HJC53

Hot Wheels Jurassic World Dominion Clash 'n Crash Playset Instruction Manual

Model: HJC53

1. INTRODUCTION

Welcome to the exciting world of the Hot Wheels Jurassic World Dominion Clash 'n Crash Playset. This manual provides essential information for the safe assembly, operation, and maintenance of your new track set. Please read all instructions carefully before use.

Product Overview

The Hot Wheels Jurassic World Dominion Clash 'n Crash Track Set allows children to recreate thrilling scenes from the Jurassic World franchise. It features a motorized booster to propel Hot Wheels cars along the track and a large Giganotosaurus figure that interacts with the vehicles. The set includes one Hot Wheels car and offers opportunities to integrate additional dinosaur figures (sold separately) for enhanced play.

What's Included

- 1 Hot Wheels Jurassic World Clash 'N Crash Track Set components
- 1 Hot Wheels vehicle



Image 1.1: The Hot Wheels Jurassic World Dominion Clash 'n Crash Playset, showing both the product packaging and the fully assembled track with a car and dinosaur figures.

2. SETUP

Follow these steps to assemble your playset and prepare it for play.


Assembly Instructions

1. Carefully unpack all components from the box.
2. Connect the track pieces according to the diagrams provided in the separate assembly guide. Ensure all connections are secure.
3. Place the Giganotosaurus figure in its designated position on the track.
4. Attach any decorative elements, such as trees or smaller dinosaur figures, to their respective spots on the playset base.

Battery Installation

The motorized booster requires batteries for operation.

- Locate the battery compartment on the motorized booster unit.
- Using a Phillips head screwdriver (not included), open the battery compartment cover.
- Insert 2 '**D**' size **batteries** (not included), ensuring correct polarity (+/-).
- Replace the battery compartment cover and secure it with the screw.

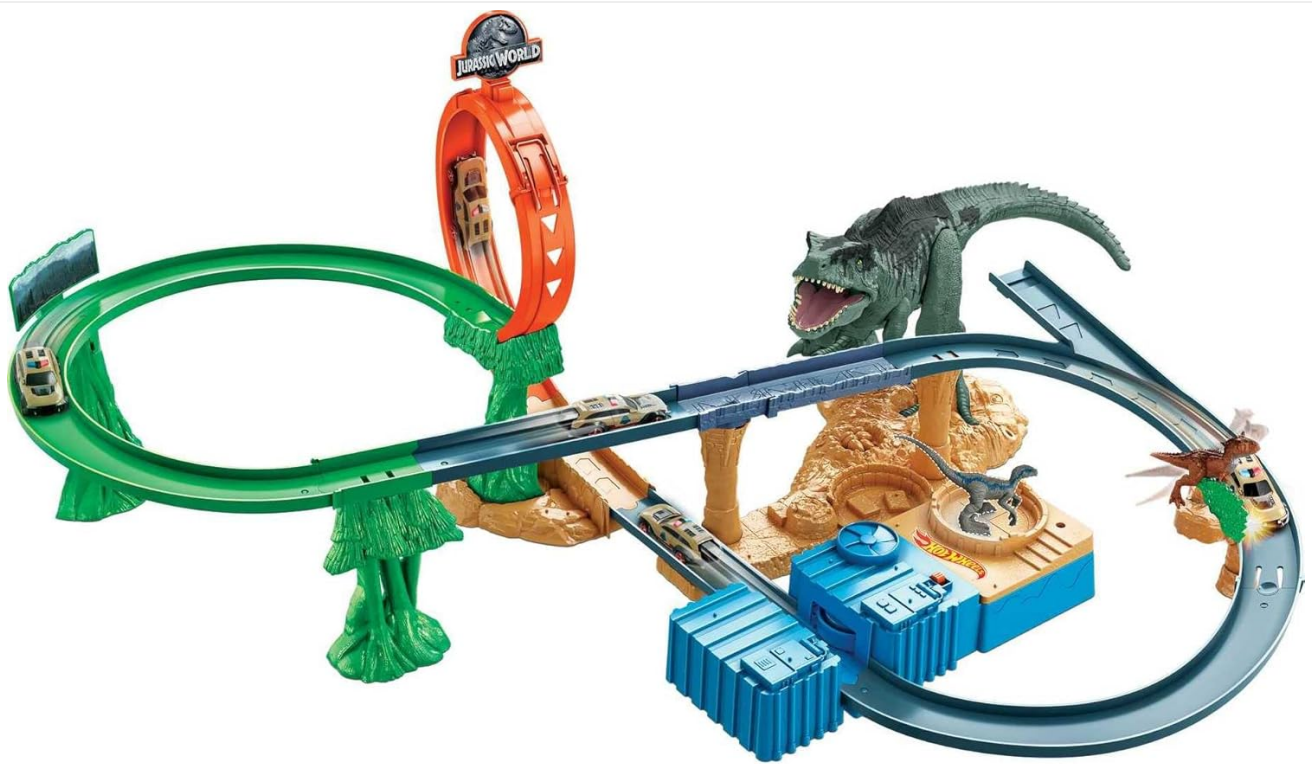

MOTORIZED BOOSTER KEEPS CARS MOVING

Image 2.1: A detailed view of the motorized booster unit, which requires 2 'D' batteries for operation.

3. OPERATING INSTRUCTIONS

Once assembled and batteries are installed, you can begin playing with your Clash 'n' Crash Playset.

Basic Play

1. Turn on the motorized booster using the switch located on the unit.
2. Place the included Hot Wheels vehicle at the starting point of the track, just before the booster.
3. Release the car to allow the booster to propel it along the track, through the loop, and towards the Giganotosaurus.



Image 3.1: A child engaging with the playset, demonstrating the launch of a Hot Wheels car onto the track.

Giganotosaurus Interaction

The Giganotosaurus is a key interactive element of the playset.

- As the car approaches the Giganotosaurus, manually control the dinosaur by its tail to make it lunge and attempt to 'chomp' the car.
- Timing is crucial: if the Giganotosaurus successfully chomps the car, it will capture the vehicle.
- If the Giganotosaurus misses the car, the bridge section it stands on may collapse, allowing the car to continue its journey or tumble.

***MOVE THE DINO
TO CATCH THE CAR!***



Image 3.2: Illustrates the interactive feature where a hand maneuvers the Giganotosaurus to catch a car as it passes on the track.

MISS THE CAR & THE BRIDGE COLLAPSES!



Image 3.3: Shows the consequence of missing the car, with the track bridge collapsing, adding an element of challenge to the game.

4. MAINTENANCE

Proper care will ensure the longevity of your playset.

- **Cleaning:** Wipe down track pieces and figures with a dry or slightly damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the playset in a cool, dry place away from direct sunlight to prevent material degradation.
- **Battery Care:** Remove batteries from the motorized booster if the toy will not be used for an extended period to prevent leakage.

5. TROUBLESHOOTING

If you encounter issues with your playset, refer to these common solutions.

- **Car not moving or moving slowly:**

- Check if the motorized booster is switched on.
 - Ensure batteries are correctly installed and not depleted. Replace if necessary.
 - Verify that the track pieces are securely connected, allowing for smooth car movement.
- **Giganotosaurus not interacting properly:**
 - Ensure the dinosaur figure is correctly positioned on its base.
 - Practice timing the lunge action with the car's speed.
- **Track pieces disconnecting:**
 - Firmly press track connectors together until they click into place.
 - Avoid lifting or moving the assembled track set by individual sections.

6. SPECIFICATIONS

| | |
|-------------------------------------|------------------------------|
| Product Dimensions | 28.88 x 34.89 x 14.55 inches |
| Item Weight | 4.01 pounds |
| Model Number | HJC53 |
| ASIN | B09P9LYRCP |
| Manufacturer Recommended Age | 3 years and up |
| Batteries Required | 2 D batteries (not included) |
| Manufacturer | Mattel |
| Release Date | April 17, 2022 |

7. WARRANTY INFORMATION

For detailed warranty information regarding your Hot Wheels Jurassic World Dominion Clash 'n Crash Playset, please refer to the official Mattel website or contact their customer service directly. Warranty terms and conditions may vary by region.

8. CUSTOMER SUPPORT

If you require further assistance, have questions about assembly, operation, or need to report a missing or damaged part, please contact Mattel customer support. Contact information can typically be found on the product packaging or their official website.