

- Manuals.plus /
- › Hourleey /
- › Hourleey Impact Sprinkler on Tripod Base Instruction Manual

Hourleey Impact Sprinkle

Hourleey Impact Sprinkler on Tripod Base

Model: Impact Sprinkle

1. SAFETY INFORMATION

Adult supervision is recommended during use of this product. Ensure all connections are secure to prevent leaks and potential hazards. Do not operate the sprinkler near electrical outlets or equipment.

2. PRODUCT OVERVIEW

The Hourleey Impact Sprinkler on Tripod Base is designed for efficient watering of lawns, gardens, and other outdoor areas. It features a durable brass impact sprinkler head and an adjustable tripod stand, providing versatile coverage and easy setup.



Image: The Hourleey Impact Sprinkler on Tripod Base actively watering a lawn.

Key features include 0-360 degree rotation, adjustable spray distance and angle, and a robust construction for long-lasting performance.

3. PACKAGE CONTENTS

- 1 x Brass Impact Sprinkler Head
- 1 x Adjustable Tripod Base

4. SETUP INSTRUCTIONS

1. **Assemble the Tripod Base:** Extend the tripod legs to your desired height. The adjustable tripod sprinkler base can be extended from 16 to 27 inches. Secure the legs using the flip locks.
2. **Attach the Sprinkler Head:** Screw the brass impact sprinkler head onto the top of the tripod base. Ensure it is tightened securely to prevent leaks.

3. **Connect the Water Hose:** Connect your standard 3/4 inch garden hose to the inlet on the tripod base. The goose neck hose is designed for easy connection. Ensure the rubber filter O-ring is in place to prevent clogging.



Image: A detailed view showing the tightening knob, filter, and quick release leg clips for easy installation and removal.

Setup Video Guide

Your browser does not support the video tag.

Video: An official Hourleey video demonstrating the setup and initial use of the impact sprinkler.

5. OPERATING INSTRUCTIONS

1. **Position the Sprinkler:** Place the assembled sprinkler in the desired watering area. Ensure the tripod legs are stable on the ground.
2. **Turn on Water Supply:** Slowly turn on the water supply from your faucet. The sprinkler will begin to spray water.
3. **Observe Coverage:** Monitor the spray pattern and coverage area. The sprinkler can cover approximately 20-

35 feet in radius, depending on water pressure (maximum 80 PSI).



Image: The impact sprinkler effectively watering a large section of a lawn.

6. ADJUSTMENTS

6.1. Adjusting Spray Angle and Distance

The sprinkler head allows for 0-360 degree rotation. You can adjust the spray distance and angle using the four different adjustments on the sprinkler head. Experiment with these settings to achieve your desired watering pattern.



Image: A hand demonstrating how to adjust the spray angle and distance mechanisms on the sprinkler head.

6.2. Adjusting Tripod Height

The tripod legs can be adjusted to vary the height of the sprinkler. Loosen the swivel bolts on the goose neck hose and the leg clips, extend or retract the legs, and then secure them firmly. The height can be adjusted from 16 to 27 inches.

16-37 INCH HIGH

①



②




③



HEIGHT: 16"



HEIGHT: 27 "

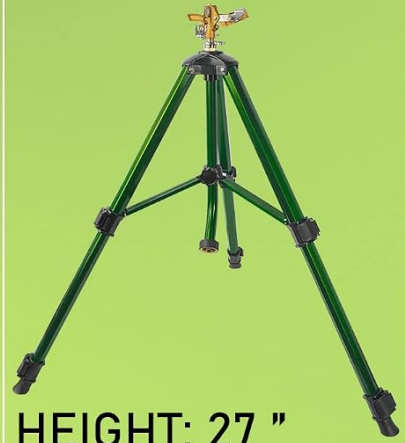

HEIGHT: 37 "



Image: Visual representation of the tripod sprinkler at various adjustable heights, from 16 to 37 inches.



Image: Close-up of the quick release leg clips, which allow for easy extension and secure locking of the tripod legs.

7. MAINTENANCE

To ensure optimal performance and longevity of your sprinkler, regular maintenance is recommended.

- **Filter Cleaning:** The goose neck hose is equipped with a rubber filter O-ring designed to filter sand and gravel. Periodically check and clean this filter to prevent the nozzle from clogging.
- **Storage:** During colder months or extended periods of non-use, drain all water from the sprinkler and store it in a dry, protected area to prevent freezing damage.



Image: A close-up view of the water inlet, showing the integrated rubber filter O-ring designed to prevent debris from entering the sprinkler head.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Sprinkler not rotating or rotating incorrectly	Low water pressure, clogged nozzle, or obstruction in the rotation mechanism.	Ensure adequate water pressure. Check and clean the filter and nozzle for any debris. Inspect the rotation mechanism for obstructions.
Uneven spray pattern or reduced coverage	Clogged nozzle, incorrect spray angle/distance settings, or low water pressure.	Clean the nozzle. Adjust the spray angle and distance settings on the sprinkler head. Verify sufficient water pressure.

Problem	Possible Cause	Solution
Water leaking from connections	Loose connections or damaged O-rings/washers.	Tighten all hose and sprinkler head connections. Check and replace any worn or damaged O-rings or washers.
Sprinkler falls over during operation	Unstable tripod placement or very high water pressure.	Ensure the tripod legs are fully extended and stable on a level surface. If water pressure is excessively high, consider reducing it or adding weight to the tripod base for stability.

9. SPECIFICATIONS

Feature	Detail
Brand	Hourleey
Model Number	Impact Sprinkle
Material	Brass (sprinkler head), Solid Alloy Metal and Plastic (tripod stand)
Style	Impulse
Coverage Area	Approx. 20-35 FT radius
Maximum Water Pressure	80 PSI
Maximum Flow Rate	15 GPM
Inlet Connection Size	3/4 inches (US Standard)
Tripod Height Adjustment	16 to 27 inches
Item Dimensions (L x W x H)	4 x 5 x 6 inches (sprinkler head)

10. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact Hourleey customer service directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09PB9Y8BH>

More documents and user manuals: <https://manuals.plus/>