

[Manuals.plus](#) /

› [Pairtty](#) /

› Universal Replacement Remote Control BN59-01315J for Samsung TVs Instruction Manual

## Pairtty BN59-01315J

# Universal Replacement Remote Control BN59-01315J Instruction Manual

Brand: Pairtty | Model: BN59-01315J

## PRODUCT OVERVIEW

The Pairtty Universal Replacement Remote Control BN59-01315J is designed to be a direct replacement for your original Samsung TV remote. It offers broad compatibility with various Samsung LCD, LED, HDTV, and 3D Smart TV series, providing quick access buttons for popular streaming applications.





Image: Front view of the Pairtty Universal Replacement Remote Control BN59-01315J, showcasing its full button layout.

## SETUP

This remote control is designed for immediate use with compatible Samsung TVs without the need for complex programming or pairing. Simply install the batteries, and it should function directly.

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside.
4. Slide the battery cover back into place until it clicks securely.

*Note: Batteries are not included with the remote control. Please use new AAA alkaline batteries for optimal performance.*





*Image: Front and back view of the remote control, highlighting the battery compartment for easy installation.*

## OPERATING INSTRUCTIONS

---

The remote control features a comprehensive set of buttons for navigating your Samsung TV and accessing various functions.



## Function Button

 Turns the TV on and off.

**SOURCE:** Displays and selects the available video sources.

 : Access the saved channels list.

**PRE-CH:** Returns to the previous channel.

**VOL+/-:** Adjusts the volume.

**CH+/-:** Changes channels.

**MUTE:** Cuts off the sound temporarily.

**CHLIST:** Displays channel lists on the screen.

 Accesses to NETFLIX

 Accesses to prime video

 Accesses to Samsung TV Plus

 : Press to access the SM home dashboard or hold it down to access your most recently used apps, as well as any notifications.

**GUIDE:** Displays and Electronic Program Guide.

**RETURN:** Returns to the previous menu.

**EXIT:** Exits the menu.

**Color buttons (RED/GREEN/YELLOW/BLUE):** Shortcut keys for interactive functions

**INFO:** Displays information on the TV screen.

*Image: Detailed diagram illustrating the various buttons on the remote control and their corresponding functions.*

### Key Functions:

- **Power Button** (●): Turns the TV on and off.
- **SOURCE:** Displays and selects available video sources (e.g., HDMI, AV).
- **Number Pad (0-9):** Directly input channel numbers.
- **PRE-CH:** Returns to the previous channel.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **CH LIST:** Displays the channel list on the screen.
- **NETFLIX:** Direct access button for the Netflix application.

- **Prime Video:** Direct access button for the Amazon Prime Video application.
- **Samsung TV Plus:** Direct access button for Samsung TV Plus.
- **Home Button** (🏠): Press to access the Smart Hub home dashboard or hold to access your most recently used apps and notifications.
- **Arrow Buttons (Up, Down, Left, Right):** Navigate through menus and options.
- **GUIDE:** Displays the Electronic Program Guide.
- **RETURN:** Returns to the previous menu or screen.
- **EXIT:** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Shortcut keys for interactive functions, specific to certain applications or TV features.
- **INFO:** Displays information about the current program or input.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Control media playback.

# Shortcut Button

NETFLIX

Life is more convenient

prime  
video

Fast entry

V  
samsung  
TV Plus



*Image: Close-up view of the remote control, highlighting the dedicated shortcut buttons for Netflix, Prime Video, and Samsung TV Plus.*

## COMPATIBILITY

The Pairtty Universal Replacement Remote Control BN59-01315J is compatible with a wide range of Samsung TV models, including LCD, LED, HDTV, and 3D Smart TVs. It is designed to work seamlessly without additional programming.

### Known Compatible Models:

- **2021 Models:** UN50AU8000FXZA, UN55TU8300FXZA, QN85Q70AAFXZA, QN75Q70AAFXZA, QN70Q60AAVXZA, QN55QN85AAFXZA, QN75QN90AAFXZA, QN75Q80AAFXZA, QN55QN90AAFXZA, QN55LS03AAFXZA, QN65QN900AFXZA, QN85QN800AFXZA, QN55Q70AAFXZA
- **2019-2020 Models:** UN58TU7000F, UN58TU700DF, UN65TU7000F, UN43TU7000F, UN65TU700DF, UN70TU7000F, UN70TU700DF, UN75TU7000F, UN75TU700DF, UN55TU7000FXZA, UN43TU7000FXZA, UN50TU7000FXZA, UN50TU700DFXZA, UN55TU7000FXZA, UN58TU7000FXZA, UN65TU7000FXZA, UN65TU7000FXZC, UN70TU7000FXZA, UN75TU7000FXZA, UN43TU7000FXZC, UN50TU7000FXZC, UN55TU7000FXZC, UN58TU7000FXZC, UN65TU7000FXZC, UN70TU7000FXZC, UN75TU7000FXZC

*This list is not exhaustive. The remote is designed to be broadly compatible with most Samsung Smart TVs.*



Compatible 2021 Series tv models:  
AU8000 Q60A Q70A TU9010 QN85A  
QN900A Q80A And others Series Smart tv

Compatible 2020 Series tv models:  
RU9000 TU8000 TU8300 Q60T Q70T  
Q80T Q90T Q800T Q900TS Q950TS  
LST7 LS05 And others Series Smart tv

Compatible 2019 Series tv models:  
RU8000 Q50 Q60 Q70 Q80 Q900

And others 2018 2017 Series Smart tv

*Image: The remote control displayed next to a list of compatible Samsung TV series and models from 2019, 2020, and 2021.*

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid or aerosol cleaners.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage:** Do not drop the remote control or expose it to extreme temperatures, humidity, or direct sunlight.

TROUBLESHOOTING

| Problem                                           | Possible Cause                                          | Solution                                                                                             |
|---------------------------------------------------|---------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| Remote is not responding.                         | Dead or incorrectly inserted batteries.                 | Check battery orientation. Replace with new AAA batteries.                                           |
| Remote works intermittently.                      | Low battery power or obstruction between remote and TV. | Replace batteries. Ensure a clear line of sight to the TV's IR receiver.                             |
| Specific buttons (e.g., app buttons) do not work. | TV model incompatibility or app not installed/updated.  | Verify your TV model is listed as compatible. Ensure the app is installed and up-to-date on your TV. |
| Remote range is poor.                             | Weak batteries or interference.                         | Replace batteries. Reduce interference from other electronic devices.                                |

SPECIFICATIONS

- **Model Number:** BN59-01315J
- **Brand:** Pairtty
- **Color:** Black
- **Product Dimensions:** 1.97 x 1.97 x 1.97 inches (approximate)
- **Item Weight:** 1.76 ounces
- **Batteries Required:** 2 x AAA (not included)
- **Special Feature:** Universal compatibility with Samsung TVs
- **Compatible Devices:** Television
- **Max Number of Supported Devices:** 30 (referring to the remote's internal capability, not simultaneous control)

WARRANTY AND SUPPORT

For any questions or concerns regarding your Pairtty Universal Replacement Remote Control BN59-01315J, please contact the manufacturer or seller directly. They are committed to providing timely assistance and support.  
*Please refer to your purchase documentation for specific warranty details and contact information.*

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**