

Gotega External DVD Drive USB 3.0 Type C

Gotega External DVD Drive USB 3.0 Type C User Manual

Model: External DVD Drive USB 3.0 Type C

1. INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Gotega External DVD Drive USB 3.0 Type C. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

 
2. KEY FEATURES

- **High-Speed Data Transmission:** Equipped with USB 3.0 and USB Type-C ports, offering data transfer speeds up to 5Gbps.
- **Versatile Optical Drive:** Supports up to 8x DVD rewriting/reading speed and up to 24x CD writing/reading speed. Functions as both a CD/DVD player and burner.
- **Plug & Play:** No driver installation required for most operating systems.
- **Stable Power Supply:** Includes an additional Micro-5V Power Port to ensure sufficient power, especially for ultra-thin laptops.
- **Wide Compatibility:** Compatible with Windows 98/SE/ME/2000/2003/XP/10/8/7/Vista, Linux OS, Mojave OS, and full version Mac OS systems (IOS 8.6 to 10.14).
- **Portable Design:** Thin, lightweight, and shockproof for easy transport. Features a unique 3D texture design and cool LED light.

High Speed USB 3.0 & Type C

▶ USB 3.0  

▶ USB 2.0  

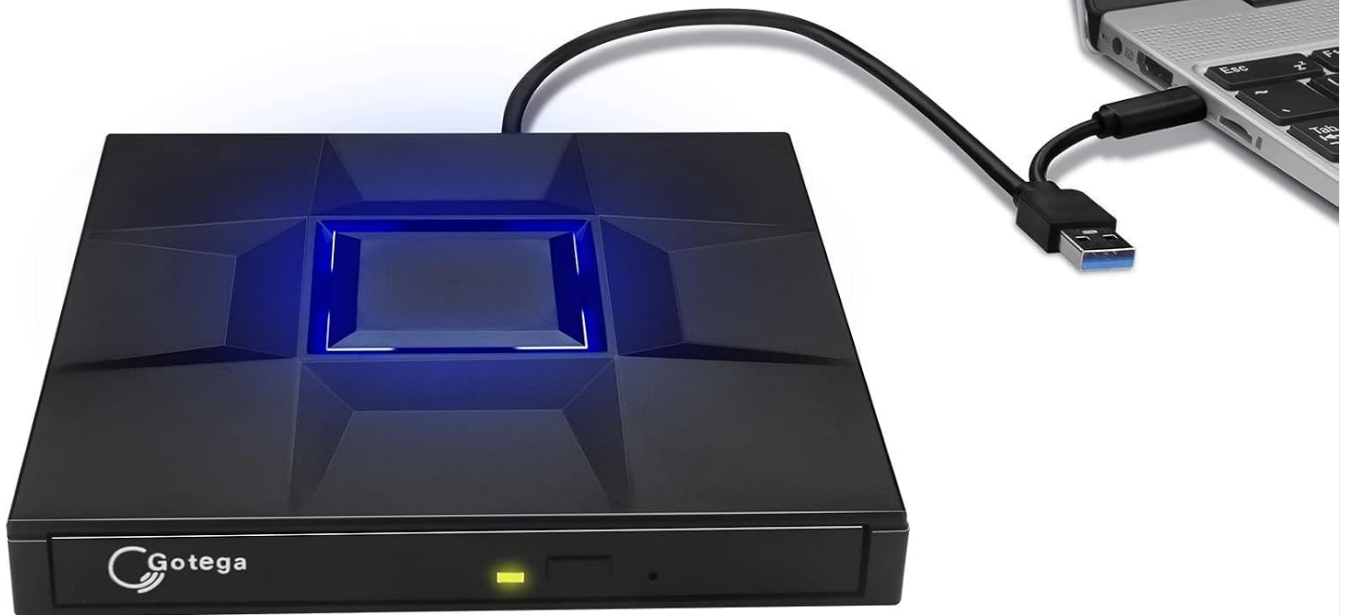

Max Speed

CD 

DVD 

DVD

+/-RW
Rewrite
RDL

CD

+/-RW
Burner

VCD

ROM

Image: The Gotega External DVD Drive highlighting its USB 3.0 and Type-C connectivity, along with its maximum read/write speeds for CDs (24X) and DVDs (8X).

HIGH PERFORMANCE



Low Noise



Shock Proof



Error Correction



High Speed



Thin mm



With Cool LED Light

Image: Key performance features of the Gotega External DVD Drive, including low noise, shockproof design, error correction, high speed, thin profile, and a cool blue LED light.

3. COMPATIBILITY

The Gotega External DVD Drive is designed for broad compatibility with various operating systems and devices:

Supported Operating Systems:

- Windows 98 / SE / ME / 2000 / 2003 / XP / 10 / 8 / 7 / Vista
- Linux OS
- Mojave OS
- Full version Mac OS System (IOS 8.6 to 10.14)

Compatible Devices:

- Laptops (e.g., Mac laptop 2015, MacBook Pro, ASUS gaming laptop, Apple MacBook Air 2020)
- Desktops
- iMac

- Mac Mini

Not Supported:

- TV
- Car systems
- Mini CD
- iPad
- Phone
- Surface Pro



Image: Visual representation of the drive's wide compatibility with different operating systems and computer brands, alongside a list of devices that are not supported.

4. SETUP INSTRUCTIONS

4.1 Connecting the Drive

1. Locate the integrated USB 3.0 and USB Type-C cable on the underside of the drive.
2. Connect the appropriate connector (USB 3.0 or USB Type-C) to an available port on your laptop or PC.
3. The drive is plug-and-play, meaning it should be automatically detected by your operating system without needing to install additional drivers.



Image: The bottom view of the drive, illustrating the integrated USB 3.0 cable, the Type-C connector, and the Micro-5V power port for optional external power.

4.2 Power Supply (Optional)

For some ultra-thin laptops (e.g., Microsoft Surface Pro, Lenovo Yoga) or if you experience insufficient power supply, use the additional Micro-5V Power Port:

1. Connect a standard USB Micro-A cable (not always included) to the Micro-5V Power Port on the drive.
2. Plug the other end of the Micro-A cable into a separate USB power source (e.g., a wall adapter, a powered USB hub). This will supplement the power provided by your computer.



If power shortages, please use extra power cord to connect to another power supply



This power supply port can help the laptop provide enough power to ensure the stability of the connection when the DVD drive cannot be recognized due to insufficient power supply. Applicable to Microsoft Surface pro, Lenovo, yoga, etc

Image: Instructions on how to use the Micro-5V power port with an external power source to ensure stable operation, particularly for laptops that may not provide enough power through a single USB connection.

5. OPERATING INSTRUCTIONS

5.1 Playing CDs/DVDs

1. Ensure the drive is properly connected to your computer.
2. Press the eject button on the front of the drive to open the disc tray.
3. Place your CD or DVD onto the tray, ensuring it is seated correctly with the label side facing up.
4. Gently push the tray back into the drive until it clicks shut.
5. Your computer should automatically detect the disc. If not, open "This PC" or "My Computer" and double-click the drive icon.
6. Use your preferred media player software (e.g., VLC Media Player, Windows Media Player) to play the content.

MULTIFUNCTION

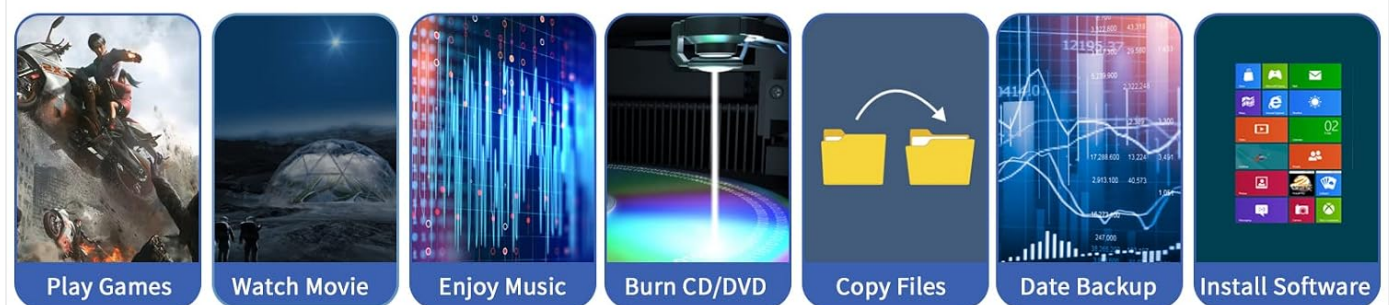 


Image: The external DVD drive in use, demonstrating its multifunctionality for various tasks including media playback, data management, and software installation.

5.2 Burning CDs/DVDs

1. Insert a blank CD-R/RW or DVD-R/RW into the drive as described above.
2. Your operating system may prompt you to choose an action (e.g., "Burn files to disc"). Select the appropriate option or open your burning software.
3. Follow the instructions provided by your burning software to select files, configure burning settings, and start the burning process.
4. Ensure the drive is stable and not disturbed during the burning process to prevent errors.

5.3 Region Code for DVDs

For DVD playback, the external DVD drive needs to be set to the same region code as the DVD disc. You can usually find the region code on your disc's information. Most DVD player software allows you to change the drive's region code a limited number of times.

WIDE COMPATIBILITY



 
Windows OS



Mojave OS



Mac OS

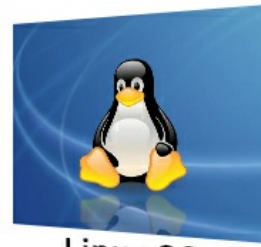

Linux OS



Vista

Support

Windows 98/SE/ME/2000/2003/XP/Vista/Windows 10/8/7
Linux OS, Mojave OS all version Mac OS system (ios 8.6 to 10.14)

Not Support

TV, Car, iPad, Chromebook
Surface Pro, Ubuntu, Blu-Ray



Apple MacBook Air 2020



Laptop



Desktop



iMac



ASUS Gaming Laptop

Image: Guide on adjusting the DVD region code for proper playback, detailing the six global DVD regions.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the drive. Do not use liquid cleaners or aerosols.
- **Disc Care:** Always handle discs by their edges. Keep discs clean and free of scratches to ensure proper reading and writing.
- **Storage:** When not in use, store the drive in a cool, dry place. The integrated cable management helps keep the cable protected during storage and travel.
- **Avoid Impact:** While the drive is designed to be shockproof, avoid dropping or subjecting it to strong impacts, especially when a disc is inside.

7. TROUBLESHOOTING

- **Drive Not Detected:**
 - Ensure the USB cable is securely connected to both the drive and your computer.
 - Try connecting to a different USB port on your computer.
 - If using an ultra-thin laptop, connect an external power source to the Micro-5V Power Port.
 - Restart your computer.
- **Disc Not Reading/Writing:**
 - Check if the disc is clean and free of scratches or smudges.
 - Ensure the disc is placed correctly on the tray, label side up.
 - Verify that your media player or burning software is up to date.
 - For DVDs, ensure the drive's region code matches the disc's region code.
- **Insufficient Power:**
 - Connect an external power source to the Micro-5V Power Port using a compatible USB Micro-A cable and power adapter.
 - Try connecting the drive to a powered USB hub.

- **Disc Stuck in Drive:**

- Locate the small emergency eject hole on the front of the drive, usually next to the eject button.
- Gently insert a straightened paperclip into the hole until the tray partially ejects. Pull the tray out manually to retrieve the disc.

8. SPECIFICATIONS

Brand	Gotega
Model	External DVD Drive USB 3.0 Type C
Hardware Interface	USB 3.0 Type A, USB 3.0 Type C
Optical Storage Write Speed	CD: 24x, DVD: 8x
Optical Storage Read Speed	CD: 24x, DVD: 8x
Cache Memory Installed Size	2 MB
Compatible Devices	Laptop, PC
Operating System	Linux, Windows 10, Windows 7, Windows 8, Windows 98, Windows SE, Windows ME, Windows 2000, Windows 2003, Windows XP, Windows Vista, Mojave OS, Mac OS (IOS 8.6 to 10.14)
Color	Black
Item Weight	11.52 ounces

9. WARRANTY AND SUPPORT

Gotega is committed to providing high-quality products and excellent customer service. While specific warranty details are not provided in the product information, for any issues or support needs, please contact Gotega customer service through the platform where you purchased the product or visit the official Gotega store page.

We value user experience and are dedicated to assisting you with any problems you may encounter with your Gotega product.

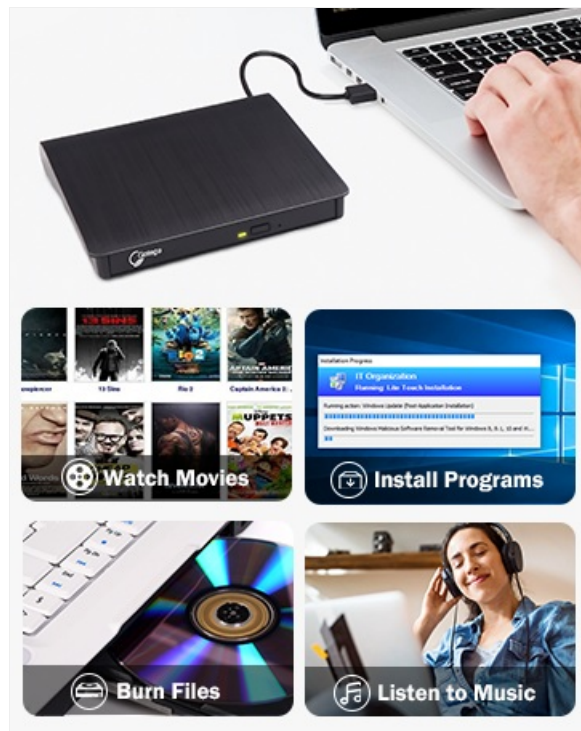 


Image: Gotega customer support is available to assist with product inquiries and issues.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question