

## JIGA PC5

# JIGA 27000mAh Power Bank PC5 User Manual

Model: PC5

## INTRODUCTION

---

Thank you for choosing the JIGA 27000mAh Power Bank PC5. This portable charger is designed to provide reliable and fast charging for your electronic devices on the go. With its high capacity and multiple fast-charging ports, it ensures your devices stay powered throughout your day. Please read this manual carefully to understand the product's features, operation, and maintenance for optimal performance and safety.

## PRODUCT OVERVIEW

---

### Key Features

- **Advanced Fast Charging:** Equipped with 22.5W output and PD20W fast charging technology, capable of charging two smartphones up to 61% in approximately 30 minutes.
- **High Capacity:** The 27000mAh capacity allows for 4 to 6 full charges of most smartphones, suitable for extended use.
- **Multiple Connections:** Features 3 output ports (2 USB-A 22.5W and 1 USB-C 20W) to charge up to 3 devices simultaneously.
- **Universal Compatibility:** Compatible with a wide range of smartphones including iPhones, Huawei, Samsung, Google Pixel, Xiaomi, as well as other devices like earphones, smartwatches, and GoPro cameras.
- **Smart Digital Display:** An accurate digital screen shows the remaining battery level, ensuring you are always aware of the power bank's status.

### Package Contents

The package includes:

- JIGA 27000mAh Power Bank PC5
- USB Charging Cable
- User Manual



# Verpackungsinhalt



Image: Package contents of the JIGA Power Bank PC5, showing the power bank, a USB cable, and the instruction manual.

## SETUP

---

### Initial Charging of the Power Bank

1. Before first use, fully charge your JIGA Power Bank.
2. Connect the provided USB charging cable to one of the power bank's input ports (USB-C or Micro USB).
3. Connect the other end of the cable to a suitable USB wall adapter (not included) or a computer's USB port.
4. The digital display will show the charging progress. A full charge typically takes approximately 8 hours.
5. Once the display shows 100%, the power bank is fully charged and ready for use.

# USB-C Ausgang

Superschnelles Aufladen



Image: The USB-C port on the JIGA Power Bank PC5, which functions as both an input for charging the power bank and an output for charging devices.

## OPERATING INSTRUCTIONS

### Charging External Devices

1. Connect your device's charging cable to one of the power bank's output ports (USB-A or USB-C).
2. Connect the other end of the cable to your device.
3. The power bank will automatically begin charging your device. The digital display will show the remaining battery percentage of the power bank.
4. You can charge up to three devices simultaneously using the available output ports.

# Mehrere Geräte gleichzeitig aufladen



USB Ausgang



USB-C Eingang/Ausgang



Micro-USB Eingang



Image: The JIGA Power Bank PC5 connected and charging three different devices (a tablet and two smartphones) at the same time.

## Checking Battery Level

Press the power button once to activate the digital display, which will show the current battery percentage of the power bank.

## MAINTENANCE

---

- Keep the power bank away from water, moisture, and extreme temperatures.
- Avoid dropping or subjecting the power bank to strong impacts.
- Clean the power bank with a dry, soft cloth. Do not use harsh chemicals or abrasive materials.

- For long-term storage, charge the power bank to about 50-75% and store it in a cool, dry place. Recharge every 3 months to maintain battery health.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging	Loose cable connection; faulty cable/adaptor; power bank fully charged.	Check all connections; try a different cable or adaptor; verify battery level on display.
Device not charging from power bank	Power bank battery low; loose cable connection; incompatible cable; device issue.	Recharge power bank; check cable connections; try a different cable; ensure device is functioning correctly.
Slow charging	Non-fast charging cable/adaptor; multiple devices charging; device not supporting fast charge.	Use a fast-charging compatible cable and adaptor; charge fewer devices simultaneously; confirm device fast charge compatibility.
Digital display not working	Power bank is off; internal fault.	Press the power button; if issue persists, contact customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	PC5
Battery Capacity	27000 mAh
Battery Type	Lithium-Polymer (6 cells included)
Input Ports	USB Type-C (PD20W), Micro USB
Output Ports	2 x USB Type-A (22.5W), 1 x USB Type-C (PD20W)
Total Output	22.5W Max
Voltage	5 Volts
Current Intensity	2.1 A
Charging Time (Power Bank)	Approx. 8 hours
Dimensions (L x W x H)	13 x 7 x 2.5 cm (5.1 x 2.8 x 1.0 inches)
Weight	400 Grams (0.88 lbs)
Color	Black
Special Feature	Fast Charging, Digital Display

Feature	Detail
Compatible Devices	Smartphones (iPhone, Huawei, Samsung, Google Pixel, Xiaomi), Earphones, Smartwatches, GoPro Cameras

## WARRANTY INFORMATION

---

The JIGA Power Bank PC5 comes with a **3-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. Please retain your proof of purchase for warranty claims. Spare parts availability is also guaranteed for 3 years.

## CUSTOMER SUPPORT

---

If you encounter any issues or have questions regarding your JIGA Power Bank PC5 that are not covered in this manual, please contact JIGA customer support through the retailer's platform or the official JIGA website. Our support team is available to assist you with product inquiries, troubleshooting, and warranty services.