



[Manuals.plus](#) /

> [daylight24](#) /

> daylight24 Full Page 3X Magnifier Floor Lamp User Manual

**daylight24 402039-02**

# daylight24 Full Page 3X Magnifier Floor Lamp

Model: 402039-02

## 1. INTRODUCTION

Thank you for purchasing the daylight24 Full Page 3X Magnifier Floor Lamp. This lamp is designed to provide natural daylight illumination and 3X magnification, enhancing clarity for various tasks such as reading, crafting, and hobbies. Please read this manual thoroughly before assembly and operation to ensure safe and optimal use of your product.



## 2. SAFETY INSTRUCTIONS

---

- Ensure the lamp is placed on a stable, level surface to prevent tipping.
- Do not look directly into the LED light source for extended periods.
- Keep the power cord away from heat sources, sharp edges, and wet areas.
- Unplug the lamp from the power outlet before cleaning or performing any maintenance.
- Do not attempt to modify or repair the lamp yourself. Contact qualified service personnel for assistance.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

## 3. PACKAGE CONTENTS

---

Verify that all components are present before assembly:

- Magnifier Lamp Head with Gooseneck
- Lamp Pole Sections
- Stable Base
- Power Adapter/Cable
- User Manual

## 4. ASSEMBLY INSTRUCTIONS

---

Follow these steps to assemble your magnifier floor lamp:

1. Carefully unpack all components from the box.
2. Attach the lamp pole sections together by screwing them clockwise until secure.
3. Securely attach the assembled lamp pole to the stable base by screwing it clockwise. Ensure it is tightened to prevent wobbling.
4. Insert the gooseneck of the magnifier lamp head into the top of the lamp pole. Tighten any securing rings or screws if provided.
5. Plug the power adapter into the lamp's power input, then plug the adapter into a standard electrical outlet.

daylight 24



Figure 2: Assembled lamp showing the adjustable gooseneck and stable base.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off

Locate the rocker on/off switch on the magnifier lamp head. Press the switch to turn the LED light on or off.





*Figure 3: Close-up of the lamp head with the rocker on/off switch.*

## 5.2 Adjusting the Magnifier and Light

The lamp features an adjustable gooseneck and a convenience handle on the shade for precise positioning.

- **Gooseneck Adjustment:** Gently bend the flexible gooseneck to position the magnifier and light directly over your work area.
- **Shade Handle:** Use the handle on the magnifier shade to tilt and swivel the light and magnification area for optimal viewing

angles.



Figure 4: Magnifier head highlighting 3X magnification and full page size.



Figure 5: User adjusting the magnifier lamp for crafting.



Figure 6: User reading with the magnifier floor lamp, demonstrating its use.

## 6. MAINTENANCE

- **Cleaning:** Ensure the lamp is unplugged before cleaning. Use a soft, dry cloth to wipe the lamp's surfaces. For the magnifier lens, use a soft, lint-free cloth and a mild glass cleaner if necessary. Avoid abrasive cleaners or solvents.
- **Bulb Replacement:** The LED bulbs are integrated and designed for long-term use. They are not user-replaceable. If the LEDs fail, contact customer support.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Power cord not securely plugged in. No power from outlet. Rocker switch is off.	Ensure power cord is fully inserted into the lamp and wall outlet. Test the outlet with another device. Press the rocker switch to the 'On' position.
Light is dim or flickering.	Loose connection. Faulty power adapter.	Check all connections. If problem persists, contact customer support for a replacement power adapter.
Magnification is blurry or distorted.	Lens is dirty. Object is too far/close from lens.	Clean the magnifier lens with a soft, lint-free cloth. Adjust the distance between the object and the lens for optimal focus.

## 8. SPECIFICATIONS

- **Model Number:** 402039-02
- **Magnification:** 3X

- **Magnifier Shade Dimensions:** 8 inches x 10 inches (Full Page)
- **Light Source:** 12-piece LED
- **Brightness:** 350 Lumen
- **Wattage:** 5 watts
- **Voltage:** 12 Volts (DC)
- **Switch Type:** Rocker On/Off
- **Adjustability:** Adjustable Gooseneck
- **Product Dimensions:** 12"D x 24.6"W x 57"H
- **Item Weight:** 11.5 Pounds
- **Material:** Metal, Plastic
- **Color:** White
- **Power Source:** Corded Electric
- **Indoor/Outdoor Usage:** Indoor

## 9. WARRANTY INFORMATION

---

This daylight24 Full Page 3X Magnifier Floor Lamp comes with a **1-year limited manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

## 10. CUSTOMER SUPPORT

---

For technical assistance, warranty claims, or any questions regarding your daylight24 product, please contact the manufacturer directly. Refer to the packaging or the official daylight24 website for the most current contact information.