

Core Innovations CPD144PR

Core Innovations 14" Portable DVD Player User Manual

Model: CPD144PR

1. PRODUCT OVERVIEW

The Core Innovations 14.1" Portable DVD Player is designed to provide on-the-go entertainment. It features a high-resolution display with a 180-degree tilt and swivel function for optimal viewing. The player includes built-in stereo speakers and comes with headphones for a personalized audio experience. It supports playback from discs and micro SD cards, and can be connected to a television for a larger viewing experience. A remote control and carrying case are also included for convenience.

Key Features:

- **Crystal Clear Viewing:** 14.1" 1280x800 high-resolution display with 180-degree tilt-and-swivel.
- **Enhanced Sound Options:** Built-in stereo speakers and included headphones.
- **Versatile Media Playback:** Supports discs and micro SD cards; connect to TV via AV cable.
- **Portable & Convenient:** Rechargeable battery and included carrying bag.
- **Comprehensive Accessory Kit:** Includes headphones, carrying bag, remote control, charger, and AV cable.

2. PACKAGE CONTENTS

Please check the box for the following items:

- Core Innovations 14" Portable DVD Player
- Headphones
- Remote Controller
- Carrying Bag
- Charger
- AV Cable
- User Manual (this document)
- Warranty Card



Image: The portable DVD player, headphones, remote, and carrying bag.

3. GETTING STARTED

3.1 Charging the Device

Before first use, fully charge the portable DVD player. A full charge ensures maximum playback time.

1. Connect the included charger to the DC IN port on the DVD player.
2. Plug the charger into a standard wall outlet.
3. The charging indicator light will illuminate. The player is fully charged when the light changes color or turns off (refer to the device's specific indicator behavior).
4. Charging time may vary, but typically takes several hours for a full charge.



PORTABLE

Bring it anywhere you go with built-in rechargeable battery.

Image: The portable DVD player highlighting its built-in rechargeable battery for on-the-go use.

3.2 Initial Power On

1. Ensure the player is charged or connected to power.
2. Locate the Power button (usually on the side or front panel).
3. Press and hold the Power button for a few seconds until the screen illuminates.
4. The device will boot up and display the main menu or disc loading screen.

4. OPERATING INSTRUCTIONS

4.1 Disc Playback

The player supports DVD, CD-R, CD-RW, DVD-R, SVCD, and VCD formats.

1. Open the disc cover gently.
2. Place a compatible disc onto the spindle with the label side facing up.
3. Gently press the disc down until it clicks into place.
4. Close the disc cover.
5. The player will automatically detect the disc and begin playback or display the disc menu.
6. Use the control buttons on the player or the remote control (Play/Pause, Stop, Skip, Volume) to manage playback.



14.1" Screen Display

Image: The portable DVD player in use, showing its 14.1-inch screen display.

4.2 Screen Adjustment (Tilt and Swivel)

The 14.1" screen can be tilted and swiveled up to 180 degrees for optimal viewing from various angles.

1. Gently grasp the edges of the screen.
2. Tilt the screen forward or backward to adjust the vertical viewing angle.
3. Swivel the screen horizontally to position it for individual or group viewing.



180° TILT AND SWIVEL

Tilt and swivel the display up to 180° to find your optimal viewing angle

Image: The DVD player screen demonstrating its 180-degree tilt and swivel capability.

4.3 Connecting to a TV

You can connect the portable DVD player to a television using the included AV cable to enjoy content on a larger screen.

1. Ensure both the DVD player and the TV are turned off.
2. Connect one end of the AV cable to the AV OUT port on the DVD player.
3. Connect the other end of the AV cable to the corresponding AV IN ports on your television (typically yellow for video, red/white for audio).
4. Turn on the TV and select the correct AV input source (e.g., AV1, Video, Input).
5. Turn on the portable DVD player. The content from the DVD player should now be displayed on your TV.

4.4 Using Micro SD Card

The player supports playback of photos, music, and videos from a micro SD card.

1. Locate the Micro SD card slot on the DVD player.

2. Insert the micro SD card gently into the slot until it clicks into place.
3. Navigate to the media playback menu on the DVD player and select the SD card option.
4. Browse and select your desired files (photos, music, or videos) for playback.

4.5 Audio Options

- **Built-in Speakers:** The player has integrated stereo speakers for audio output. Adjust volume using the controls on the player or remote.
- **Headphones:** For private listening, plug the included headphones into the headphone jack on the player. The built-in speakers will automatically mute when headphones are connected.



ACCESSORIES

The Portable DVD Player comes with a remote control, headphones and a carrying bag for portability and convenience

Image: The portable DVD player with its essential accessories: remote control, headphones, and carrying bag.

5. CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior of the player. For stubborn smudges, slightly dampen the cloth with water. Avoid abrasive cleaners or solvents.
- **Disc Care:** Handle discs by their edges. Keep discs clean and free of scratches. Use a soft, lint-free cloth to wipe discs from the center outwards.
- **Storage:** When not in use, store the DVD player in its carrying bag to protect it from dust and scratches. Store in a cool, dry place away from direct sunlight and extreme temperatures.

- **Battery:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Avoid Liquids:** Keep the device away from water and other liquids.

6. TROUBLESHOOTING

If you encounter issues with your portable DVD player, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Player does not turn on.	Ensure the battery is charged. Connect the charger and try again. Check if the power adapter is securely connected to both the player and the power outlet.
No picture on screen.	Adjust the screen brightness settings. If connected to a TV, ensure the TV is on the correct input source (AV, Video).
No sound.	Increase the volume using the player's controls or remote. If headphones are plugged in, unplug them to use built-in speakers. Check if the disc's audio track is muted or set to a very low volume.
Disc does not play or skips.	Ensure the disc is clean and free of scratches or smudges. Clean with a soft cloth if necessary. Verify the disc format is supported (DVD, CD-R, CD-RW, DVD-R, SVCD, VCD). Ensure the disc is inserted correctly with the label side facing up.
Remote control not working.	Check and replace the batteries in the remote control. Ensure there are no obstructions between the remote and the player's IR sensor.

7. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	CPD144PR
Screen Size	14.1 Inches
Display Type	LCD
Product Dimensions	10 x 14.6 x 1.8 inches
Item Weight	3.26 pounds
Media Type Supported	CD-R, CD-RW, DVD-R, SVCD, VCD
Battery	1 Lithium Polymer battery (rechargeable)
Color	Purple
Manufacturer	DP Audio Video

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This product comes with a limited manufacturer's warranty. Please refer to the included Warranty Card in your package for specific terms, conditions, and duration of the warranty. Keep your proof of purchase for warranty claims.




8.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Core Innovations customer support. Contact information can typically be found on the product packaging, the warranty card, or the official Core Innovations website.

Please note: Product specifications and features are subject to change without notice.

© 2025 Core Innovations. All rights reserved.

Related Documents - CPD144PR

 CLT146401 User Manual 14.1" Laptop with Windows™ 10 S	Core Innovations CLT146401 User Manual: Getting Started with Windows 10 S Comprehensive user manual for the Core Innovations CLT146401 laptop, detailing setup, features, Windows 10 S operation, personalization, connectivity, and troubleshooting.
	Compaq TV User Manual: Setup, Features, and Troubleshooting Comprehensive user manual for Compaq televisions, covering remote control operation, installation, connectivity, basic functions, specifications, safety precautions, and troubleshooting tips.
 CLT136401 User Manual 14" Laptop with Windows™ 10 S	Core Innovations CLT136401 14-inch Laptop User Manual Comprehensive user manual for the Core Innovations CLT136401 14-inch laptop running Windows 10 S. Covers setup, features, interface, personalization, network, accounts, and warranty information.

