

## iTOMA CKS718

# iTOMA CKS718 Alarm Clock Radio User Manual

Model: CKS718

## 1. INITIAL SETUP

### 1.1 Power Connection

Connect the power adapter to the DC IN jack on the back of the unit and then plug it into a standard wall outlet. The unit will power on and the display will illuminate.

A backup battery (1 C-type, included) is installed to maintain time settings during a power outage. This battery does not power the display or alarm functions.

### 1.2 Time Setting

1. Press and hold the **CLOCK SET** button. The hour digits will flash.
2. Use the **TUNE+** or **TUNE-** buttons to adjust the hour.
3. Press **CLOCK SET** again. The minute digits will flash.
4. Use the **TUNE+** or **TUNE-** buttons to adjust the minutes.
5. Press **CLOCK SET** to confirm.

To switch between 12-hour and 24-hour format, press the **FM STO/BT** button while the time is displayed.

### 1.3 FM Antenna Connection

Extend the FM wire antenna located at the back of the unit for optimal radio reception. Position it away from other electronic devices to minimize interference.

## 2. OPERATING INSTRUCTIONS

### 2.1 Basic Controls Overview



Image: Front and top view of the iTOMA CKS718 Alarm Clock Radio, showing the digital display and control buttons.

- **SLEEP/TIME ZONE:** Activates sleep timer or sets time zone.
- **CLOCK SET:** Sets the time.
- **AL1 / AL2:** Sets Alarm 1 and Alarm 2.
- **BT:** Activates Bluetooth pairing mode.
- **TUNE- / VOL-:** Decreases frequency/volume.
- **SNOOZE / VOL+:** Activates snooze, increases volume.
- **TUNE+ / FM:** Increases frequency/switches to FM mode.
- **FM MEM / PAIR:** Stores FM presets or initiates Bluetooth pairing.
- **FM STO / BT:** Scans and stores FM stations or switches to Bluetooth mode.
- **LED:** Controls the night light.
- **DIMMER:** Adjusts display brightness.

## 2.2 Alarm Settings



# Dual Alarm

4 Modes ↔ ① ②

All-7-Day	Mon	Tue	Wed	Thu	Fri	Sat	Sun
Weekday	Mon	Tue	Wed	Thu	Fri		
Weekend						Sat	Sun
Single day		Tue					



Image: The alarm clock radio showing options for dual alarms and different alarm schedules (All-7-Day, Weekday, Weekend, Single day).

The unit features two independent alarms (AL1 and AL2) with customizable settings.

1. Press and hold **AL1** or **AL2**. The alarm time will flash.
2. Use **TUNE+** or **TUNE-** to set the desired alarm time.
3. Press **AL1** or **AL2** again to select the alarm source (FM radio or buzzer).
4. Press **AL1** or **AL2** a third time to select the alarm schedule: All-7-Day, Weekday (Mon-Fri), Weekend (Sat-Sun), or Single Day.
5. Press **AL1** or **AL2** to confirm.

When the alarm sounds, press **SNOOZE** to temporarily silence it for 10 minutes. To turn off the alarm, press the corresponding **AL1** or **AL2** button.

## 2.3 FM Radio Operation

# Manual / Auto FM Radio

FM 87.5

FM 108



FM  
Radio



Adjustable  
Volume



Sleep  
Timer

Image: The alarm clock radio displaying FM radio functionality, including frequency range (FM 87.5 - FM 108) and adjustable volume.

The unit features an FM radio with a frequency range of 87.5 MHz to 108.0 MHz.

1. Press the **FM** button to enter FM radio mode.
2. Use **TUNE+** or **TUNE-** to manually tune to a station.
3. To auto-scan and store stations, press and hold **FM STO/BT**. The radio will scan and save up to 20 preset stations.
4. To recall a preset station, press **FM MEM/PAIR** repeatedly.
5. Adjust the volume using **VOL+** or **VOL-**.

## 2.4 Bluetooth Connectivity





## Listen to Your Music via BLUETOOTH


Image: The alarm clock radio next to a smartphone, illustrating the Bluetooth music streaming feature. The iTOMA CKS718 supports Bluetooth 5.1 for wireless audio streaming.

1. Press the **BT** button to enter Bluetooth pairing mode. The Bluetooth indicator on the display will flash.
2. On your smartphone or other Bluetooth device, enable Bluetooth and search for "iTOMA CKS718".
3. Select the device to pair. Once connected, the Bluetooth indicator will stop flashing and remain solid.
4. You can now play audio from your device through the alarm clock radio.

### 2.5 Display and Dimmer


 
## Auto & Manual Dimmer



**Bright**



**Medium**



**Dim**

Image: The alarm clock radio demonstrating its automatic and three-level manual dimmer settings (Bright, Medium, Dim) for the 1.4-inch LED display.

The 1.4-inch white LED display offers clear visibility and adjustable brightness.

- Press the **DIMMER** button repeatedly to cycle through 3 manual brightness levels (Bright, Medium, Dim).
- An automatic dimmer function is also available, which adjusts the display brightness based on ambient light conditions.

### 2.6 Night Light Function

# Night Light



Image: The alarm clock radio with its base illuminated by a soft orange night light in a dark room. The unit includes a soft orange night light with two adjustable levels.

- Press the **LED** button repeatedly to cycle through the two night light brightness levels or turn it off.

## 2.7 USB Charging Port



Image: The iTOMA CKS718 Alarm Clock Radio with a smartphone connected to its USB charging port, indicating active charging.

An additional USB port (5V 1A) is located on the back of the unit, allowing you to charge your smartphone or other small electronic devices.

### 3. CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the unit. Do not use liquid cleaners or abrasive materials.
- **Placement:** Place the unit on a stable, flat surface. Avoid direct sunlight, extreme temperatures, and high humidity.
- **Ventilation:** Ensure adequate ventilation around the unit to prevent overheating. Do not block ventilation openings.
- **Power Cord:** Regularly inspect the power cord for any damage. If damaged, discontinue use and contact support.

### 4. TROUBLESHOOTING GUIDE

Issue	Possible Solution
Unit does not power on	Ensure the power adapter is securely connected to both the unit and a working wall outlet. Check if the outlet has power.
Alarm does not sound	Verify that the alarm is enabled (alarm icon visible on display) and the alarm time is correctly set. Check alarm volume.
Poor FM radio reception	Fully extend and reposition the FM wire antenna. Move the unit away from other electronic devices that may cause interference.



Issue	Possible Solution
Bluetooth device cannot pair	Ensure the unit is in Bluetooth pairing mode (flashing BT icon). Make sure your device's Bluetooth is enabled and within range. Try restarting both devices.
Display is too bright/dim	Press the <b>DIMMER</b> button to adjust the brightness manually or activate the auto-dimmer function.

## 5. PRODUCT SPECIFICATIONS

- **Brand:** iTOMA
- **Model:** CKS718
- **Display:** 1.4-inch White LED
- **Bluetooth:** Version 5.1
- **FM Radio Frequency:** 87.5 - 108.0 MHz
- **FM Presets:** Up to 20 stations
- **USB Charging Output:** 5V 1A
- **Power Source:** AC Power Cable
- **Backup Battery:** 1 x C-type (included)
- **Dimensions:** 15.8 cm (L) x 8.9 cm (H)
- **Special Features:** Dual Alarm, Snooze Function, Sleep Timer, Auto/Manual Dimmer, 2-Level Night Light

## 6. WARRANTY AND SUPPORT

This iTOMA product is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact iTOMA customer service through their official website or the contact information provided with your purchase.