



[Manuals.plus](#) /

> [Sawaruita](#) /

> Sawaruita Easter Egg and Easter Bunny's Carrot House Building Brick Kit Instruction Manual

## Sawaruita SX52129

# Sawaruita Easter Egg and Easter Bunny's Carrot House Building Brick Kit

Model: SX52129 - Instruction Manual

## 1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Sawaruita Easter Egg and Easter Bunny's Carrot House Building Brick Kit. This kit is designed to enhance hand-eye coordination, problem-solving skills, and team-building skills through creative construction.

**Important Safety Information:** This product contains small parts and is a choking hazard. It is not suitable for children under 6 years of age. Adult supervision is recommended for all users, especially those at the lower end of the recommended age range.

## 2. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. The kit should include:

- Building bricks for the Easter Egg model
- Building bricks for the Easter Bunny's Carrot House model
- 2 LED brick lights (batteries included)
- Instruction booklet for assembly (physical copy not provided in this digital manual)

If any parts are missing or damaged, please refer to the "Warranty and Support" section for assistance.

## 3. SETUP AND ASSEMBLY

Follow the step-by-step instructions provided in the physical instruction booklet included with your kit. The assembly process involves constructing two distinct models: the Easter Egg and the Easter Bunny's Carrot House.



Image 1: The fully assembled Sawaruita Easter Egg and Easter Bunny's Carrot House models, showcasing the LED lights and the chick mechanism.

### 3.1. General Assembly Tips

- Organize your bricks by color and shape before starting.
- Carefully follow each step in the provided instruction booklet.
- Ensure bricks are firmly pressed together to create stable connections.

### 3.2. LED Light Installation (Carrot House)

The kit includes two LED brick lights designed to be placed within the Easter Bunny's Carrot House. Locate the designated slots or areas within the carrot house structure as indicated in your physical instruction booklet. Insert the LED lights securely to illuminate the interior.

### 3.3. Easter Egg Mechanism Assembly

The Easter Egg model features a delightful mechanism that allows a chick figure to bob up and down. Assemble this mechanism according to the detailed steps in your instruction booklet. Ensure all gears and connecting pieces are correctly aligned for smooth operation.

## 4. OPERATING INSTRUCTIONS

## 4.1. Activating LED Lights

Once the LED brick lights are installed in the Carrot House, activate them by pressing the small button or switch located on each light unit. Press again to turn them off. The lights are powered by pre-installed batteries.

## 4.2. Using the Chick Bobbing Mechanism

To operate the chick bobbing mechanism in the Easter Egg, locate the rocker or lever on the side or base of the egg model. Gently turn or move this rocker to observe the chick figure inside bobbing up and down.

## 5. MAINTENANCE AND CARE

- **Cleaning:** To clean the building bricks, wipe them with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the assembled models or disassembled bricks in a cool, dry place away from direct sunlight to prevent discoloration or damage.
- **Battery Replacement:** If the LED lights dim or stop working, the batteries may need replacement. Refer to the LED light unit for specific battery type and replacement instructions.

## 6. TROUBLESHOOTING

- **Missing Pieces:** If you find any pieces missing from your kit, please contact Sawaruita customer support as detailed in the "Warranty and Support" section.
- **Egg Model Not Staying Together:** Ensure all bricks are firmly connected according to the instruction booklet. If the issue persists, carefully re-examine the connections or contact customer support.
- **LED Lights Not Working:** Check if the LED lights are correctly inserted and activated. If they still do not work, the batteries may need replacement.
- **Chick Mechanism Not Moving:** Verify that all parts of the mechanism are correctly assembled and not obstructed. Ensure the rocker is moved gently and fully.

## 7. SPECIFICATIONS

<b>Model Number</b>	SX52129
<b>Material Type</b>	Plastic (ABS)
<b>Color</b>	Multicolor
<b>Number of Pieces</b>	Approximately 2 (referring to the two main models)
<b>Recommended Age</b>	6 years and up
<b>Batteries Required</b>	Yes (for LED lights)
<b>Batteries Included</b>	Yes
<b>Educational Objectives</b>	Hand-Eye Coordination, Problem Solving Skills, Team Building Skills

## 8. WARRANTY AND SUPPORT

For warranty information, missing parts, or technical support, please contact Sawaruita customer service. Refer to the product packaging or the official Sawaruita website for the most current contact details.

Please have your product model number (SX52129) and purchase information ready when contacting support.

