

RM-SRX5020J

JVC Replacement Remote Control Instruction Manual

For Models: RM-SRX5020J, RX-5022, RX-5020RBK, RX-5022RSL, RX-5022VSL

1. INTRODUCTION

This instruction manual provides essential information for the proper use and maintenance of your new Generic replacement remote control for JVC audio/video equipment. This remote is designed as a direct replacement and requires no complex programming. Simply insert the batteries, and it is ready for immediate use with your compatible JVC model.

2. PRODUCT OVERVIEW

This replacement remote control is engineered to replicate all functions of your original JVC remote. It is compatible with the following JVC models:

- JVC RM-SRX5020J
- JVC RX-5022
- JVC RX-5020RBK
- JVC RX-5022RSL
- JVC RX-5022VSL

The remote features an ergonomic design for comfortable handling and intuitive button placement for ease of use.





Figure 1: Front view of the JVC replacement remote control.

3. SETUP AND FIRST USE

3.1 Battery Installation

Before using your new remote control, you must install two AAA batteries (not included). Follow these steps:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2: Views of the remote control, highlighting the battery compartment.

3.2 Initial Use

This replacement remote control is pre-programmed for the listed JVC models. Once batteries are installed, it is ready for immediate use. Point the remote directly at your JVC device and begin operating it as you would with your original remote.

4. OPERATING THE REMOTE CONTROL

The remote control provides access to all standard functions of your JVC device. Key functions include:

- **Power Button:** Turns the device on or off.
- **Input/Source:** Selects the input source (e.g., TV, DVD, AUX).
- **Volume Up/Down:** Adjusts the audio volume.
- **Channel Up/Down:** Changes television channels.
- **Numeric Keypad:** For direct channel selection or inputting numbers.
- **Navigation Buttons (Arrow Keys & OK):** Used to navigate menus and confirm selections.
- **Menu/Home:** Accesses the device's main menu or home screen.
- **Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind, Skip (for compatible media devices).

Refer to your JVC device's original manual for specific functions and menu navigation details.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or inconsistent. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can cause leakage or damage.

5.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or solvents, which can damage the remote's finish or internal components.

6. TROUBLESHOOTING

If you experience issues with your remote control, consider the following:

- **Remote not responding:** Ensure the remote is pointed directly at the device. Check if the batteries are correctly installed and have sufficient charge. Replace batteries if necessary.
- **Intermittent functionality:** This may indicate low battery power. Replace the batteries.
- **Buttons not working:** Ensure there are no obstructions between the remote and the device's infrared receiver. Clean the remote's surface if buttons are sticky.

If problems persist after following these steps, please refer to the warranty information for support options.

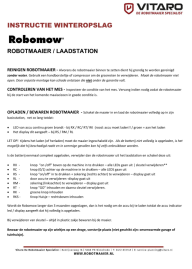 
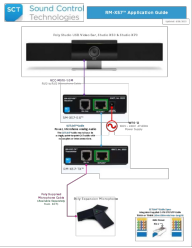 

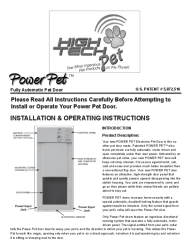 
7. SPECIFICATIONS

- **Power Source:** 2 x AAA Batteries (not included)
- **Item Weight:** Approximately 6 ounces
- **Package Dimensions:** Approximately 9 x 3 x 2 inches
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1 (direct replacement)
- **Compatible Devices:** JVC TV, JVC AV Receiver (specific models listed above)

8. WARRANTY INFORMATION

This replacement remote control comes with a **12-month guarantee** from the date of purchase. This warranty covers manufacturing defects and ensures the remote functions as described. For warranty claims or support, please contact your retailer or the manufacturer with your proof of purchase.

Related Documents - RM-SRX5020J

	<p>Robomow Robotmaaier Instructies Winteropslag</p> <p>Gedetailleerde instructies voor de winteropslag van Robomow robotmaaiers en laadstations, inclusief reiniging, batterijlading, en bewaarprocedures voor de winterperiode.</p>
	<p>SCT RM-X57 Application Guide for Poly Studio Devices</p> <p>This application guide from Sound Control Technologies (SCT) details the setup and connection of the RM-X57 system with Poly Studio USB Video Bars, Studio X50, and Studio X70. It covers the RM-X57-RX receiver, RM-X57-TX transmitter, and the necessary SCTLINK cables for audio and power transmission, along with the WPS-12 power supply and Poly Expansion Microphones.</p>
	<p>High Tech Pet Power Pet Fully Automatic Pet Door Installation and Operating Instructions</p> <p>Comprehensive installation and operating instructions for the High Tech Pet Power Pet Fully Automatic Pet Door, including features, setup, troubleshooting, and accessories.</p>
	<p>High Tech Pet Power Pet PX Automatic Pet Door: Installation & Operation Manual</p> <p>Comprehensive guide to installing, operating, and troubleshooting the High Tech Pet Power Pet PX Fully Automatic Pet Door, including features, accessories, and pet training. Learn about its unique ultrasonic collar system, safety features, and power options.</p>
	<p>High Tech Power Pet PX Fully Automatic Pet Door: Installation and Operating Instructions</p> <p>Comprehensive guide to installing, operating, and troubleshooting the High Tech Power Pet PX automatic pet door. Covers features, accessories, and pet training.</p>



[Návod k použití Robot univerzální 3 rychlosti 20 l 230 V RM 200H - RM Gastro](#)

Kompletní návod k použití pro robot univerzální RM 200H od RM Gastro. Obsahuje technická data, instalační pokyny, bezpečnostní opatření, návod k obsluze a údržbě.