

SPT SR-1885SS-42BA

SPT SR-1885SS-42BA Induction Cooktop and Stainless Steel Pot User Manual

Model: SR-1885SS-42BA

INTRODUCTION

Thank you for purchasing the SPT SR-1885SS-42BA Induction Cooktop and Stainless Steel Pot combination. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or damage to the appliance, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- This appliance is for household use only.
- Ensure the cookware is induction-compatible before use.

PRODUCT COMPONENTS

The SPT SR-1885SS-42BA package includes the following items:

- SPT SR-1885SS 1650W Induction Cooktop
- HK-4200B 3.5L Stainless Steel Pot with Glass Lid



Image: Angled view of the SPT SR-1885SS Induction Cooktop, showcasing its sleek black surface and control panel.



Image: The HK-4200B 3.5L Stainless Steel Pot with its clear glass lid, designed for induction cooking.

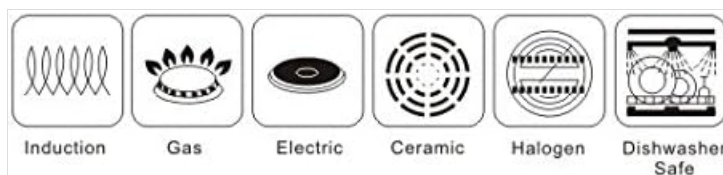


Image: Icons indicating compatibility with various cooktop types: Induction, Gas, Electric, Ceramic, Halogen, and Dishwasher Safe.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials from the cooktop and pot. Inspect for any damage.
2. **Placement:** Place the induction cooktop on a stable, flat, heat-resistant surface. Ensure adequate ventilation around the unit. Do not block the air vents.
3. **Power Connection:** Plug the power cord into a standard electrical outlet.
4. **Cookware Placement:** Place the provided stainless steel pot (or other induction-compatible cookware) centrally on the ceramic plate. The cooktop features automatic pan detection.
5. **Initial Cleaning:** Before first use, wash the stainless steel pot and glass lid with warm, soapy water. Rinse thoroughly and dry. Wipe the cooktop surface with a damp cloth.

OPERATING INSTRUCTIONS

Control Panel Overview



Image: Top-down view of the SPT SR-1885SS Induction Cooktop, highlighting the touch-sensitive control panel with its LED display and various function buttons. The cooktop features a touch-sensitive control panel with an LED display for easy operation.

Basic Operation

1. **Power On:** Press the **Power** button (🔌) to turn on the cooktop. The LED display will illuminate.
2. **Select Function:**
 - **Cooking (Power Mode):** Press the **COOK** button. Use the **+** and **-** buttons to adjust the power setting from

100W to 1650W (13 settings).

- **Keep Warm (Temperature Mode):** Press the **TEMP** button. Use the **+** and **-** buttons to adjust the temperature from 100°F to 390°F (13 settings).

3. **Timer Function:** Press the **Timer** button  to set a cooking duration. Use **+** and **-** to adjust the time up to 9 hours and 59 minutes. The cooktop will automatically shut off when the timer expires.
4. **Lock Function:** Press the **Lock** button  to prevent accidental changes to settings during operation. Press again to unlock.
5. **Power Off:** Press the **Power** button again to turn off the cooktop.

Automatic Pan Detection

The cooktop will automatically detect if an induction-compatible pot is placed on its surface. If no suitable cookware is detected, the unit will not activate heating and may display an error code or shut off after a short period.

CARE AND MAINTENANCE

• Cleaning the Cooktop:

- Always unplug the cooktop and allow it to cool completely before cleaning.
- Wipe the ceramic glass surface with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive ceramic cooktop cleaner.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the surface.
- Wipe the control panel with a soft, damp cloth. Ensure no liquid enters the control area.

• Cleaning the Pot:

- The stainless steel pot and glass lid are dishwasher safe.
- For hand washing, use warm, soapy water and a non-abrasive sponge.
- Dry thoroughly after washing to prevent water spots.

- **Storage:** Store the cooktop and pot in a dry, safe place when not in use.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Power cord not plugged in; Circuit breaker tripped.	Check power outlet; Ensure cord is securely plugged in; Reset circuit breaker.
Cooktop turns on but does not heat.	Cookware not induction-compatible; Cookware not centered; Pan detection error.	Use induction-compatible cookware; Center the pot on the cooking zone; Ensure pot bottom is flat and clean.
Display shows an error code.	Specific error (e.g., E0 for no pan, E1 for overheating).	Refer to the specific error code in the full manual (if available) or contact customer support. For no pan error, place suitable cookware. For overheating, allow unit to cool.

Problem	Possible Cause	Solution
Cooktop makes a humming noise.	Normal operation of induction technology; Fan cooling.	This is normal. If noise is excessive or unusual, contact support.

If the problem persists after attempting these solutions, please contact SPT customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	SR-1885SS-42BA
Brand	SPT
Type	Induction Cooktop with Stainless Steel Pot
Wattage	1650 watts
Power Settings	13 (100W - 1650W)
Keep Warm Settings	13 (100°F - 390°F)
Control Type	Touch-sensitive panel
Timer	Up to 9 hours and 59 minutes
Cooktop Surface	Micro-crystal ceramic plate
Pot Capacity	3.5 Liters
Pot Material	Stainless Steel
Safety Features	Automatic pan detection, Lock function, ETL certified
Item Weight	10 pounds
Package Dimensions	17 x 14 x 8 inches
UPC	810012685573

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official SPT website. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: SPT

Contact Information: Please refer to the SPT official website or product packaging for the most current customer service contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question