

A ALPS 2024

A ALPS Model 2024 Kids Digital Sport Watch Instruction Manual

Model: 2024

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your A ALPS Model 2024 Kids Digital Sport Watch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

KEY FEATURES

- Digital Display with LED Backlight
- Time (12/24 hour format) and Date Display
- Alarm Function
- Stopwatch
- 50M Water Resistance
- Durable PU Strap and Wear-resistant Resin Mirror



Figure 1: Multifunctional Features Overview

This image displays the watch's various functions, including stopwatch, EL light, 50M water resistance, 12/24 hour time format, date, and alarm capabilities.

SETUP

1. Initial Power On

The watch is typically shipped with a battery insulator. If the display is blank, remove the watch from its packaging and check for a small plastic tab near the crown or buttons. Remove this tab to activate the battery.

2. Adjusting the Strap

The watch features a buckle design for easy strap adjustment. To adjust the strap length:

1. Locate the buckle on the strap.
2. Open the buckle and slide the strap through to achieve a comfortable fit around the wrist.
3. Secure the buckle. Ensure the watch is snug but not too tight.

Stainless steel buckle

Band length can be freely adjusted



Figure 2: Strap Length Adjustment

This image illustrates how the watch band length can be adjusted to fit various wrist sizes, showing examples of 230mm and 160mm lengths.

OPERATING INSTRUCTIONS

Your A ALPS digital watch has four main buttons: **LIGHT**, **MODE**, **DATE**, and **ALARM**. The exact button functions may vary slightly depending on the current mode.



Figure 3: Watch Face and Button Layout

This image provides a clear view of the watch's digital display and the labels for its four control buttons: LIGHT, DATE, ALARM, and MODE.

1. Time and Date Setting

1. From the normal time display, press the **MODE** button repeatedly until the seconds start flashing. This indicates you are in time setting mode.
2. Press the **DATE** button to reset the seconds to zero.
3. Press the **MODE** button again to move to the hour setting.
4. Use the **DATE** button to adjust the hour. Pay attention to the 12/24 hour indicator (A/P for AM/PM in 12-hour format).
5. Press the **MODE** button to move to the minute setting.
6. Use the **DATE** button to adjust the minutes.
7. Continue pressing **MODE** to cycle through year, month, and day settings, adjusting each with the **DATE** button.
8. Once all settings are correct, press the **MODE** button to return to normal time display.

2. 12/24 Hour Format

While in time setting mode (seconds flashing), press the **ALARM** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

3. Using the LED Backlight

Press the **LIGHT** button to illuminate the display for a few seconds. The watch offers multiple backlight colors.

COLORFUL CUTE WATCH



Figure 4: Customizable Backlight Colors

This image demonstrates the seven available backlight colors for the watch display, allowing for personalization and improved visibility in low light.



Day
display



Light
display

Figure 5: Day and Night Display

This image illustrates the watch's normal day display and its illuminated display for night or low-light conditions, activated by the backlight function.

4. Alarm Function

1. From the normal time display, press the **MODE** button once to enter Alarm Mode. The alarm time will be displayed.
2. Press the **DATE** button to toggle the alarm ON/OFF. An alarm icon will appear when the alarm is active.
3. To set the alarm time, press and hold the **MODE** button until the hour digits flash.
4. Use the **DATE** button to adjust the hour.
5. Press the **MODE** button to move to the minute setting.
6. Use the **DATE** button to adjust the minutes.
7. Press the **MODE** button to confirm and exit alarm setting.
8. When the alarm sounds, press any button to stop it.

5. Stopwatch Function

1. From the normal time display, press the **MODE** button twice to enter Stopwatch Mode. The display will show "00:00:00".

2. Press the **DATE** button to start the stopwatch.
3. Press the **DATE** button again to pause the stopwatch.
4. While paused, press the **ALARM** button to reset the stopwatch to "00:00:00".
5. Press the **MODE** button to exit Stopwatch Mode and return to normal time display.

MAINTENANCE AND CARE

1. Water Resistance

The watch is rated 50M (5ATM/150FT) water resistant. This means it is suitable for splashes, rain, and brief immersion in water. It is **not** suitable for hot water activities like saunas or hot baths, diving, or prolonged underwater use.



Figure 6: Water Resistance for Daily Use

This image demonstrates the watch's 5ATM water resistance, suitable for everyday activities such as handwashing, exposure to rain, and accidental splashes.

- Do not press any buttons while the watch is submerged in water.
- Avoid exposing the watch to extreme temperatures (hot or cold).
- After exposure to saltwater, rinse the watch with fresh water and dry thoroughly.

2. Cleaning

Wipe the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the watch's finish or materials.

3. Battery Replacement

When the display becomes dim or the watch stops functioning, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance. Opening the watch yourself may void any implied warranty.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch display is blank or dim.	Battery is depleted or battery insulator tab is still present.	Remove battery insulator tab if present. Replace battery if necessary (professional service recommended).
Buttons are unresponsive.	Watch may be in a locked mode or internal malfunction.	Try pressing all buttons firmly. If issue persists, contact customer support.
Time is incorrect.	Time was not set correctly or battery is low.	Refer to "Time and Date Setting" section. If problem persists, consider battery replacement.
Water inside the watch.	Exposure to water beyond 50M rating or buttons pressed underwater.	Immediately stop using the watch. Seek professional repair to prevent further damage.

SPECIFICATIONS

- **Model:** 2024
- **Brand:** A ALPS
- **Case Diameter Width:** 1.69 IN / 43 MM
- **Case Thickness:** 0.62 IN / 16 MM
- **Band Width:** 0.71 IN / 18 MM
- **Band Length:** 9.84 IN / 250 MM (Adjustable)
- **Buckle Type:** Buckle (Tail Lock)
- **Watch Weight:** 1.58 OZ / 45 G
- **Water Resistance:** 50M (5ATM/150FT)
- **Display Type:** Digital LED
- **Material:** PU Strap, Resin Mirror

Case Diameter Width:1.69IN/43MM

Case Thickness:0.62IN/16MM

Band Width:0.71IN/18MM

Buckle type:Buckle(tail lock)

Watch weight:1.58OZ/45G

Band Length:9.84IN/250MM



Figure 7: Product Dimensions and Specifications

This image provides a visual representation of the watch's key dimensions and specifications, including case width, thickness, band width, and overall length.

WARRANTY AND SUPPORT

For any questions regarding your A ALPS Model 2024 watch, please refer to the seller's contact information provided at the point of purchase. Specific warranty details may vary and are typically provided with the product packaging or by the retailer.

For further assistance, you may visit the [A ALPS Store on Amazon](#).