

SA-GX303, SA-GX505, SA-GX707, SD-S2200, SU-690

# Instruction Manual for Replacement Remote Control

Model: SA-GX303, SA-GX505, SA-GX707, SD-S2200, SU-690

## 1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your new replacement remote control. This remote is designed as a direct replacement for the original remote controls of various Technics HiFi systems.

### Compatible Models:

- TECHNICS SA-GX303
- TECHNICS SA-GX505
- TECHNICS SA-GX707
- TECHNICS SD-S2200
- TECHNICS SU-690

The remote control is pre-programmed and ready to use with the listed models, replicating all functions of the original remote.

## 2. SETUP

### 2.1 Battery Installation

The remote control requires 2 AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

**Important: Ensure correct battery polarity. Incorrect installation can damage the remote control.**



Figure 2.1: Remote control showing various angles, including the back where the battery compartment is located.

## 2.2 Initial Setup

This replacement remote control requires no setup codes or programming. It is pre-configured to work directly with the compatible Technics HiFi models listed in the Introduction section. Simply insert the batteries, and the remote is ready for immediate use.

## 3. OPERATING INSTRUCTIONS

The layout and functionality of this replacement remote control are designed to mimic the original Technics remote. Below are general guidelines for operating your HiFi system using this remote.



# LUMOTE

SHIFT SLEEP

GOTO SRC

1 SETUP 2 MENU 3 EXIT

4 MODE 5 AUDIO 6 SUBT

7 REP 8 A-B 9 DISP

- SEAR 0 ZOOM BAND IIANG

STEP SLOW CLEAR EQ  
RANDOM

+ V+

OK

- V-



Figure 3.1: Front view of the remote control.

### 3.1 Basic Functions

- **Power Button ( ):** Turns the HiFi system on or off.
- **Volume Up/Down (V+/V-):** Adjusts the audio output volume.
- **Source (SRC):** Cycles through input sources (e.g., CD, Tuner, AUX).
- **Mute ( ):** Temporarily silences the audio output.

### 3.2 Navigation and Menu

- **Directional Buttons (▲ ▼ ◀▶):** Navigate through menus and options.
- **OK Button:** Confirms selections within menus.
- **MENU:** Accesses the main menu of the HiFi system.
- **EXIT:** Exits the current menu or function.

### 3.3 Audio and Playback Controls

- **AUDIO:** Adjusts audio settings (e.g., bass, treble, balance).
- **EQ:** Cycles through equalizer presets.
- **Play (▶), Pause (⏸), Stop (■):** Standard playback controls for CD or other media.
- **Skip/Search (⏮):** Skips tracks or fast-forwards/rewinds during playback.

Refer to your Technics HiFi system's original manual for detailed instructions on specific functions and menu navigation, as this remote replicates those controls.

## 4. MAINTENANCE

### 4.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

### 4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### 4.3 Storage

If the remote control will not be used for an extended period (e.g., one month or more), remove the batteries to prevent leakage and potential damage to the remote.

## 5. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Check battery polarity. Replace batteries with new ones.
Remote works intermittently.	Low battery power; obstruction between remote and HiFi system; remote sensor on HiFi system is dirty or blocked.	Replace batteries. Ensure clear line of sight. Clean the remote sensor on your HiFi system.
Certain buttons do not work.	Button malfunction; specific function not supported by your HiFi model.	Ensure the button is pressed firmly. Verify if the function is available on your specific Technics model.
Remote range is poor.	Low battery power; interference from other electronic devices; remote sensor on HiFi system is dirty or blocked.	Replace batteries. Move away from sources of interference. Clean the remote sensor on your HiFi system.

If the problem persists after trying these solutions, please refer to the Warranty & Support section.

## 6. SPECIFICATIONS

- **Product Type:** Replacement Remote Control
- **Brand:** Generic
- **Compatible Devices:** Hi-Fi System, Receiver
- **Max Number of Supported Devices:** 1
- **Color:** HiFi (Black)
- **Special Feature:** Ergonomic design
- **Batteries Required:** 2 x AAA (not included)
- **Item Weight:** 6 ounces (approx. 170 grams)
- **Package Dimensions:** 9 x 3 x 2 inches (approx. 22.86 x 7.62 x 5.08 cm)

## 7. WARRANTY & SUPPORT

### 7.1 Warranty Information

This replacement remote control comes with a **12-month guarantee** from the date of purchase. This warranty covers manufacturing defects and ensures the remote functions as described. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

## **7.2 Customer Support**

For warranty claims, technical assistance, or any questions regarding your replacement remote control, please contact the seller or manufacturer through your original point of purchase. Please have your purchase details and product model information ready when contacting support.