

Annadue Annaduev1rgyusp5d2713-14

Annadue Portable MP3 Player Instruction Manual

Model: Annaduev1rgyusp5d2713-14

INTRODUCTION

Thank you for purchasing the Annadue Portable MP3 Player. This device is designed to provide a versatile multimedia experience, allowing you to enjoy music, view photos, read e-books, record audio, and watch videos on the go. This manual will guide you through the setup, operation, and maintenance of your new MP3 player to ensure optimal performance and longevity.

PRODUCT OVERVIEW

Key Features

- **Easy to Use:** Simple interface for straightforward operation.
- **Expandable Storage:** Supports up to 64GB TF (MicroSD) memory card (not included) for extensive media libraries.
- **Long Battery Life:** Built-in rechargeable battery provides up to 80 hours of standby time.
- **Multi-functional Device:** Functions as a music player, photo browser, e-book reader, voice recorder, and video player.
- **Portable Design:** Compact and lightweight, ideal for travel and daily use.
- **1.8-inch TFT Display:** Clear screen for navigating menus and viewing content.

Package Contents

- Annadue Portable MP3 Player (Light Blue)
- USB Charging Cable
- Earphones
- User Manual (this document)



Music Player

Easy to Use

Scalable to 64GB

provides more music and audiobooks, etc
supports up to 64GB memory card

Multi Function

Built In Rechargeable Battery
up to 80 hours of standby time



Image: Annadue Portable MP3 Player in light blue, shown with white earphones and a black USB charging cable. The device has a 1.8-inch screen and circular control buttons.



Image: An angled view of the Annadue Portable MP3 Player, highlighting its compact design, screen, and the circular navigation pad with play/pause, skip, and volume buttons.

SETUP

1. Charging the Device

1. Connect the small end of the included USB cable to the USB port on the MP3 player.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The battery indicator on the screen will show charging status. A full charge typically takes 2-3 hours.
4. Disconnect the player once fully charged to preserve battery life.



Image: Bottom view of the Annadue MP3 Player, clearly showing the micro USB charging port and the 3.5mm headphone jack.

2. Inserting a Memory Card (TF Card)

The MP3 player supports TF (MicroSD) cards up to 64GB. A memory card is required to store music, videos, photos, and e-books.

1. Locate the TF card slot on the side of the MP3 player.
2. Gently insert the TF card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, push the card in slightly until it springs out.



Image: Side view of the Annadue MP3 Player, highlighting the slot for inserting a TF (MicroSD) memory card.

3. Transferring Files to the MP3 Player

1. Connect the MP3 player to your computer using the USB cable.
2. The player will appear as a removable disk drive on your computer.
3. Open the drive and drag-and-drop your music, video, photo, or e-book files into the appropriate folders (e.g., "Music", "Video", "Pictures", "Ebook") on the player's memory card. If these folders do not exist, you may create them.
4. Once files are transferred, safely eject the removable disk from your computer before disconnecting the USB cable.

OPERATING INSTRUCTIONS

Basic Navigation

The MP3 player features a central circular control pad with several buttons:

- **M (Menu):** Press to access the main menu or go back to the previous menu.
- **Play/Pause (Center button):** Press to play or pause media. Also used to confirm selections.
- **Left/Right Arrows:** Navigate through menu options, skip tracks, or fast forward/rewind.
- **Up/Down Arrows (VOL):** Adjust volume during playback.



Image: Close-up view of the Annadue MP3 Player's control buttons, showing the 'M' (Menu), Play/Pause, Skip, and 'VOL' (Volume) buttons.

Music Playback

1. From the main menu, select "Music".
2. Navigate to the desired song or album using the Left/Right arrows.
3. Press the Play/Pause button to start playback.
4. Use Left/Right arrows to skip tracks. Hold them to fast forward/rewind.
5. Use Up/Down (VOL) buttons to adjust the volume.
6. Press 'M' to return to the music menu or main menu.

Photo Browser

1. From the main menu, select "Pictures".
2. Browse through your image files.
3. Press the Play/Pause button to view a selected image.
4. Use Left/Right arrows to navigate between images.

E-book Reader

1. From the main menu, select "Ebook".

2. Choose your desired e-book file.
3. Press the Play/Pause button to open and read the e-book.
4. Use navigation buttons to scroll through pages.

Voice Recorder

1. From the main menu, select "Recorder".
2. Follow on-screen prompts to start, pause, and save recordings.

Video Playback

1. From the main menu, select "Video".
2. Choose your desired video file.
3. Press the Play/Pause button to start playback.
4. Note: Ensure video files are in a compatible format for smooth playback.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Storage:** Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the device from physical shocks and drops.

TROUBLESHOOTING

Problem	Solution
Device does not turn on.	Ensure the device is charged. Connect it to a power source and try again.
No sound from earphones.	Check if earphones are properly plugged in. Adjust volume. Test with different earphones if available.
Cannot transfer files to the player.	Ensure the USB cable is securely connected. Try a different USB port or cable. Make sure the memory card is inserted correctly and has sufficient space.
Screen is unresponsive or frozen.	Press and hold the power button for about 10 seconds to force a restart.
"Memory Full" error.	Delete unnecessary files from the memory card or insert a new, larger capacity TF card.

SPECIFICATIONS

Feature	Detail
Brand	Annadue

Feature	Detail
Model Name	Annaduev1rgyusp5d2713-14
Color	Light Blue
Screen Size	1.8 Inches
Connectivity Technology	USB
Special Feature	Portable
Compatible Devices	Headphones
Memory Storage Capacity	Supports up to 64 GB (TF card not included)
Supported Standards	MP3 (and other common audio/video/image/text formats)
Battery Life	Up to 80 hours (standby time)
Manufacturer	Annadue
Country of Origin	China

SAFETY INFORMATION

- Do not expose the device to water or excessive moisture.
- Avoid extreme temperatures, direct sunlight, and dusty environments.
- Do not attempt to disassemble or repair the device yourself. This may void the warranty and cause damage.
- Keep out of reach of small children due to small parts.
- Use only the provided USB cable for charging.
- Listen to audio at moderate volumes to prevent hearing damage.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.