

[Manuals.plus](#) /

› [Hangrui](#) /

› Hangrui Instant Camera for Kids Model ABS-680 User Manual

Hangrui ABS-680

Hangrui Instant Camera for Kids Model ABS-680 User Manual

Model: ABS-680 | Brand: Hangrui

1. INTRODUCTION

The Hangrui Instant Camera for Kids Model ABS-680 is designed to provide children with an engaging and creative photography experience. This digital camera features instant thermal printing, allowing users to print black and white photos immediately. It also supports 1080P HD video recording, 12-megapixel still images, and includes various fun features like photo frames, filters, and built-in games. This manual provides detailed instructions for the safe and effective use of your camera.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1x Hangrui Instant Camera for Kids
- 1x USB Charging Cable
- 2x Lanyards
- 1x User Manual
- 1x 32GB MicroSD Card
- 1x Card Reader
- 3x Rolls of Printing Paper
- 5x Colored Pens
- 1x Sheet of Stickers



This image shows all items included in the Hangrui Instant Camera for Kids package: the pink instant camera, five colored pens, three rolls of printing paper, a USB charging cable, a 32GB SD card, a card reader, a lanyard, a user manual, and a sheet of stickers.

3. PRODUCT OVERVIEW

The Hangrui Instant Camera features a compact design with a 2.0-inch IPS screen for easy viewing and navigation. It integrates various functions including photo capture, video recording, instant thermal printing, and entertainment options like puzzle games and a music player. The camera is equipped with a built-in rechargeable battery for extended use.



This image displays the Hangrui Instant Camera for Kids, highlighting its key features such as a 2.0-inch IPS screen, 1080P video recording, instant photo printing, graffiti DIY, multi-funny frames, cyclic record, time-lapse, burst recording, puzzle games, and music playback. The camera is shown in a pink color with dimensions indicated.

4. SETUP

4.1 Charging the Camera

Before first use, fully charge the camera. When the camera indicates that the battery is low, use the included USB charging cable to connect it to a 5V power adapter or a computer's USB port. Charging typically takes 2-3 hours.

4.2 Inserting the MicroSD Card

Locate the MicroSD card slot on the camera. Insert the provided 32GB MicroSD card into the slot until it clicks into place. This card is essential for storing photos and videos. Ensure the camera is powered off before inserting or removing the card.

4.3 Loading Printing Paper

Open the printing paper compartment on the camera. Insert a roll of thermal printing paper, ensuring the paper feeds correctly through the designated slot. Close the compartment securely. The camera uses inkless thermal printing technology.

5. OPERATING INSTRUCTIONS

5.1 Taking Photos

Turn on the camera. Frame your shot using the 2.0-inch IPS screen. Press the shutter button to capture a 12-megapixel photo. The camera also supports timed photos.

5.2 Recording Videos

Switch to video recording mode. Press the record button to start and stop recording 1080P HD videos. The camera supports cyclic recording.



This image demonstrates the video recording and burst recording capabilities of the Hangrui Instant Camera. One section shows a family recording a video, while another section illustrates a sequence of three burst photos capturing a baby's movement.

5.3 Instant Printing

After taking a photo, you can switch between "Print Mode" or "Photo Capture Mode" by pressing the "OK" button. In Print Mode, press the print button to instantly print your black and white photo. The camera offers gray print and dot print modes, along with 5 print density settings. Adjust the print density in the settings menu for optimal quality.

2 Print Modes & 5 Print Density

Press the print button, photo will be printing fast in a few seconds



This image illustrates the two print modes and five print density options available on the Hangrui Instant Camera. It shows how pressing the print button initiates fast printing and advises choosing a suitable print density in the settings menu to improve print quality. Examples of printed photos with different densities (0 to 4) are displayed.

5.4 Using Photo Frames and Filters

The camera includes 20 funny photo frames, 8 effects, and 6 filters to enhance your pictures. Navigate through the camera's menu to select and apply these creative options before or after taking a photo.

Fun Photo Frames



This image showcases various fun photo frames available on the Hangrui Instant Camera. Several examples of children's photos are displayed within different decorative frames, demonstrating the creative options for customizing pictures.

5.5 Burst Recording

Activate burst recording mode through the camera settings to capture a rapid sequence of photos, ideal for capturing fast-moving subjects.

5.6 Other Functions

The camera also features a music player, 4 puzzle games, auto turn-off, and a screen saver function. Explore the menu to access these additional features.



COLOR PEN DIY

Develop unlimited imagination

This image features a child happily coloring black and white instant prints from the Hangrui camera using the included colored pens. It highlights the DIY aspect and creative potential of the camera's output.

6. MAINTENANCE

- Keep the camera clean by wiping it with a soft, dry cloth.
- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Ensure the MicroSD card is properly ejected before removal to prevent data corruption.
- Do not expose the camera to splashing water as it is not waterproof.

7. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect the camera to a power source using the USB cable.
- **Cannot take photos/videos:** Check if the MicroSD card is inserted correctly and has sufficient storage space.
- **Printing issues:** Verify that printing paper is loaded correctly and that the paper compartment is closed. Check print density settings.
- **Poor print quality:** Adjust the print density setting in the camera menu. Ensure the thermal paper is not expired or

damaged.

- **Camera unresponsive:** Try restarting the camera. If the issue persists, allow the battery to fully discharge and then recharge it.

8. SPECIFICATIONS

Model Number	ABS-680
Brand	Hangrui
Display Screen	2.0 inch IPS
Photo Resolution	12 MP (Effective Still Resolution)
Video Resolution	1080P HD (FHD 1080p)
Battery Capacity	1000 mAh Lithium-Ion
Charging Time	2-3 hours
Storage	Supports up to 32GB MicroSD card (32GB included)
Printing Technology	Inkless Thermal Printing
Connectivity	USB
Item Weight	0.03 Kilograms

9. SAFETY INFORMATION

- This camera is an electronic product and is not waterproof. Avoid exposing it to water or moisture.
- Do not attempt to disassemble the camera yourself, as this may cause damage or injury.
- Avoid dropping, hitting, or squeezing the camera to prevent damage to internal electronic components.
- Keep the camera away from extreme heat sources or open flames.
- Supervise young children during use to ensure proper handling and safety.

10. SUPPORT

If you have any questions, encounter issues, or require assistance with your Hangrui Instant Camera for Kids Model ABS-680, please do not hesitate to contact our customer support. We are committed to providing solutions and support for your product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question