

Candy CHCS 514EW

Candy CHCS 514EW Combined Refrigerator User Manual

Model: CHCS 514EW (34004841) | Brand: Candy

IMPORTANT SAFETY INFORMATION

Please read this manual carefully before using your appliance and keep it for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded power outlet with the correct voltage (220 Volts). Do not use extension cords or adapters.
- **Ventilation:** Maintain adequate ventilation around the appliance to prevent overheating. Do not block any ventilation openings.
- **Handling:** The appliance is heavy (48 kg). Use caution and proper lifting techniques when moving it.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **Children Safety:** Keep children away from the appliance, especially when the door is open.

PRODUCT OVERVIEW

The Candy CHCS 514EW is a freestanding combined refrigerator, designed with the refrigerator compartment located above the freezer compartment. This configuration offers convenient access to frequently used items in the refrigerator while providing ample storage for frozen goods.

Key Components

- **Refrigerator Compartment:** Located at the top, featuring glass shelves and a crisper drawer for fresh produce.
- **Freezer Compartment:** Located at the bottom, equipped with multiple drawers for organized frozen food storage.
- **Door Bins:** Adjustable bins on the inside of both doors for bottles, jars, and smaller items.



This image shows the front of the Candy CHCS 514EW combined refrigerator, featuring its two-door design with the refrigerator compartment on top and the freezer compartment below, in a clean white finish.



ENERG



Candy

CHCS 514EW



205 kWh/annum



69 L



138 L



40 dB

AB**C**D

2019/2016

This image displays the interior of the Candy CHCS 514EW refrigerator, showing the spacious refrigerator compartment with glass shelves and a crisper drawer, and the freezer compartment with multiple drawers.

SETUP AND INSTALLATION

Unpacking

- Remove all packaging materials, including protective films and tapes.
- Inspect the appliance for any transit damage. Report any damage to your retailer immediately.

Placement

- Place the refrigerator on a firm, level surface. Adjust the leveling feet if necessary to ensure stability.
- Allow sufficient space around the appliance for proper air circulation (at least 10 cm at the back and sides, and 30 cm above).
- Avoid placing the appliance near heat sources (e.g., ovens, radiators) or in direct sunlight.

The appliance dimensions are approximately 151 cm (height) x 55 cm (width) x 58 cm (depth). Ensure your chosen location accommodates these measurements with adequate clearance.

Electrical Connection

- Plug the appliance into a dedicated 220 Volt, 50 Hz, AC power outlet.
- Ensure the power cord is not pinched or damaged.

First Use

- Clean the interior of the appliance with a damp cloth and mild detergent.
- After plugging in, allow the appliance to operate for at least 2-3 hours before loading food, to ensure it reaches the correct temperature.

OPERATING INSTRUCTIONS

Temperature Control

The refrigerator and freezer temperatures are controlled by a single thermostat. Adjust the dial inside the refrigerator compartment to set the desired cooling level. Higher numbers typically indicate colder temperatures.

- **Recommended Setting:** For general use, a medium setting is usually sufficient.
- **Adjusting:** Turn the thermostat dial clockwise for colder temperatures and counter-clockwise for warmer temperatures.

Low Frost Technology

This appliance features Low Frost technology in the freezer compartment. This system significantly reduces frost build-up by up to 20% compared to standard direct cooling freezers, minimizing the need for frequent manual defrosting and improving energy efficiency.

Food Storage Guidelines

- **Refrigerator:** Store fresh foods, dairy products, and beverages. Use the crisper drawer for fruits and vegetables.
- **Freezer:** Store pre-packaged frozen foods and items for long-term preservation. Ensure food is properly sealed to prevent freezer burn.
- Do not place hot food directly into the refrigerator or freezer. Allow it to cool down first.

MAINTENANCE

Cleaning

- **Interior:** Clean regularly with a solution of warm water and mild detergent. Rinse and dry thoroughly. Remove shelves and drawers for easier cleaning.
- **Exterior:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Door Seals:** Clean door seals regularly to ensure a tight seal and prevent energy loss.
- **Condenser Coils:** Periodically clean the condenser coils at the back of the appliance (if accessible) to maintain efficiency. Unplug the appliance before cleaning.

Defrosting

The refrigerator compartment features an automatic defrost system. Frost that forms on the back wall will melt periodically and drain away.

For the freezer compartment, thanks to Low Frost technology, manual defrosting is required less frequently. When the frost layer reaches about 3-5 mm thickness, it is recommended to defrost manually. To do so:

1. Unplug the appliance.
2. Remove all food items and place them in a cool place.
3. Leave the freezer door open to allow frost to melt naturally. Place towels at the bottom to absorb water.
4. Once defrosted, clean and dry the interior thoroughly before plugging the appliance back in and returning food.

Power Outage

- During a power outage, keep the doors closed to maintain the internal temperature for as long as possible.
- Avoid opening the doors unnecessarily.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply.	Check if the power plug is properly inserted and the circuit breaker is not tripped.
Appliance is not cooling sufficiently.	Door not closed properly; thermostat setting too high; excessive food load; poor ventilation.	Ensure door is sealed; adjust thermostat to a colder setting; do not overload; ensure adequate space around appliance.
Excessive noise.	Appliance is not level; objects touching the back wall.	Adjust leveling feet; ensure nothing is touching the appliance.
Water on the floor.	Defrost drain blocked or drip tray overflowing.	Clear the drain hole; empty and reposition the drip tray.

TECHNICAL SPECIFICATIONS

Feature	Value
Brand	Candy

Feature	Value
Model	CHCS 514EW (34004841)
Product Dimensions (D x W x H)	58 x 55 x 151 cm
Weight	48 kg
Total Capacity	207 Liters
Refrigerator Capacity	138 Liters
Freezer Capacity	69 Liters
Annual Energy Consumption	205 kWh/year
Energy Efficiency Class	E
Noise Level	40 dB
Installation Type	Freestanding
Number of Doors	2
Defrost System	Automatic (Refrigerator), Low Frost (Freezer)
Voltage	220 Volts
Number of Shelves	3
Number of Drawers	4
Door Orientation	Right
Door Material	Glass
Date of First Availability	25 May 2021

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2016 with regard to energy labelling of refrigerating appliances

Supplier's name or trade mark: Candy

Supplier's address: Candy Hoover Group contact, Via Comolli 16, 20861 Brugherio MB, IT

Model identifier: CHCS 514EW

Type of refrigerating appliance:

Low-noise appliance:	No	Design type:	freestanding
Wine storage appliance:	No	Other refrigerating appliance:	Yes

General product parameters:

Parameter		Value	Parameter	Value
Overall dimensions (millimetre)	Height	1 510	Total volume (dm ³ or l)	207
	Width	550		
	Depth	580		
EEI		100	Energy efficiency class	E
Airborne acoustical noise emissions (dB(A) re 1 pW)		40	Airborne acoustical noise emission class	C
Annual energy consumption (kWh/a)		205	Climate class:	temperate
Minimum ambient temperature (°C), for which the refrigerating appliance is suitable		16	Maximum ambient temperature (°C), for which the refrigerating appliance is suitable	32
Winter setting		No		

Compartment Parameters:

Compartment parameters and values					
Compartment type		Compartment Volume (dm ³ or l)	Recommended temperature setting for optimised food storage (°C) These settings shall not contradict the storage conditions set out in Annex IV, Table 3	Freezing capacity (kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)
Pantry	No	-	-	-	-

This image displays the EU energy label for the Candy CHCS 514EW refrigerator, indicating its Class E energy efficiency, 205 kWh/annum energy consumption, 40 dB noise level, 69 liters freezer capacity, and 138 liters refrigerator capacity.




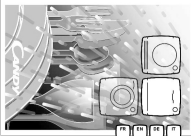
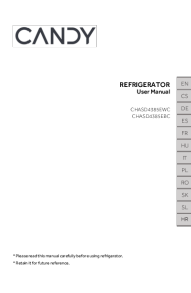
For more detailed product information, refer to the [EPREL Product Information Sheet](#).

WARRANTY AND SUPPORT

Your Candy CHCS 514EW refrigerator comes with a standard manufacturer's warranty. Please refer to the warranty

card included with your purchase for specific terms and conditions, including warranty period and coverage details. For technical assistance, spare parts, or to schedule a service appointment, please contact Candy customer support. Contact information can typically be found on the manufacturer's official website or on your purchase documentation. When contacting support, please have your model number (CHCS 514EW) and serial number ready to expedite the process.

Related Documents - CHCS 514EW

	<p>Manual de Instrucciones Candy Simply-Fi: Frigorífico y Congelador</p> <p>Manual completo de usuario para frigoríficos y congeladores Candy con tecnología Smart Touch y conectividad Wi-Fi. Incluye información de seguridad, instalación, funcionamiento, mantenimiento, solución de problemas y ahorro energético.</p>
	<p>Candy 18M R54 DC CLASS E Basic Refrigerator User Manual</p> <p>User manual for the Candy 18M R54 DC CLASS E Basic refrigerator, covering product description, usage, troubleshooting, and app connectivity with the hOn app.</p>
	<p>Instrukcja Obsługi Lodówki Candy z Funkcjami Smart Touch i Wi-Fi</p> <p>Szczegółowy przewodnik użytkownika dla lodówki Candy, zawierający informacje o bezpieczeństwie, instalacji, obsłudze, rozwiązywaniu problemów oraz funkcjach Smart Touch i Wi-Fi.</p>
	<p>Manuale d'Uso e Manutenzione Lavastoviglie Candy</p> <p>Guida completa per l'utilizzo sicuro ed efficiente della tua lavastoviglie Candy. Include istruzioni su installazione, programmi, manutenzione e risoluzione problemi.</p>
	<p>Candy CHASD4385EWC/EBC Refrigerator User Manual</p> <p>Comprehensive user manual for Candy CHASD4385EWC and CHASD4385EBC refrigerators, covering installation, operation, maintenance, safety, and troubleshooting. Learn how to use your Candy refrigerator efficiently and safely.</p>



USER INSTRUCTIONS	EN	1
NOTICE D'EMPLOI ET D'INSTALLATION	FR	1
NOTICE D'EMPLOI ET D'INSTALLATION	FR	1
BEWEGUNGSANLEITUNG	DE	1
OVEN	NL	1

[Candy Oven User Manual: Comprehensive Guide to Operation and Maintenance](#)

Official user manual for Candy ovens, providing detailed instructions on safety, installation, operation, cleaning, maintenance, and troubleshooting. Available in English, French, German, and Dutch.