

[Manuals.plus](#) /

› [ENWShop](#) /

› ENWShop Basic IR Replacement Remote for TCL Android TV & TCL Google TV Without Voice Command User Manual

ENWShop Basic IR No Voice

ENWShop Basic IR Replacement Remote for TCL Android TV & TCL Google TV

Model: Basic IR No Voice

Brand: ENWShop

1. INTRODUCTION AND OVERVIEW

This manual provides instructions for the ENWShop Basic IR Replacement Remote, designed for use with TCL Android TV and TCL Google TV models. This remote operates using infrared (IR) technology and does not support voice commands.

Key features include:

- Direct replacement for original TCL Android TV and TCL Google TV remotes.
- No setup or programming required; ready to use with compatible TVs.
- Standard IR functionality for basic TV control.



Image 1.1: Front view of the ENWSop Basic IR Replacement Remote. The remote is black with various gray and black buttons, including power, navigation, volume, channel, and dedicated Netflix and YouTube buttons.

2. SETUP: BATTERY INSTALLATION

The remote requires two (2) AAA batteries for operation. No additional setup or programming is needed; simply insert the batteries, and the remote is ready to use.

1. Locate the battery compartment on the backside of the remote control.
2. To open the battery door, press down firmly on the battery compartment cover and slide it downwards.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Always use new batteries and dispose of old batteries responsibly.

3. OPERATING INSTRUCTIONS

This remote provides standard control functions for your TCL Android TV or TCL Google TV. Point the remote directly at your television's IR receiver for optimal performance.

Button Functions:

Button Icon/Label	Function
(Power)	Turns the TV On or Off.
⚙️ (Gear/Settings)	Accesses the TV's settings menu.
🏠 (Home)	Returns to the TV's home screen or main menu.
≡ (Menu/List)	Opens the TV's menu or displays a list of options.
▲ ▼ ◀ ▶ (Navigation Arrows)	Navigates through menus and options (Up, Down, Left, Right).
OK	Confirms selections or enters a menu item.
← (Back)	Returns to the previous screen or menu.
↶ (Input/Source)	Switches between different input sources (HDMI, AV, etc.).
+ / - (Volume)	Adjusts the volume level up or down.
(Mute)	Mutes or unmutes the TV audio.
CH+ / CH- (Channel)	Changes the TV channel up or down.
●●●● (Colored Buttons)	Functions vary depending on the TV model or application (e.g., teletext, specific app functions).
NETFLIX	Direct access button for the Netflix application.
YouTube	Direct access button for the YouTube application.

This remote does not support voice commands.

4. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.

- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. It is recommended to replace both batteries simultaneously.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote. Store in a cool, dry place.

5. TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding.	• Batteries are dead or inserted incorrectly. Replace batteries and ensure correct polarity. • Obstruction between remote and TV's IR sensor. Ensure a clear line of sight. • Remote is too far from the TV. Move closer to the TV.
Specific buttons not working.	• Button may be stuck. Gently press and release the button multiple times. • Ensure the remote is pointed directly at the TV.
TV not turning on/off.	• Verify the TV is plugged into a power source. • Check if the TV's power indicator light is on.

6. SPECIFICATIONS

- **Product Dimensions:** 5 x 2 x 0.4 inches
- **Item Weight:** 1.44 ounces
- **Batteries:** 2 AAA batteries (required, not included)
- **Color:** Black
- **Max Number of Supported Devices:** 1 (Television)
- **Compatible Devices:** TCL Android TV, TCL Google TV
- **Special Feature:** Ergonomic design
- **Manufacturer:** ENWShop
- **Date First Available:** December 30, 2021

7. WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct manufacturer support for this product is not provided in the available documentation. For any issues or inquiries, please refer to the retailer where the product was purchased.

8. IMPORTANT LEGAL DISCLAIMER

Warning: This item is not made by TCL nor endorsed by TCL.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question