

[Manuals.plus](#) /

> [AT&T](#) /

> AT&T CL82319 DECT 6.0 3-Handset Cordless Phone for Home with Answering Machine, Call Blocking, Caller ID Announcer, Intercom and Long Range, Black 3 Handsets Cordless Handsets

AT&T CL82319

AT&T CL82319 DECT 6.0 Cordless Phone System User Manual

Model: CL82319

Brand: AT&T

INTRODUCTION

The AT&T CL82319 DECT 6.0 3-Handset Cordless Phone System provides reliable communication with advanced features for your home or office. This system includes a digital answering machine, smart call blocking capabilities, caller ID announcement, and an intercom function, designed for ease of use and enhanced connectivity.



Image: The AT&T CL82319 cordless phone system with one base unit and two additional handsets.

What's in the Box

Verify that all items are included in your package:

- Base unit
- 3 cordless handsets
- 2 chargers
- 3 AC adaptors
- 3 battery packs
- Telephone line cord
- Quick start guide
- Wall mount bracket

SETUP

Follow these steps to set up your new phone system:

1. **Connect the Base Unit:** Plug the telephone line cord into the base unit and a telephone wall jack. Connect the AC adapter to the base unit and a power outlet.



Image: The main base unit shown in a wall-mounted configuration, highlighting its compact design.

2. **Install Handset Batteries:** Open the battery compartment on each handset and insert the provided battery pack. Close the compartment cover.
3. **Charge Handsets:** Place each handset in its respective charger or the base unit. Allow at least 10 hours for the batteries to fully charge before initial use. The CHARGE light on the handset will illuminate.
4. **Positioning:** For optimal range and clarity, place the base unit in a central location away from other electronic devices that may cause interference. The system offers unsurpassed range.



Unsurpassed range

Image: A diagram illustrating the extensive range of the cordless phone system within a multi-room environment.

5. **Expandability:** This system is expandable up to 12 handsets, allowing you to place phones in various rooms as needed.



Image: An illustration showing the base unit and multiple additional handsets, demonstrating the system's expandability.

OPERATING INSTRUCTIONS


Making and Receiving Calls

- **To Make a Call:** Press **PHONE** or **SPEAKER**, then dial the number.
- **To Answer a Call:** Press **PHONE** or **SPEAKER** when the phone rings.
- **To End a Call:** Press **OFF** or place the handset in the charger.

Smart Call Blocker

The Smart Call Blocker feature helps filter unwanted calls. Robocalls are automatically blocked. You can also manually block numbers.

- **One-Touch Blocking:** During a call or after a call, press the **CALL BLOCK** button on the handset to add the number to the block list. The system can store up to 1,000 name and number entries.

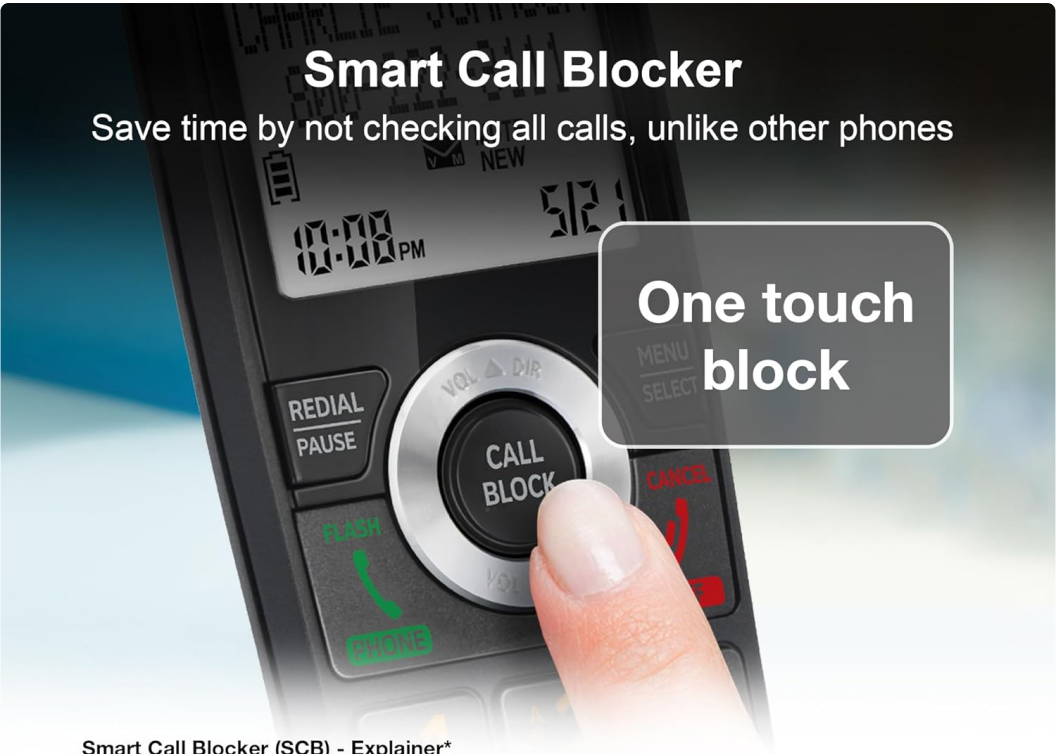

Smart Call Blocker

Save time by not checking all calls, unlike other phones

One touch
block

Smart Call Blocker (SCB) - Explainer*

Caller	SCB Action	CL82x19 Series
Address Book Calls, Star name List Calls	Call allowed	Ringing
Unknown Calls, Robo Calls	SCB instructions to caller	Rejected
Block List Calls	Call rejected	Rejected

* For more details refer product support documents

Image: A hand demonstrating the one-touch call block feature on the handset.



Image: An icon representing the 1000-entry capacity of the smart call block directory.

Digital Answering System

The integrated digital answering system records up to 22 minutes of messages, announcements, and memos.

- **Playback Messages:** Press **PLAY/STOP** on the base unit to listen to messages.
- **Record Announcement:** The system includes a voice-guide for easier setup and recording of your outgoing announcement.



Image: The base unit displaying the digital answering system controls and a voice guide prompt.

Caller ID Announce

The handset announces the name of the caller, allowing you to screen calls without looking at the display.



Image: An illustration depicting the caller ID announce feature, showing a speech bubble with "Mr. Johnson is calling..." next to the phone.

Handset Speakerphone

Engage in hands-free conversations with the simulated full-duplex speakerphone on each handset.

- **To Activate:** Press **SPEAKER** during a call.
- **To Deactivate:** Press **SPEAKER** again or lift the handset to switch to private mode.



Image: A woman using the simulated full-duplex handset speakerphone while preparing food in a kitchen.

Intercom (Push-to-Talk)

Use the intercom feature to communicate between handsets.

- **To Initiate:** Press **PTT** (Push-to-Talk) on the handset and select the desired handset to call.



Image: A hand pointing to the Push-to-Talk (PTT) button on the handset.

MAINTENANCE

- **Cleaning:** Clean the phone and base unit with a soft, damp cloth. Do not use cleaning sprays or harsh chemicals.
- **Battery Care:** For optimal battery life, fully charge handsets regularly. If the phone will not be used for an extended period, remove the batteries.
- **Storage:** Store the phone system in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you experience issues with your phone system, try the following solutions:

Problem	Solution
No dial tone	Ensure the telephone line cord is securely plugged into the base unit and the wall jack. Check if the AC adapter is properly connected.
Poor sound quality/static	Move the handset closer to the base unit. Avoid placing the base unit near other electronic devices (e.g., microwaves, Wi-Fi routers) that may cause interference.
Handset not charging	Ensure the handset is correctly seated in the charger. Clean the charging contacts on both the handset and charger with a dry cloth. Verify the charger's AC adapter is plugged in.

Problem	Solution
Answering system not recording	Check if the answering system is turned ON. Ensure there is sufficient recording time available (max 22 minutes).
Cannot block calls	Ensure the number is not already in your allowed list. Verify you are pressing the CALL BLOCK button correctly.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7 x 7 x 2.7 inches (Base Unit)
Item Weight	2.31 pounds
Model Number	CL82319
Batteries	3 Product Specific batteries required (included)
Telephone Type	Cordless
Answering System Type	Digital
Recording Capacity	22 minutes
Conference Call Capability	3-Way
Color	Black
Material	Plastic
Manufacturer	AT&T
Country of Origin	Malaysia

Dimensions

Base Unit

- A: Height 7.08 inches
- B: Width 3.54 inches
- C: Length 6.69 inches



Accessory Handset

- A: Height 7.30 inches
- B: Width 2.83 inches
- C: Length 3.00 inches



Image: Detailed dimensions for the base unit and accessory handset.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official AT&T product website or contact AT&T customer service. Keep your purchase receipt as proof of purchase.

Online resources may include FAQs, downloadable manuals, and software updates.

© 2024 AT&T. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question